



# The Rockbox Manual for Sansa e200 and e200R Series

**rockbox.org**  
June 18, 2009

# Rockbox

<http://www.rockbox.org/>  
Open Source Jukebox Firmware

Rockbox and this manual is the collaborative effort of the Rockbox team and its contributors. See the appendix for a complete list of contributors.

© 2003-2009 The Rockbox Team and its contributors, © 2004 Christi Alice Scarborough, © 2003 José Maria Garcia-Valdecasas Bernal & Peter Schlenker.

Version 3.3. Built using pdfL<sup>A</sup>T<sub>E</sub>X.

Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.2 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is included in the section entitled “GNU Free Documentation License”.

# Contents

<b>1</b>	<b>Introduction</b>	<b>10</b>
1.1	Welcome . . . . .	10
1.2	Getting more help . . . . .	10
1.3	Naming conventions and marks . . . . .	11
<b>2</b>	<b>Installation</b>	<b>12</b>
2.1	Before Starting . . . . .	12
2.2	Installing Rockbox . . . . .	12
2.2.1	Automated Installation . . . . .	13
2.2.2	Manual Installation . . . . .	14
2.2.3	Finishing the install . . . . .	16
2.2.4	Enabling Speech Support (optional) . . . . .	16
2.3	Running Rockbox . . . . .	17
2.4	Updating Rockbox . . . . .	17
2.5	Uninstalling Rockbox . . . . .	17
2.5.1	Automatic Uninstallation . . . . .	17
2.5.2	Manual Uninstallation . . . . .	17
2.6	Troubleshooting . . . . .	17
<b>3</b>	<b>Quick Start</b>	<b>19</b>
3.1	Basic Overview . . . . .	19
3.1.1	The player's controls . . . . .	19
3.1.2	Turning the player on and off . . . . .	20
3.1.3	Starting the original firmware . . . . .	20
3.1.4	Putting music on your player . . . . .	20
3.1.5	The first contact . . . . .	20
3.1.6	Basic controls . . . . .	21
3.1.7	Basic concepts . . . . .	21
3.2	Customising Rockbox . . . . .	21
3.3	Charging . . . . .	22
<b>4</b>	<b>Browsing and playing</b>	<b>23</b>
4.1	File Browser . . . . .	23
4.1.1	File Browser Controls . . . . .	24
4.1.2	Context Menu . . . . .	24
4.1.3	Virtual Keyboard . . . . .	26
4.2	Database . . . . .	27

4.2.1	Introduction	27
4.2.2	Initializing the Database	27
4.2.3	The Database Menu	27
4.2.4	Using the Database	28
4.3	While Playing Screen	29
4.3.1	WPS Key Controls	30
4.3.2	Peak Meter	31
4.3.3	The WPS Context Menu	31
4.4	Working with Playlists	34
4.4.1	Playlist terminology	34
4.4.2	Creating playlists	35
4.4.3	Adding music to playlists	36
4.4.4	Modifying playlists	37
4.4.5	Saving playlists	37
4.4.6	Loading saved playlists	38
4.4.7	Helpful Hints	38
<b>5</b>	<b>The Main Menu</b>	<b>39</b>
5.1	Introducing the Main Menu	39
5.2	Navigating the Main Menu	40
5.3	Recent Bookmarks	40
5.4	Files	41
5.5	Database	41
5.6	Now Playing/Resume Playback	41
5.7	Settings	41
5.7.1	Sound Settings	42
5.7.2	Playback Settings	42
5.7.3	General Settings	42
5.7.4	Theme Settings	42
5.7.5	Recording Settings	42
5.7.6	Manage Settings	42
5.8	Recording	43
5.8.1	While Recording Screen	43
5.9	FM Radio	44
5.10	Playlist	45
5.11	Plugins	46
5.12	System	46
5.13	Quick Screen	47
<b>6</b>	<b>Sound Settings</b>	<b>48</b>
6.1	Volume	48
6.2	Bass	48
6.3	Treble	49
6.4	Balance	49

6.5	Channels	49
6.6	Stereo Width	49
6.7	Crossfeed	50
6.8	Equalizer	51
6.9	Dithering	53
<b>7</b>	<b>Playback Settings</b>	<b>54</b>
7.1	Shuffle	54
7.2	Repeat	54
7.3	Play Selected First	55
7.4	Fast-Forward/Rewind	55
7.5	Fade on Stop/Pause	55
7.6	Party Mode	55
7.7	Crossfade	55
7.8	Replaygain	56
7.9	Track Skip Beep	57
7.10	Auto-Change Directory	57
7.11	Last.fm Log	57
7.12	Cuesheet Support	58
7.13	Skip Length	58
7.14	Prevent Track Skipping	58
<b>8</b>	<b>General Settings</b>	<b>59</b>
8.1	Playlist	59
8.2	File View	59
8.3	Database	61
8.4	Display	61
8.5	System	64
8.5.1	Start Screen	64
8.5.2	Disk	64
8.5.3	Idle Poweroff	64
8.5.4	Limits	64
8.5.5	Car Adapter Mode	65
8.5.6	Wheel Light Timeout	65
8.6	Bookmarking	65
8.7	Language	67
8.8	Voice	67
<b>9</b>	<b>Theme Settings</b>	<b>69</b>
<b>10</b>	<b>Recording Settings</b>	<b>71</b>
10.1	Format	71
10.2	Encoder Settings	71
10.3	Frequency	71

10.4 Source . . . . .	72
10.5 Channels . . . . .	72
10.6 Mono Mode . . . . .	72
10.7 File Split Options . . . . .	72
10.8 Prerecord Time . . . . .	72
10.9 Clear Recording Directory . . . . .	73
10.10 Clipping Light . . . . .	73
10.11 Trigger . . . . .	73
<b>11 Plugins</b>	<b>75</b>
11.1 Games . . . . .	75
11.1.1 Blackjack . . . . .	75
11.1.2 BrickMania . . . . .	76
11.1.3 Bubbles . . . . .	77
11.1.4 Chessbox . . . . .	78
11.1.5 Chopper . . . . .	79
11.1.6 Dice . . . . .	79
11.1.7 Doom . . . . .	80
11.1.8 Flipit . . . . .	82
11.1.9 Goban . . . . .	83
11.1.10 Invadrox . . . . .	87
11.1.11 Jewels . . . . .	87
11.1.12 MazezaM . . . . .	88
11.1.13 Minesweeper . . . . .	89
11.1.14 Pacbox . . . . .	90
11.1.15 Pegbox . . . . .	91
11.1.16 Pong . . . . .	92
11.1.17 Robotfindskitten . . . . .	93
11.1.18 Rockblox . . . . .	93
11.1.19 Rockblox1d . . . . .	94
11.1.20 Rocklife . . . . .	94
11.1.21 Sliding Puzzle . . . . .	95
11.1.22 Snake . . . . .	96
11.1.23 Snake 2 . . . . .	96
11.1.24 Sokoban . . . . .	97
11.1.25 Solitaire . . . . .	98
11.1.26 Spacerocks . . . . .	99
11.1.27 Star . . . . .	100
11.1.28 Sudoku . . . . .	101
11.1.29 Wormlet . . . . .	103
11.1.30 Xbox . . . . .	105
11.2 Demos . . . . .	106
11.2.1 Bounce . . . . .	106
11.2.2 Credits . . . . .	107

11.2.3	Cube . . . . .	107
11.2.4	Demystify . . . . .	108
11.2.5	Fire . . . . .	108
11.2.6	Logo . . . . .	109
11.2.7	Mandelbrot . . . . .	109
11.2.8	Mosaique . . . . .	110
11.2.9	Oscilloscope . . . . .	111
11.2.10	PictureFlow . . . . .	112
11.2.11	Plasma . . . . .	114
11.2.12	Snow . . . . .	114
11.2.13	Starfield . . . . .	115
11.2.14	VU meter . . . . .	115
11.3	Viewers . . . . .	116
11.3.1	Shortcuts . . . . .	116
11.3.2	Chip-8 Emulator . . . . .	117
11.3.3	JPEG viewer . . . . .	118
11.3.4	Lua scripting language . . . . .	119
11.3.5	Midiplay . . . . .	119
11.3.6	MPEG Player . . . . .	120
11.3.7	PPM viewer . . . . .	121
11.3.8	Rockboy . . . . .	122
11.3.9	Search . . . . .	123
11.3.10	Sort . . . . .	123
11.3.11	Text Viewer . . . . .	123
11.3.12	VBRfix . . . . .	125
11.3.13	ZXBox . . . . .	125
11.4	Applications . . . . .	127
11.4.1	Battery Benchmark . . . . .	127
11.4.2	Calculator . . . . .	128
11.4.3	Calendar . . . . .	129
11.4.4	Chess Clock . . . . .	130
11.4.5	Clock . . . . .	131
11.4.6	Disk Tidy . . . . .	133
11.4.7	Keybox . . . . .	134
11.4.8	Lamp . . . . .	135
11.4.9	md5sum . . . . .	135
11.4.10	Metronome . . . . .	135
11.4.11	Random Folder Advance Configuration . . . . .	135
11.4.12	Rockpaint . . . . .	136
11.4.13	Stats . . . . .	139
11.4.14	Stopwatch . . . . .	139
11.4.15	Text Editor . . . . .	140

## 12 Advanced Topics

**141**

12.1	Customising the User Interface . . . . .	141
12.1.1	Getting Extras . . . . .	141
12.1.2	Loading Fonts . . . . .	141
12.1.3	Loading Languages . . . . .	141
12.1.4	Changing Filetype Colours . . . . .	141
12.1.5	Loading Backdrops . . . . .	143
12.2	Configuring the WPS . . . . .	143
12.2.1	WPS – General Info . . . . .	143
12.2.2	WPS – Build Your Own . . . . .	143
12.3	Managing Rockbox Settings . . . . .	146
12.3.1	Introduction to .cfg Files. . . . .	146
12.3.2	Specifications for .cfg Files. . . . .	147
12.3.3	The MANAGE SETTINGS menu . . . . .	148
12.4	Firmware Loading . . . . .	148
12.4.1	Using ROLO (Rockbox Loader) . . . . .	148
<b>A</b>	<b>File formats</b>	<b>149</b>
A.1	Supported file formats . . . . .	150
A.2	Supported audio formats . . . . .	151
<b>B</b>	<b>WPS Tags</b>	<b>152</b>
B.1	Status Bar . . . . .	152
B.2	Information from the track tags . . . . .	152
B.3	Power Related Information . . . . .	153
B.4	Information about the file . . . . .	153
B.5	Playlist/Song Info . . . . .	154
B.6	Runtime Database . . . . .	154
B.7	Sound (DSP) settings . . . . .	154
B.8	Virtual LED . . . . .	155
B.9	Repeat Mode . . . . .	155
B.10	Playback Mode Tags . . . . .	155
B.11	Changing Volume . . . . .	155
B.12	Settings . . . . .	156
B.13	Images . . . . .	157
B.14	Album Art . . . . .	158
B.15	Alignment . . . . .	159
B.16	Conditional Tags . . . . .	159
B.17	Subline Tags . . . . .	159
B.18	Time and Date . . . . .	160
B.19	Other Tags . . . . .	161
<b>C</b>	<b>Album Art</b>	<b>162</b>
C.1	Introduction . . . . .	162
C.2	Limitations . . . . .	162



C.3 Where to put album art . . . . .	162
<b>D Config file options</b>	<b>164</b>
<b>E Menu Overview</b>	<b>169</b>
<b>F User feedback</b>	<b>170</b>
F.1 Bug reports . . . . .	170
F.1.1 Rules for submitting new bug reports . . . . .	170
F.2 Feature ideas . . . . .	170
F.2.1 Rules for submitting a new feature idea . . . . .	170
F.2.2 Features we will not implement . . . . .	171
<b>G Changelog</b>	<b>172</b>
G.1 What is new since v3.0? . . . . .	172
G.1.1 New features . . . . .	172
G.1.2 Enhancements . . . . .	172
G.2 What is new since v2.5? . . . . .	172
G.2.1 New features . . . . .	172
G.2.2 Enhancements . . . . .	174
G.2.3 Bug fixes . . . . .	175
<b>H Credits</b>	<b>176</b>
<b>I Licenses</b>	<b>179</b>
I.1 GNU Free Documentation License . . . . .	179
I.2 The GNU General Public License . . . . .	187

# 1 Introduction

## 1.1 Welcome

This is the manual for Rockbox. Rockbox is an open source firmware replacement for a growing number of digital audio players. Rockbox aims to be considerably more functional and efficient than your device's stock firmware while remaining easy to use and customisable. Rockbox is written by users, for users. Not only is it free to use, it is also released under the GNU General Public License (GPL), which means that it will always remain free both to use and to change.

Rockbox has been in development since 2001, and receives new features, tweaks and fixes each day to provide you with the best possible experience on your digital audio player. A major goal of Rockbox is to be simple and easy to use, yet remain very customisable and configurable. We believe that you should never need to go through a series of menus for an action you perform frequently. We also believe that you should be able to configure almost anything about Rockbox you could want, pertaining to functionality. Another top priority of Rockbox is audio playback quality – Rockbox, for most models, includes a wider range of sound settings than the device's original firmware. A lot of work has been put into making Rockbox sound the best it can, and improvements are constantly being made. All models have access to a large number of plugins, including many games, applications, and graphical “demos”. You can load different configurations quickly for different purposes (e.g. a large font for in your car, different sound settings for at home). Rockbox features a very wide range of languages, and all supported models also have the ability to talk to you – menus can be voiced and filenames spelled out or spoken.

## 1.2 Getting more help

This manual is intended to be a comprehensive introduction to the Rockbox firmware. There is, however, more help available. The Rockbox website at <http://www.rockbox.org/> contains very extensive documentation and guides written by members of the Rockbox community and this should be your first port of call when looking for further help.

If you cannot find the information you are searching for on the Rockbox website there are a number of support channels you should have a look at. You can try the Rockbox forums located at <http://forums.rockbox.org/>. The mailing lists are another option, and can be found at <http://www.rockbox.org/mail/>. From that page you can subscribe to the lists and browse the archives. To search the list archives simply use the search field that is located on the left side of the website. Furthermore, you can ask on IRC. The

main channel for Rockbox is `#rockbox` on [irc://irc.freenode.net](http://irc://irc.freenode.net). Many helpful developers and users are usually around. Just join and ask your question (don't ask to ask!) – if someone knows the answer you'll usually get an answer pretty quickly. More information including IRC logs can be found at <http://www.rockbox.org/irc/>. We also have a web client so that you can join the Rockbox IRC channel without needing to install additional software onto your computer.

If you think you have found a bug please make sure it actually is a bug and is still present in the most recent version of Rockbox. You should try to confirm that by using the above mentioned support channels first. After that you can submit that issue to our tracker. Refer to section [F](#) (page 170) for details on how to use the tracker.

## 1.3 Naming conventions and marks

We have some conventions (especially for naming) that are intended to be consistent throughout this manual.

Manufacturer and product names are formatted in accordance with the standard rules of English grammar, e.g. “Sansa playback is currently unsupported”. Manufacturer and model names are proper nouns, and thus are written beginning with a capital letter.

This manual has some parts that are marked with icons on the margin to help you finding important parts or parts you could skip. The following icons are used:

**Note:** This indicates a note. A note starts always with the text “Note”. In order to make finding notes easier each one is accompanied by an icon in the margin as here. Notes are used to mark useful information that may help you to get the most out of Rockbox.





**Warning:** This is a warning. In contrast to notes mentioned above, a warning should be taken more seriously. Whereas ignoring notes will not cause any serious damage, ignoring warnings *could* cause serious damage to your player. You really should read the warnings, especially if you are new to Rockbox.



This icon marks a section that is intended especially for the blind and visually impaired. As they cannot read the manual in the same way sighted people do we have added some additional descriptions. If you are not blind or visually impaired you can probably completely skip these blocks. To make this easier, there is an icon shown in the margin on the right.



Links to the wiki are abbreviated by the name of the wiki page. Those names are still linked so you can simply follow them like any other link in this manual. If you want to access a wiki page manually go to  <http://www.rockbox.org/wiki/> and type the page name in the “Go” box at the top of the page. Links to wiki pages are also indicated by the symbol  in front of the page name.

## 2 Installation

Installing Rockbox is generally a quick and easy procedure. However before beginning there are a few things it is important to know.

### 2.1 Before Starting

**NOTE:** These instructions will not work on the “Rhapsody” version of the E200 series (also known as E200R). Please follow the instructions at <http://www.rockbox.org/twiki/bin/view/Main/SansaE200RInstallation>.

**Supported hardware versions.** The e200 and e200R Series is available in multiple versions, not all of which run Rockbox. Rockbox doesn’t run on the newer v2 models. They can be identified by checking the Sandisk firmware version number under Settings → Info. The v1 firmware is named 01.xx.xx, while the v2 firmware begins with 03.

**USB connection.** To transfer Rockbox to your player you need to connect it to your computer. For manual installation/uninstallation, or should autodetection fail during automatic installation, you need to know where to access the player. On Windows this means you need to know the drive letter associated with the player. On Linux you need to know the mount point of your player. On Mac OS X you need to know the volume name of your player.

The following steps require you to change the setting in SETTINGS → USB MODE to MSC from within the original firmware.

**Warning:** Never extract files to your player while it is in recovery mode.



**Administrator/Root rights.** Installing the bootloader portion of Rockbox requires you to have administrative (Windows) or root (Linux) rights. Consequently when doing either the automatic or manual bootloader install, please ensure that you are logged in with an administrator account or have root rights.

### 2.2 Installing Rockbox

There are two ways to install Rockbox: automated and manual. The automated way is the preferred method of installing Rockbox for the majority of people. Rockbox Utility is a graphical application that does almost everything for you. However, should you

encounter a problem, then the manual way is still available to you.

There are three separate components, two of which need to be installed in order to run Rockbox:

**The Sansa bootloader.** The Sansa bootloader is the program that tells your player how to load and start the original firmware. It is also responsible for any emergency, recovery, or disk modes on your player. This bootloader is stored in special flash memory in your Sansa and comes factory-installed. It is not necessary to modify this in order to install Rockbox.

**The Rockbox bootloader.** The Rockbox bootloader is loaded from disk by the Sansa bootloader. It is responsible for loading the Rockbox firmware and for providing the dual boot function. It directly replaces the Sansa firmware in the player's boot sequence.

**The Rockbox firmware.** Similar to the Sansa firmware, most of the Rockbox code is contained in a "build" that resides on your player's drive. This makes it easy to update Rockbox. The build consists of a directory called `.rockbox` which contains all of the Rockbox files, and is located in the root of your player's drive.

Apart from the required parts there are some addons you might be interested in installing.

**Fonts.** Rockbox can load custom fonts. The fonts are distributed as a separate package and thus need to be installed separately. They are not required to run Rockbox itself but a lot of themes require the fonts package to be installed.

**Themes.** The appearance of Rockbox can be customised by themes. Depending on your taste you might want to install additional themes to change the look of Rockbox.

### 2.2.1 Automated Installation

To automatically install Rockbox, download the official installer and housekeeping tool ROCKBOX UTILITY. It allows you to:

- Automatically install all needed components for using Rockbox ("Minimal Installation").
- Automatically install all suggested components ("Complete Installation").
- Selectively install optional components.
- Install additional fonts and themes.
- Install voice files and generate talk clips.
- Uninstall all components you installed using Rockbox Utility.

Prebuilt binaries for Windows, Linux and Mac OS X are available at the  [RockboxUtility](#) wiki page.

When first starting ROCKBOX UTILITY run “Autodetect”, found in the configuration dialog (File → Configure). Autodetection can detect most player types. If autodetection fails or is unable to detect the mountpoint, make sure to enter the correct values. The mountpoint indicates the location of the player in your filesystem. On Windows, this is the drive letter the player gets assigned, on other systems this is a path in the filesystem.


### Choosing a Rockbox version

There are three different versions of Rockbox available from the Rockbox website: Release version, current build and archived daily build. You need to decide which one you want to install and get the appropriate version for your player. If you select either “Minimal Installation” or “Complete Installation” from the “Quick Start” tab, then Rockbox Utility will automatically install the release version of Rockbox. Using the “Installation” tab will allow you to select which version you wish to install.

**Release.** The release version is the latest stable release, free of known critical bugs. For a manual install, the current stable release of Rockbox is available at <http://www.rockbox.org/download/>.

**Current Build.** The current build is built at each source code change to the Rockbox SVN repository and represents the current state of Rockbox development. This means that the build could contain bugs but most of the time is safe to use. For a manual install, you can download the current build from <http://build.rockbox.org/>.

**Archived Build.** In addition to the release version and the current build, there is also an archive of daily builds available for download. These are built once a day from the latest source code in the SVN repository. For a manual install, you can download archived builds from <http://www.rockbox.org/daily.shtml>.

**Note:** Because current and archived builds are development versions that change frequently, they may behave differently than described in this manual, or they may introduce new (and potentially annoying) bugs. Unless you wish to try the latest and greatest features at the price of possibly greater instability, or you wish to help with development, you should stick with the release. 

Please now go to section [2.2.3](#) (page [16](#)) to complete the installation procedure.

### 2.2.2 Manual Installation

The manual installation method is still available to you, should you need or desire it by following the instructions below. If you have used Rockbox Utility to install Rockbox,

then you do not need to follow the next section and can skip straight to section 2.2.3 (page 16)

### Installing the firmware

1. Download your chosen version of Rockbox from the links in the previous section.
2. Connect your player to the computer via USB as described in the manual that came with your player.
3. Take the `.zip` file that you downloaded and use the “Extract all” command of your unzip program to extract the files onto your player.

**Note:** The entire contents of the `.zip` file should be extracted directly to the root of your player’s drive. Do not try to create a separate directory on your player for the Rockbox files! The `.zip` file already contains the internal structure that Rockbox needs.



If the contents of the `.zip` file are extracted correctly, you will have a directory called `.rockbox`, which contains all the files needed by Rockbox, in the main directory of your player’s drive.

### Installing the bootloader

#### Bootloader installation from Windows

1. Download `sansapatcher.exe` from <http://download.rockbox.org/bootloader/sandisk-sansa/sansapatcher/win32/sansapatcher.exe> and run it whilst logged in with an administrator account.
2. If all has gone well, you should see some information displayed about your e200 and e200R Series and a message asking you if you wish to install the Rockbox bootloader. Press `i` followed by `ENTER`, and `sansapatcher` will now install the bootloader. After a short time you should see the message “[INFO] Bootloader installed successfully.” Press `ENTER` again to exit `sansapatcher`.

#### Bootloader installation from Mac OS X


1. Attach your player to your Mac and wait for its icon to appear in Finder.
2. Download and open `sansa.dmg` from <http://download.rockbox.org/bootloader/sandisk-sansa/sansapatcher/macosx/sansapatcher.dmg> and then double-click on the `sansapatcher` icon inside.
3. If all has gone well, you should see some information displayed about your player and a message asking you if you wish to install the Rockbox bootloader. Press `i` followed by `ENTER`, and `sansapatcher` will now unmount your player and install the bootloader. After a short time you should see the message “[INFO] Bootloader

installed successfully.” Press ENTER again to exit sansapatcher and then quit the Terminal application.

### Bootloader installation from Linux

1. Download sansapatcher from <http://download.rockbox.org/bootloader/sandisk-sansa/sansapatcher/linux32x86/sansapatcher> (32-bit x86 binary) or <http://download.rockbox.org/bootloader/sandisk-sansa/sansapatcher/linux64amd64/sansapatcher> (64-bit amd64 binary). You can save this anywhere you wish, but the next steps will assume you have saved it in your home directory.
2. Attach your player to your computer.
3. Open up a terminal window and type the following commands:

```
CODE
cd $HOME
chmod +x sansapatcher
./sansapatcher
```

**Note:** You need to be the root user in order for sansapatcher to have sufficient permission to perform raw disk access to your player. 

4. If all has gone well, you should see some information displayed about your e200 and e200R Series and a message asking you if you wish to install the Rockbox bootloader. Press i followed by ENTER, and sansapatcher will now install the bootloader. After a short time you should see the message “[INFO] Bootloader installed successfully.” Press ENTER again to exit sansapatcher.

### 2.2.3 Finishing the install

Safely eject / unmount the USB drive, unplug the cable and restart.

Your e200 will automatically reboot and Rockbox should load.

### 2.2.4 Enabling Speech Support (optional)

If you wish to use speech support you will also need a voice file. Voice files allow Rockbox to speak the user interface to you. Rockbox Utility can install an English voice file, or you can download it from <http://www.rockbox.org/daily.shtml> and unzip it to the root of your player. Rockbox Utility can also aid you in the creation of voice files with different voices or in other languages if you have a suitable speech engine installed on your computer. Voice menus are enabled by default and will come into effect after a reboot. See section 8.8 (page 67) for details on voice settings. Rockbox Utility can also aid in the production of talk files, which allow Rockbox to speak file and folder names.



## 2.3 Running Rockbox

When you turn the unit on, Rockbox should load.

## 2.4 Updating Rockbox

Rockbox can be easily updated with Rockbox Utility. You can also update Rockbox manually - download a Rockbox build as detailed above, and unzip the build to the root directory of your player as in the manual installation stage. If your unzip program asks you whether to overwrite files, choose the “Yes to all” option. The new build will be installed over your current build.

The bootloader only changes rarely, and should not normally need to be updated.

**Note:** If you use Rockbox Utility be aware that it cannot detect manually installed components.



## 2.5 Uninstalling Rockbox

**Note:** The Rockbox bootloader allows you to choose between Rockbox and the original firmware. (See section 3.1.3 (page 20) for more information.)



### 2.5.1 Automatic Uninstallation

You can uninstall Rockbox automatically by using Rockbox Utility. If you installed Rockbox manually you can still use Rockbox Utility for uninstallation but will not be able to do this selectively.

### 2.5.2 Manual Uninstallation

If you would like to go back to using the original Sansa software, connect the player to your computer, and follow the instructions to install the bootloader, but when prompted by sansapatcher, enter `u` for uninstall, instead of `i` for install. As in the installation, it may be necessary to first put your player into MSC mode.

If you wish to clean up your disk, you may also wish to delete the `.rockbox` directory and its contents. Turn the Sansa off. Turn the player back on and the original Sansa software will load.

## 2.6 Troubleshooting

**Bootloader install problems** If you have trouble installing the bootloader, please ensure that you are either logged in as an administrator (Windows), or you have root rights (Linux)

**“File Not Found”** If you receive a “File Not Found” from the bootloader, then the bootloader cannot find the Rockbox firmware. This is usually a result of not extracting the contents of the `.zip` file to the proper location, and should not happen when Rockbox has been installed with Rockbox Utility.

To fix this, either install Rockbox with the Rockbox Utility which will take care of this for you, or recheck the Manual Install section to see where the files need to be located.

## 3 Quick Start

### 3.1 Basic Overview

#### 3.1.1 The player's controls



Throughout this manual, the buttons on the player are labelled according to the picture above. Whenever a button name is prefixed by “Long”, a long press of approximately one second should be performed on that button. The buttons are described in detail in the following paragraph.

Additional information for blind users is available on the Rockbox website at [BlindFAQ](#). 

Hold the player with the turning wheel at the front and bottom. On the bottom left of the front of the player is a raised round button, the **Power** button. Above and to the left of this, on the outside of the turning wheel are four buttons. These are the **Play**, **Submenu**, **Left** and **Right** buttons. Inside the wheel is the **Select** button. Turning the wheel to the right activates the **Scroll Forward** function, and to the left, the **Scroll Backward** function.

On the right of the unit is a slot for inserting flash cards. On the bottom is the connector for the USB cable. On the left is the **Rec** button, and on the top, there is the headphone socket to the right, and the **Hold** switch. Moving this switch to the right activates hold mode in which none of the other buttons have any effect. Just to the left of the **Hold** switch is a small hole which contains the internal microphone.

### 3.1.2 Turning the player on and off

To turn on and off your Rockbox enabled player use the following keys:

Key	Action
<b>Power</b>	Start Rockbox
Long <b>Power</b>	Shutdown Rockbox

On shutdown, Rockbox automatically saves its settings.

If you have problems with your settings, such as accidentally having set the colours to black on black, they can be reset at boot time. See the Reset Settings in section [12.3.3](#) (page [148](#)) for details.

In the unlikely event of a software failure, hardware poweroff or reset can be performed by holding down **Power** until the player shuts off or reboots.

### 3.1.3 Starting the original firmware

Rockbox has a dual-boot feature. To boot into the original firmware, press and hold the **Left** button while turning on the player.

### 3.1.4 Putting music on your player

With the player connected to the computer as an MSC/UMS device (like a USB Drive), music files can be put on the player via any standard file transfer method that you would use to copy files between drives (e.g. Drag 'n' Drop). The default directory structure that is assumed by some parts of Rockbox (album art searching, and missing-tag fallback in some WPSes) uses the parent directory of a song as the Album name, and the parent directory of that folder as the Artist name. While files may be organized however you like, see section [C](#) (page [162](#)) for the requirements for Album Art to work properly, and WPSes may display information incorrectly if your files are not properly tagged, and you have your music organized in a way different than they assume when attempting to guess the Artist and Album names from your filetree. See section [A.2](#) (page [151](#)) for a list of supported audio formats.

### 3.1.5 The first contact

After you have first started the player, you'll be presented by the MAIN MENU. From this menu you can reach every function of Rockbox, for more information (see section [5.1](#) (page [39](#))). To browse the files on you player, select FILES (see section [4.1](#) (page [23](#))), and to browse in a view that is based on the meta-data<sup>1</sup> of your audio files, select DATABASE (see section [4.2](#) (page [27](#))).

---

<sup>1</sup>ID3 Tags, Vorbis comments, etc.

### 3.1.6 Basic controls

When browsing files and moving through menus you usually get a list view presented. The navigation in these lists are usually the same and should be pretty intuitive. In the tree view use **Scroll Forward** and **Scroll Backward** to move around the selection. Use **Select** or **Right** to select an item. When browsing the file system selecting an audio file plays it. The view switches to the “While playing screen”, usually abbreviated as “WPS” (see section 4.3 (page 29)). The dynamic playlist gets replaced with the contents of the current directory. This way you can easily treat directories as playlists. The created dynamic playlist can be extended or modified while playing. This is also known as “on-the-fly playlist”. To go back to the FILE BROWSER stop the playback with the **Power** button or return to the file browser while keeping playback running using **Select**. In list views you can go back one step with **Left**.

### 3.1.7 Basic concepts

#### Playlists

Rockbox is playlist oriented. This means that every time you play an audio file, a so-called “dynamic playlist” is generated, unless you play a saved playlist. You can modify the dynamic playlist while playing and also save it to a file. If you do not want to use playlists you can simply play your files directory based. Playlists are covered in detail in section 4.4 (page 34).

#### Menu

From the menu you can customise Rockbox. Rockbox itself is very customisable. Also there are some special menus for quick access to frequently used functions.

#### Context Menu

Some views, especially the file browser and the WPS have a context menu. From the file browser this can be accessed with Long **Select**. The contents of the context menu vary, depending on the situation it gets called. The context menu itself presents you with some operations you can perform with the currently highlighted file. In the file browser this is the file (or directory) that is highlighted by the cursor. From the WPS this is the currently playing file. Also there are some actions that do not apply to the current file but refer to the screen from which the context menu gets called. One example is the playback menu, which can be called using the context menu from within the WPS.

## 3.2 Customising Rockbox

Rockbox’ User Interface can be customised using “Themes”. Themes usually only affect the visual appearance, but an advanced user can create a theme that also changes various other settings like file view, LCD settings and all other settings that can be modified

using `.cfg` files. This topic is discussed in more detail in section 12.3 (page 146). The Rockbox distribution comes with some themes that should look nice on your player.

**Note:** Some of the themes shipped with Rockbox need additional fonts from the fonts package, so make sure you installed them. Also, if you downloaded additional themes from the Internet make sure you have the needed fonts installed as otherwise the theme may get displayed garbled.



### 3.3 Charging

The player can be powered over USB without connecting to your computer by holding **Select** while plugging in. This allows you to continue using the player normally.

## 4 Browsing and playing

### 4.1 File Browser



Figure 4.1: The file browser

Rockbox lets you browse your music in either of two ways. The FILE BROWSER lets you navigate through the files and directories on your player, entering directories and executing the default action on each file. To help differentiate files, each file format is displayed with an icon.

The DATABASE BROWSER, on the other hand, allows you to navigate through the music on your player using categories like album, artist, genre, etc.

You can select whether to browse using the FILE BROWSER or the DATABASE BROWSER by selecting either FILES or DATABASE in the MAIN MENU. If you choose the FILE BROWSER, the SHOW FILES setting lets you select what types of files you wish to view. See section 8.2 (page 60) for more information on the SHOW FILES setting.

**Note:** The FILE BROWSER allows you to manipulate your files in ways that are not available within the DATABASE BROWSER. Read more about DATABASE in section 4.2 (page 27). The remainder of this section deals with the FILE BROWSER.



### 4.1.1 File Browser Controls

Key	Action
<b>Scroll</b>	Go to previous/next item in list. If you are on the first/last entry, the cursor will wrap to the last/first entry.
<b>Backward/Scroll Forward</b>	Go to the parent directory.
<b>Left</b>	Executes the default action on the selected file or enters a directory.
<b>Select or Right</b>	If there is an audio file playing, returns to the WHILE PLAYING SCREEN (WPS) without stopping playback.
<b>Play</b>	Stops audio playback.
<b>Power</b>	Enter the CONTEXT MENU
<b>Long Select</b>	Enter the MAIN MENU
<b>Submenu</b>	Switches to the QUICK SCREEN (see section 5.13 (page 47))
<b>Long Submenu</b>	Switches to the Recording screen

### 4.1.2 Context Menu

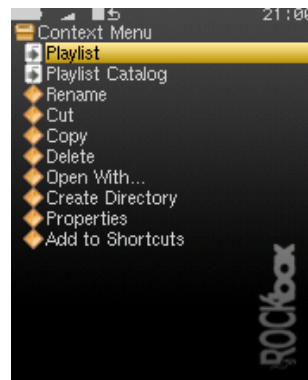


Figure 4.2: The Context Menu

The CONTEXT MENU allows you to perform certain operations on files or directories. To access the CONTEXT MENU, position the selector over a file or directory and access the context menu with Long **Select**.

**Note:** The CONTEXT MENU is a context sensitive menu. If the CONTEXT MENU is invoked on a file, it will display options available for files. If the CONTEXT MENU is invoked on a directory, it will display options for directories.





The **CONTEXT MENU** contains the following options (unless otherwise noted, each option pertains both to files and directories):

**Playlist.** Enters the **PLAYLIST SUBMENU** (see section 4.4.3 (page 36)).

**Playlist Catalog.** Enters the **PLAYLIST CATALOG SUBMENU** (see section 4.4.2 (page 35)).

**Rename.** This function lets the user modify the name of a file or directory.

**Cut.** Copies the name of the currently selected file or directory to the clipboard and marks it to be ‘cut’.

**Copy.** Copies the name of the currently selected file or directory to the clipboard and marks it to be ‘copied’.

**Paste.** Only visible if a file or directory name is on the clipboard. When selected it will move or copy the clipboard to the current directory.

**Delete.** Deletes the currently selected file. This option applies only to files, and not to directories. Rockbox will ask for confirmation before deleting a file. Press **Select** to confirm deletion or any other key to cancel.

**Delete Directory.** Deletes the currently selected directory and all of the files and subdirectories it may contain. Deleted directories cannot be recovered. Use this feature with caution!

**Set As Backdrop.** Set the selected **bmp** file as background image. The bitmaps need to meet the conditions explained in section 12.1.5 (page 143).

**Open with.** Runs a viewer plugin on the file. Normally, when a file is selected in Rockbox, Rockbox automatically detects the file type and runs the appropriate plugin. The **OPEN WITH** function can be used to override the default action and select a viewer by hand. For example, this function can be used to view a text file even if the file has a non-standard extension (i.e., the file has an extension of something other than **.txt**). See section 11.3 (page 116) for more details on viewers.

**Create Directory.** Create a new directory in the current directory on the disk.

**Properties.** Shows properties such as size and the time and date of the last modification for the selected file. If used on a directory, the number of files and subdirectories will be shown, as well as the total size.

**Set As Recording Directory.** Save recordings in the selected directory.

**Add to Shortcuts.** Adds a link to the selected item in the **shortcuts.link** file. If the file does not already exist it will be created in the root directory. Note that if you create a shortcut to a file, Rockbox will not open it upon selecting, but simply bring you to it’s location in the **FILE BROWSER**.

### 4.1.3 Virtual Keyboard



Figure 4.3: The virtual keyboard

This is the virtual keyboard that is used when entering text in Rockbox, for example when renaming a file or creating a new directory. The virtual keyboard can be easily changed by making a text file with the required layout. More information on how to achieve this can be found on the Rockbox website at [LoadableKeyboardLayouts](#).

Key	Action
<b>Left / Right / Scroll</b>	Move about the virtual keyboard (moves the solid cursor)
<b>Backward / Scroll Forward</b>	
<b>Rec + Select</b>	Flip to the next page of characters (if there is more than one)
<b>Rec + Leftor</b>	Move the line cursor within the text line
<b>Rec + Right</b>	
<b>Select</b>	Inserts the selected keyboard letter at the current cursor position
<b>Power</b>	Exits the virtual keyboard without saving any changes
<b>Play</b>	Exits the virtual keyboard and saves any changes
<b>Submenu</b>	Deletes the character before the line cursor

## 4.2 Database

### 4.2.1 Introduction

This chapter describes the Rockbox music database system. Using the information contained in the tags (ID3v1, ID3v2, Vorbis Comments, Apev2, etc.) in your audio files, Rockbox builds and maintains a database of the music files on your player and allows you to browse them by Artist, Album, Genre, Song Name, etc. The criteria the database uses to sort the songs can be completely customised. More information on how to achieve this can be found on the Rockbox website at [DataBase](#).

### 4.2.2 Initializing the Database

The first time you use the database, Rockbox will scan your disk for audio files. This can take quite a while depending on the number of files on your player. This scan happens in the background, so you can choose to return to the Main Menu and continue to listen to music. If you shut down your player, the scan will continue next time you turn it on. After the scan is finished you may be prompted to restart your player before you can use the database.


#### Ignoring Directories During Database Initialization

You may have directories on your player whose contents should not be added to the database. Placing a file named `database.ignore` in a directory will exclude the files in that directory and all its subdirectories from scanning their tags and adding them to the database. This will speed up the database initialization.


If a subdirectory of an 'ignored' directory should still be scanned, place a file named `database.unignore` in it. The files in that directory and its subdirectories will be scanned and added to the database.

### 4.2.3 The Database Menu

**Load To RAM** The database can either be kept on disk (to save memory), or loaded into RAM (for fast browsing). Setting this to YES loads the database to RAM, allowing faster browsing and searching. Setting this option to NO keeps the database on the disk, meaning slower browsing but it does not use extra RAM and saves some battery on boot up.

**Note:** If you browse your music frequently using the database, you should load to RAM, as this will reduce the overall battery consumption because the disk will not need to spin on each search. 

**Auto Update** If AUTO UPDATE is set to ON, each time the player boots, the database will automatically be updated.

**Note:** The AUTO UPDATE will only check for deleted files if the DIRECTORY CACHE (SETTINGS → GENERAL SETTINGS → SYSTEM → DISK → DIRECTORY 

CACHE) is enabled. UPDATE NOW includes that check whether dircache has been enabled or not.

**Initialize Now** You can force Rockbox to rescan your disk for tagged files by using the INITIALIZE NOW function in the DATABASE MENU.

**Warning:** INITIALIZE NOW removes all database files (removing runtime db data also) and rebuilds the database from scratch.



**Update Now** UPDATE NOW causes the database to detect new and deleted files

**Note:** Unlike the AUTO UPDATE function, UPDATE NOW will update the database regardless of whether the DIRECTORY CACHE is enabled. Thus, an update using UPDATE NOW may take a long time.



Unlike INITIALIZE NOW, the UPDATE NOW function does not remove runtime database information.

**Gather Runtime Data** When enabled, rockbox will record how often and how long a track is being played, when it was last played and its rating. This information can be displayed in the WPS and is used in the database browser to, for example, show the most played, unplayed and most recently played tracks.

**Export Modifications** This allows for the runtime data to be exported to the file `/.rockbox/database_changelog.txt`, which backs up the runtime data in ASCII format. This is needed when database structures change, because new code cannot read old database code. But, all modifications exported to ASCII format should be readable by all database versions.

**Import Modifications.** Allows the `/.rockbox/database_changelog.txt` backup to be conveniently loaded into the database. If AUTO UPDATE is enabled this is performed automatically when the database is initialized.

#### 4.2.4 Using the Database

Once the database has been initialized, you can browse your music by Artist, Album, Genre, Song Name, etc. To use the database, go to the MAIN MENU and select DATABASE.

**Note:** You may need to increase the value of the MAX FILES IN DIR BROWSER setting (SETTINGS → GENERAL SETTINGS → SYSTEM → LIMITS) in order to view long lists of tracks in the ID3 database browser.



There is no option to turn off database completely. If you do not want to use it just do not do the initial build of the database and do not load it to RAM.

Tag	Type	Origin
filename	string	system
album	string	id tag
albumartist	string	id tag
artist	string	id tag
comment	string	id tag
composer	string	id tag
genre	string	id tag
grouping	string	id tag
title	string	id tag
bitrate	numeric	id tag
discnum	numeric	id tag
year	numeric	id tag
tracknum	numeric	id tag/filename
autoscore	numeric	runtime db
lastplayed	numeric	runtime db
playcount	numeric	runtime db
Pm (play time - min)	numeric	runtime db
Ps (play time - sec)	numeric	runtime db
rating	numeric	runtime db
commitid	numeric	system
entryage	numeric	system
length	numeric	system
Lm (track len - min)	numeric	system
Ls (track len - sec)	numeric	system

### 4.3 While Playing Screen

The While Playing Screen (WPS) displays various pieces of information about the currently playing audio file. The appearance of the WPS can be configured using WPS configuration files. The items shown depend on your configuration – all item can be turned on or off independently. Refer to section B (page 152) for details on how to change the display of the WPS.

- Status bar: The Status bar shows Battery level, charger status, volume, play mode, repeat mode, shuffle mode and clock. In contrast to all other items, the status bar is always at the top of the screen.
- (Scrolling) path and filename of the current song.
- The ID3 track name.

- The ID3 album name.
- The ID3 artist name.
- Bit rate. VBR files display average bitrate and “(avg)”
- Elapsed and total time.
- A slider progress meter representing where in the song you are.
- Peak meter.

See section 12.2 (page 143) for details of customising your WPS (While Playing Screen).

### 4.3.1 WPS Key Controls

Key	Action
<b>Scroll Backward</b> <b>/ Scroll Forward</b> <b>Left</b>	Volume up/down.  Go to beginning of track, or if pressed while in the first seconds of a track, go to previous track.
<b>Long Left</b>	Rewind in track.
<b>Right</b>	Go to next track.
<b>Long Right</b>	Fast forward in track.
<b>Play</b>	Toggle play/pause.
<b>Power</b>	Stop playback.
<b>Select</b>	Return to the FILE BROWSER.
<b>Long Select</b>	Enter WPS CONTEXT MENU.
<b>Submenu</b>	Enter MAIN MENU.
<b>Long Submenu</b>	Switches to the QUICK SCREEN. (see section 5.13 (page 47))
<b>Select + Play</b>	Show PITCH SCREEN (see section 4.3.3 (page 33)).
<b>Select + Submenu</b>	Enter ID3 VIEWER.
<b>Power + Right</b> or <b>Short Right + Long Right</b>	Skip to the next directory.
<b>Power + Left</b> or <b>Short Left + Long Left</b>	Skip to the previous directory.
<b>Long Rec</b>	Switches to the Recording screen


### 4.3.2 Peak Meter

The peak meter can be displayed on the While Playing Screen and consists of several indicators. For a picture of the peak meter, please see the While Recording Screen in section 5.8.1 (page 43).

**The bar:** This is the wide horizontal bar. It represents the current volume value.

**The peak indicator:** This is a little vertical line at the right end of the bar. It indicates the peak volume value that occurred recently.

**The clip indicator:** This is a little black block that is displayed at the very right of the scale when an overflow occurs. It usually does not show up during normal playback unless you play an audio file that is distorted heavily. If you encounter clipping while recording, your recording will sound distorted. You should lower the gain.

**Note:** Note that the clip detection is not very precise. Clipping might occur without being indicated. 

**The scale:** Between the indicators of the right and left channel there are little dots. These dots represent important volume values. In linear mode each dot is a 10% mark. In dbfs mode the dots represent the following values (from right to left): 0db, -3db, -6db, -9db, -12db, -18db, -24db, -30db, -40db, -50db, -60db.

### 4.3.3 The WPS Context Menu

Like the context menu for the FILE BROWSER, the WPS CONTEXT MENU allows you quick access to some often used functions:

#### Playlist

The PLAYLIST submenu allows you to view, save, search and reshuffle the current playlist. To change settings for the PLAYLIST VIEWER press **Submenu** while viewing the playlist to bring up the PLAYLIST VIEWER MENU.

#### Playlist Viewer Menu

**Show Icons.** This toggles display of the icon for the currently selected playlist entry and the icon for moving a playlist entry

**Show Indices.** This toggles display of the line numbering for the playlist

**Track Display.** This toggles between filename only and full path for playlist entries

**Save Current Playlist.** Allows the current playlist to be saved as a .m3u8 playlist file

### Playlist catalog

**View catalog.** This lists all playlists that are part of the Playlist catalog. You can load a new playlist directly from this list.

**Add to playlist.** Adds the currently playing file to a playlist. Select the playlist you want the file to be added to and it will get appended to that playlist.

**Add to new playlist.** Similar to the previous entry this will add the currently playing track to a playlist. You need to enter a name for the new playlist first.

### Sound Settings

This is a shortcut to the SOUND SETTINGS MENU, where you can configure volume, bass, treble, and other settings affecting the sound of your music. See section 6 (page 48) for more information.

### Playback Settings

This is a shortcut to the PLAYBACK SETTINGS MENU, where you can configure shuffle, repeat, party mode, study mode and other settings affecting the playback of your music.

### Rating

The menu entry is only shown if GATHER RUNTIME INFORMATION is enabled. It allows the assignment of a personal rating value (0 – 10) to a track which can be displayed in the WPS and used in the Database browser. Press **Right** to increment the value. The value wraps at 10.

### Bookmarks

This allows you to create a bookmark in the currently-playing track.



## Show Track Info

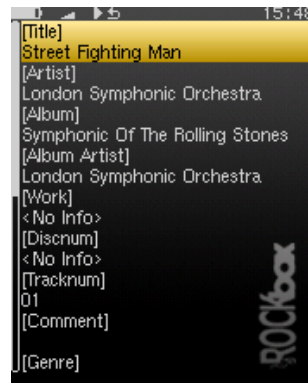


Figure 4.4: The track info viewer

This screen is accessible from the WPS screen, and provides a detailed view of all the identity information about the current track. This info is known as meta data and is stored in audio file formats to keep information on artist, album etc. To access this screen,

## Open With...

This OPEN WITH function is the same as the OPEN WITH function in the file browser's CONTEXT MENU.

## Delete

Delete the currently playing file.

## Pitch

The PITCH SCREEN allows you to change the pitch and (at the same time) the playback speed of your player. The pitch value can be adjusted between 50% and 200%. 50% means half the normal playback speed and the pitch that is an octave lower than the normal pitch. 200% means double playback speed and the pitch that is an octave higher than the normal pitch. It is not possible to change the pitch without changing the playback speed and vice versa. Changing the pitch can be done in two modes: procentual and semitone. Initially (after the player is switched on), procentual mode is active.

Key	Action
<b>Rec</b>	Toggle pitch changing mode
<b>Scroll Backward</b> / <b>Scroll Forward</b>	Increase / Decrease pitch by 0.1% (in percentual mode) or a semitone (in semitone mode)
Long <b>Scroll Backward</b> / Long <b>Scroll Forward</b>	Increase / Decrease pitch by 1% (in percentual mode) or a semitone (in semitone mode)
<b>Right</b> / <b>Left</b>	Temporarily increase / decrease pitch by 2.0%
<b>Select</b>	Reset pitch to 100%
<b>Power</b> or <b>Play</b>	Leave the Pitch Screen

## 4.4 Working with Playlists

**This section is currently in a half written state, with possible errors and a lot of stuff missing. Please help us fix this chapter by submitting additions/corrections to the tracker**

### 4.4.1 Playlist terminology

Some common terms that are used in Rockbox when referring to playlists:

**Directory.** A playlist! One of the keys to getting the most out of Rockbox is understanding that Rockbox *always* considers the song that it is playing to be part of a playlist, and in some situations, Rockbox will create a playlist automatically. For example, if you are playing the contents of a directory, Rockbox will automatically create a playlist containing all songs in it. This means that just about anything that is described in this chapter with respect to playlists also applies to directories.

**Dynamic playlist.** A dynamic playlist is a playlist that is created “On the fly.” Any time you insert or queue tracks using the PLAYLIST SUBMENU (see section 4.4.3 (page 36)), you are creating (or adding to) a dynamic playlist.

**Insert.** In Rockbox, to INSERT an item into a playlist means putting an item into a playlist and leaving it there, even after it is played. As you will see later in this chapter, Rockbox can INSERT into a playlist in several places.

**Queue.** In Rockbox, to QUEUE a song means to put the song into a playlist and then to remove the song from the playlist once it has been played. The only difference between INSERT and QUEUE is that the QUEUE option removes the song from the playlist once it has been played, and the INSERT option does not.

### 4.4.2 Creating playlists

Rockbox can create playlists in four different ways.

#### By selecting (“playing”) a song from the File Browser

Whenever a song is selected from the FILE BROWSER with **Select** or **Right**, Rockbox will automatically create a playlist containing all of the songs in that directory and start playback with the selected song.

**Note:** If you already have created a dynamic playlist, playing a new song will *erase* the current dynamic playlist and create a new one. If you want to add a song to the current playlist rather than erasing the current playlist, see the section below on how to add music to a playlist.



#### By using Insert and Queue functions

If playback is stopped, the INSERT and QUEUE functions can be used as described in [4.4.3](#) to create a new playlist instead of adding to an existing one. This will *erase* any dynamic playlist.

#### By using the Playlist catalog

The PLAYLIST CATALOG makes it possible to modify and create playlists that are not currently playing. To do this select PLAYLIST CATALOG in the CONTEXT MENU. There you will have two choices, ADD TO PLAYLIST adds the selected track or directory to an existing playlist and ADD TO A NEW PLAYLIST creates a new playlist containing the selected track or directory.

**Note:** All playlists in the PLAYLIST CATALOG are stored by default in the /Playlists directory in the root of your player’s disk and playlists stored in other locations are not included in the catalog. It is however possible to move existing playlists there (see section [4.1.2](#) (page [24](#))).



#### By using the Main Menu

To create a playlist containing all music on your player, you can use the CREATE PLAYLIST command in the PLAYLISTS menu found in the MAIN MENU. The created playlist will be named `root.m3u8` and saved in the root of your player’s disk.

### 4.4.3 Adding music to playlists

#### Adding music to a dynamic playlist

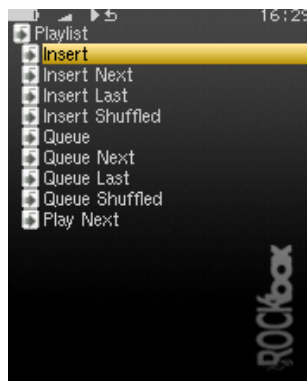


Figure 4.5: The Playlist Submenu

The PLAYLIST SUBMENU is a submenu in the CONTEXT MENU (see section 4.1.2 (page 24)), it allows you to put tracks into a “dynamic playlist”. If there is no music currently playing, Rockbox will create a new dynamic playlist and put the selected track(s) into it. If there is music currently playing, Rockbox will put the selected track(s) into the current playlist. The place in which the newly selected tracks are added to the playlist is determined by the following options:

**Insert.** Add track(s) immediately after any tracks added via the most recent INSERT operation. If no tracks have yet been added via an INSERT, new tracks will be added immediately after the current playing track. If playback is stopped a new dynamic playlist will get created with the selected tracks.

**Insert Next.** Add track(s) immediately after current playing track, no matter what else has been inserted.

**Insert Last.** Add track(s) to end of playlist.

**Insert Shuffled.** Add track(s) to the playlist in a random order.

**Queue.** Queue is the same as Insert except queued tracks are deleted immediately from the playlist after they have been played. Also, queued tracks are not saved to the playlist file (see section 5.10 (page 45)).

**Queue Next.** Queue track(s) immediately after current playing track.

**Queue Last.** Queue track(s) at end of playlist.

**Queue Shuffled.** Queue track(s) in a random order.

**Play Next.** Replaces all but the current playing track with track(s). Current playing track is queued.

The PLAYLIST SUBMENU can be used to add either single tracks or entire directories to a playlist. If the PLAYLIST SUBMENU is invoked on a single track, it will put only that track into the playlist. On the other hand, if the PLAYLIST SUBMENU is invoked on a directory, Rockbox adds all of the tracks in that directory to the playlist.

**Note:** You can control whether or not Rockbox includes the contents of subdirectories when adding an entire directory to a playlists. Set the SETTINGS → GENERAL SETTINGS → PLAYLIST → RECURSIVELY INSERT DIRECTORIES setting to YES if you would like Rockbox to include tracks in subdirectories as well as tracks in the currently-selected directory.

Dynamic playlists are saved so resume will restore them exactly as they were before shutdown.

**Note:** To view, save or reshuffle the current dynamic playlist use the PLAYLIST sub menu in the WPS context menu or in the MAIN MENU.



#### 4.4.4 Modifying playlists

##### Reshuffling

Reshuffling the current playlist is easily done from the PLAYLIST sub menu in the WPS, just select RESHUFFLE.

##### Moving and removing tracks

To move or remove a track from the current playlist enter the PLAYLIST VIEWER by selecting VIEW CURRENT PLAYLIST in the PLAYLIST submenu in the WPS context menu or the MAIN MENU. Once in the PLAYLIST VIEWER open the context menu on the track you want to move or remove. If you want to move the track, select MOVE in the context menu and then move the blinking cursor to the place where you want the track to be moved and confirm with **Select** or **Right**. To remove a track, simply select REMOVE in the context menu.

#### 4.4.5 Saving playlists

To save the current playlist either enter the PLAYLIST submenu in the WPS CONTEXT MENU (see section 4.3.3 (page 31)) and select SAVE CURRENT PLAYLIST or enter the PLAYLIST OPTIONS menu in the MAIN MENU and select SAVE CURRENT PLAYLIST. Either method will bring you to the VIRTUAL KEYBOARD (see section 4.1.3 (page 26)), enter a filename for your playlist and accept it and you are done.

### 4.4.6 Loading saved playlists

#### Through the File Browser

Playlist files, like regular music tracks, can be selected through the FILE BROWSER. When loading a playlist from disk it will replace the current dynamic playlist.

#### Through the Playlist catalog

The PLAYLIST CATALOG offers a shortcut to all playlists in your player's specified playlist directory. It can be used like the FILE BROWSER.

### 4.4.7 Helpful Hints

#### Including subdirectories in playlists

You can control whether or not Rockbox includes the contents of subdirectories when adding an entire directory to a playlists. Set the MAIN MENU → SETTINGS → GENERAL SETTINGS → PLAYLISTS → RECURSIVELY INSERT DIRECTORIES setting to ON if you would like to include tracks in subdirectories as well as tracks in the currently selected directory.

## 5 The Main Menu

### 5.1 Introducing the Main Menu

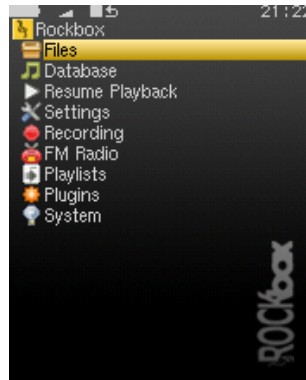


Figure 5.1: The main menu

The MAIN MENU is the screen from which all of the Rockbox functions can be accessed. This is the first screen you will see when starting Rockbox. To return to the MAIN MENU, press the **Submenu** button.

All settings are stored on the unit. However, Rockbox does not spin up the disk solely for the purpose of saving settings. Instead, Rockbox will save settings when it spins up the disk the next time, for example when refilling the MP3 buffer or navigating through the FILE BROWSER. Changes to settings may therefore not be saved unless the player is shut down safely (see section [3.1.2](#) (page 20)).

## 5.2 Navigating the Main Menu

Key	Action
<b>Scroll Forward</b>	Selects the next option in the menu. Inside a setting, increases the value or chooses next option
<b>Scroll Backward</b>	Selects the previous option in the menu. Inside a setting, decreases the value or chooses previous option
<b>Select or Right Left</b>	Selects option Exits menu, setting or moves to parent menu

## 5.3 Recent Bookmarks

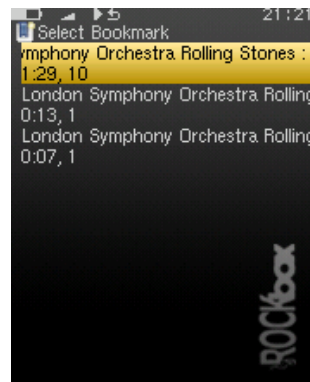


Figure 5.2: The list bookmarks screen

If the `SAVE A LIST OF RECENTLY CREATED BOOKMARKS` option is enabled then you can view a list of several recent bookmarks here and select one to jump straight to that track.



Key	Action
<b>Scroll Forward</b>	Selects the next bookmark.
<b>Scroll Backward</b>	Selects the previous bookmark.
<b>Select or Right</b>	Resumes from the selected bookmark.
<b>Left</b>	Exits Recent Bookmark menu
<b>Rec</b>	Deletes the currently selected bookmark
<b>Long Select</b>	Enters the context menu for the selected bookmark.

There are two options in the context menu:

RESUME will commence playback of the currently selected bookmark entry.

DELETE will remove the currently selected bookmark entry from the list.

This entry is not shown in the MAIN MENU when the option is off (the default setting). See section 8.6 (page 65) for more details on configuring bookmarking in Rockbox.

## 5.4 Files

Browse the files on your player (see section 4.1 (page 23)).

## 5.5 Database

Browse by the meta-data in your audio files (see section 4.2 (page 27)).

## 5.6 Now Playing/Resume Playback

Go to the WHILE PLAYING SCREEN and resume if music playback is stopped or paused and there is something to resume (see section 4.3 (page 29)).

## 5.7 Settings

The SETTINGS menu allows to set or adjust many parameters that affect the way your player works. There are many submenus for different parameter areas. Every time you are setting a value of a parameter, and that value is selected from a list of some predefined available values, you can press Long **Select**, and the selection cursor will jump to the default value for the parameter. You can then confirm or cancel the value. This is useful if you have changed the value of the parameter from the default to some other value and would like to restore the default value.

### 5.7.1 Sound Settings

The SOUND SETTINGS menu offers a selection of sound properties you may change to customise your listening experience. The details of this menu are covered in [section 6](#) (page [48](#)).

### 5.7.2 Playback Settings

The PLAYBACK SETTINGS menu allows you to configure settings related to audio playback. The details of this menu are covered in [section 7](#) (page [54](#)).

### 5.7.3 General Settings

The GENERAL SETTINGS menu allows you to customise the way Rockbox looks and the way it plays music. The details of this menu are covered in [section 8](#) (page [59](#)).

### 5.7.4 Theme Settings

The THEME SETTINGS menu contains options that control the visual appearance of Rockbox. The details of this menu are covered in [section 9](#) (page [69](#)).

### 5.7.5 Recording Settings

The RECORDING SETTINGS menu allows you to configure settings related to recording. The details of this menu are covered in detail in [section 10](#) (page [71](#)).

### 5.7.6 Manage Settings

The MANAGE SETTINGS option allows the saving and re-loading of user configuration settings, browsing the hard drive for alternate firmwares, and finally resetting your player back to initial configuration. The details of this menu are covered in [section 12.3](#) (page [146](#)).

## 5.8 Recording

### 5.8.1 While Recording Screen

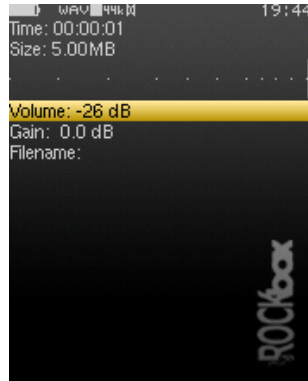


Figure 5.3: The while recording screen

Selecting the RECORDING option in the MAIN MENU enters the RECORDING SCREEN, whilst pressing Long **Select** enters the RECORDING SETTINGS (see section 10 (page 71)). The RECORDING SCREEN shows the time elapsed and the size of the file being recorded. A peak meter is present to allow you set gain correctly. There is also a volume setting, this will only affect the output level of the player and does *not* affect the recorded sound. If enabled in the peak meter settings, a counter in front of the peak meters shows the number of times the clip indicator was activated during recording. The counter is reset to zero when starting a new recording.

The frequency and channels settings are shown in the status bar.

The controls for this screen are:

Key	Action
<b>Scroll Backward</b> <b>/ Scroll Forward</b>	Select setting.
<b>Left / Right</b>	Adjust selected setting.
<b>Play</b>	Start recording. While recording: pause recording (press again to continue).
<b>Power</b>	Exit RECORDING SCREEN.
<b>Rec</b>	While recording: Stop recording.
<b>Long Select</b>	While recording: close the current file and open a new one.
	Open RECORDING SETTINGS (see section 10 (page 71)).

## 5.9 FM Radio

**Note:** Not all Sansas have a radio receiver. Generally all american models do, but european models might not. Rockbox will display the radio menu only if it can find a radio receiver in your Sansa.

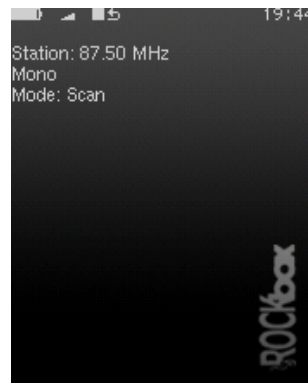


Figure 5.4: The FM radio screen

This menu option switches to the radio screen. The FM radio has the ability to record and to remember station frequency settings (presets).

Key	Action
<b>Right, Left</b>	Change frequency in SCAN mode or jump to next/previous station in PRESET mode
Long <b>Right, Left</b>	Seek to next station or preset in SCAN mode.
<b>Play, Submenu</b>	Change volume.
<b>Submenu</b>	Leave the radio screen with the radio playing.
<b>Power</b>	Stops the radio and returns to MAIN MENU.
<b>Play</b>	Mutes radio playback.
Long <b>Play</b>	Switches between SCAN and PRESET mode.
<b>Select</b>	Opens a list of radio presets. You can view all the presets that you have, and switch to the station.
Long <b>Select</b>	Displays the FM radio settings menu.

**Saving a preset:** Up to 64 of your favourite stations can be saved as presets. Long **Select** to go to the menu, then select ADD PRESET. Enter the name (maximum number of characters is 32). Press **Play** to save.

**Note:** See this page for pre-made FM radio presets from all around the world.



🔊 [FmPresets](#)

**Selecting a preset:** **Select** to go to the presets list. Use **Play** and **Submenu** to move the cursor and then press **Select** or **Right** to select. Use **Left** to leave the preset without selecting anything.

**Removing a preset:** **Select** to go to the presets list. Use **Play** and **Submenu** to move the cursor and then press Long **Select** on the preset that you wish to remove, then select REMOVE PRESET.

**Note:** The radio will turn off when starting playback of an audio file.



## 5.10 Playlist

This menu allows you to work with playlists. Playlists can be created in three ways. Playing a file in a directory causes all the files in it to be placed in a playlist. Playlists can be created manually by either using the CONTEXT MENU (see section 4.1.2 (page 24)) or using the PLAYLIST menu. Both automatically and manually created playlists can be edited using this menu.

**Create Playlist:** Rockbox will create a playlist with all tracks in the current directory and all sub-directories. The playlist will be created one directory level “up” from where you currently are.

**View Current Playlist:** Displays the contents of the playlist currently stored in memory.

**Save Current Playlist:** Saves the current dynamic playlist, excluding queued tracks, to the specified file. If no path is provided then playlist is saved to the current directory.

**Playlist Catalog:** The PLAYLIST CATALOG provides a simple interface to maintain several playlists (see section 4.4 (page 34)).

## 5.11 Plugins

With this option you can load and run various plugins that have been written for Rockbox. There are a wide variety of these supplied with Rockbox, including several games, some impressive demos and a number of utilities. A detailed description of the different plugins is to be found in section 11 (page 75).

## 5.12 System

**Time and Date:** Time related menu options. Pressing Long **Select** will voice the current time if voice support is enabled

**Set Time/Date:** Set current time and date.

**Sleep Timer:** The SLEEP TIMER powers off your player after playing for a given time. It can be set from OFF to 5 hours in 5 minute steps. The SLEEP TIMER is reset on boot.

**Time Format:** Choose 12 or 24 hour clock.

**Rockbox Info:** Displays some basic system information. This is, from top to bottom, the amount of memory Rockbox has available for storing music (the buffer). The battery status. Memory size and amount of free space on the two data volumes, this info is given separately for internal memory (*Int*) and for a plugged in memory card (*MSD*).

**Credits:** Display the list of contributors.

**Debug (Keep Out!):** This sub menu is intended to be used *only* by Rockbox developers. It shows hardware, disk, battery status and other technical information.

**Warning:** It is not recommended that users access this menu unless instructed to do so in the course of fixing a problem with Rockbox. If you think you have messed up your settings by use of this menu please try to reset *all* settings before asking for help.



### 5.13 Quick Screen

Although the QUICK SCREEN is accessible from nearly everywhere, not just the MAIN MENU, it is worth mentioning here. It allows rapid access to your three favourite settings. The default settings are SHUFFLE (section 7 (page 54)), REPEAT (section 7 (page 54)) and the SHOW FILES (section 8.2 (page 60)) options, but almost all configurable options in Rockbox can be placed on this screen. To change the options, navigate through the menus to the setting you want to add and press Long **Select**. In the menu which appears you will be given options to place the setting on the QUICK SCREEN.

Press Long **Submenu** to access it and **Power** to exit. The direction buttons will modify the individual setting values as indicated by the arrow icons.

## 6 Sound Settings

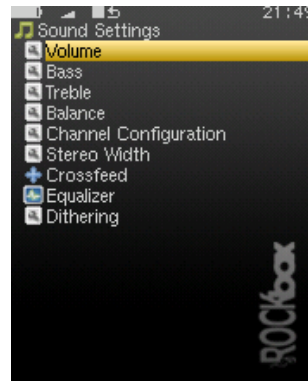


Figure 6.1: The sound settings screen

The sound settings menu offers a selection of sound settings you may change to customise your listening experience.

### 6.1 Volume

This setting adjusts the volume of your music. Like most professional audio gear and many consumer audio products, Rockbox uses a decibel scale where 0 dB is a reference that indicates the maximum volume that the player can produce without possible distortion (clipping). All values lower than this reference will be negative and yield a progressively softer volume. Values higher than 0 dB are available and can be used to raise the volume more than would otherwise be possible. These volume levels will ordinarily lead to distorted sound, but might work nicely for music that has an otherwise low volume level. The volume can be adjusted from a minimum of -74 dB to a maximum of +6 dB.

### 6.2 Bass

This setting emphasises or suppresses the lower (bass) frequencies in the sound. A value of 0 dB means that bass sounds are unaltered (flat response). The minimum setting is -24 dB and the maximum is 24 dB.



## 6.3 Treble

This setting emphasises or suppresses the higher (treble) frequencies in the sound. A value of 0 dB means that treble sounds are unaltered (flat response). The minimum setting is -24 dB and the maximum is 24 dB.

## 6.4 Balance

This setting controls the balance between the left and right channels. The default, 0, means that the left and right outputs are equal in volume. Negative numbers increase the volume of the left channel relative to the right, positive numbers increase the volume of the right channel relative to the left.

## 6.5 Channels

A stereo audio signal consists of two channels, left and right. The CHANNELS setting determines if these channels are to be combined in any way, and if so, in what manner they will be combined. Available options are:

Setting	Description
Stereo	Leave the audio signal unmodified.
Mono	Combine both channels and send the resulting signal to both stereo channels, resulting in a monophonic output.
Custom	Allows you to manually specify a stereo width with the STEREO WIDTH setting described later in this chapter.
Mono Left	Plays the left channel in both stereo channels.
Mono Right	Plays the right channel in both stereo channels.
Karaoke	Removes all sound that is common to both channels. Since most music is recorded with vocals being equally present in both channels to make the singer sound centrally placed, this often (but not always) has the effect of removing the voice track from a song. This setting also very often has other undesirable effects on the sound.

## 6.6 Stereo Width

Stereo width allows you to manually specify the effect that is applied when the CHANNELS setting is set to “custom”. All values below 100% will progressively mix the contents of one channel into the other. This has the effect of gradually centering the stereo image, until you have monophonic sound at 0%. Values above 100% will progressively remove components in one channel that is also present in the other. This has the effect of widening the stereo field. A value of 100% will leave the stereo field unaltered.

## 6.7 Crossfeed

Crossfeed attempts to make the experience of listening to music on headphones more similar to listening to music with stereo speakers. When you listen to music through speakers, each ear will hear sound originating from both speakers. However, the sound from the left speaker reaches your right ear slightly later than it does your left ear, and vice versa.

The human ear and brain together are very good at interpreting the time differences between direct sounds and reflected sounds and using that information to identify the direction that the sound is coming from. On the other hand, when listening to headphones, each ear hears only the stereo channel corresponding to it. The left ear hears only the left channel and the right ear hears only the right channel. The result is that sound from headphones does not provide the same spatial cues to your ear and brain as speakers, and might for that reason sound unnatural to some listeners.

The crossfeed function uses an algorithm to feed a delayed and filtered portion of the signal from the right channel into the left channel and vice versa in order to simulate the spatial cues that the ear and brain receive when listening to a set of loudspeakers placed in front of the listener. The result is a more natural stereo image that can be especially appreciated in older rock and jazz records, where one instrument is often hard-panned to just one of the speakers. Many people will find such records tiring to listen to using earphones and no crossfeed effect.

Crossfeed has the following settings:

**Crossfeed:** Selects whether the crossfeed effect is to be enabled or not.

**Direct Gain:** How much the level of the audio that travels the direct path from a speaker to the corresponding ear is supposed to be decreased.

**Cross Gain:** How much the level of the audio that travels the cross path from a speaker to the opposite ear is to be decreased.

**High-Frequency Attenuation:** How much the upper frequencies of the cross path audio will be dampened. Note that the total level of the higher frequencies will be a combination of both this setting and the CROSS GAIN setting.

**High-Frequency Cutoff** Decides at which frequency the cross path audio will start to be cut by the amount described by the HIGH-FREQUENCY ATTENUATION setting.

Most users will find the default settings to yield satisfactory results, but for the more adventurous user the settings can be fine-tuned to provide a virtual speaker placement suited to ones preference.

Beware that the crossfeed function is capable of making the audio distort if you choose settings which result in a too high output level.

## 6.8 Equalizer

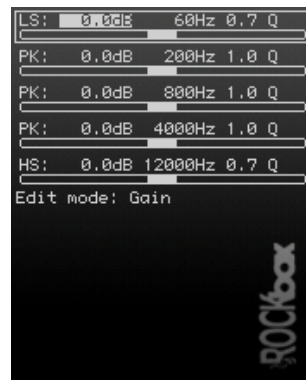


Figure 6.2: The graphical equalizer

Rockbox features a parametric equalizer (EQ). As the name suggests, a parametric EQ lets you control several different parameters for each band of the EQ. In some ways the EQ is similar to the BASS and TREBLE settings described earlier, but the EQ allows you to control the sound much more carefully.

Rockbox’s parametric EQ is composed of five different bands:

**Band 0: Low shelf filter** The low shelf filter boosts or lowers all frequencies below a certain frequency limit, much like what a “bass” control found on ordinary stereo systems does. Adjust the “cutoff” frequency parameter to decide where the shelving starts to take effect. For example, a cutoff frequency of 50 Hz will adjust only very low frequencies. A cutoff frequency of 200 Hz, on the other hand, will adjust a much wider range of bass frequencies. The “gain” parameter controls how much the loudness of the band is adjusted. Positive numbers make the EQ band louder, while negative numbers make that EQ band quieter. The “Q” parameter should always be set to 0.7 for the shelving filters. Higher values will add a small boost around the cutoff frequency that is almost always undesirable.

**Bands 1-3: Peaking filters** Peaking EQ filters boost or lower a frequency range centered at the center frequency chosen. Graphic equalizers in home stereos are usually peaking filters. The peaking filters in Rockbox’s EQ lets you adjust three different parameters for EQ bands 1 through 3. The “center” parameter controls the center frequency of the frequency range that is affected as described above. The “gain” parameter controls how much each band is adjusted, and works as for the low shelf filter. Finally, the “Q” parameter controls how wide or narrow the affected frequency range is. Higher Q values will affect a narrower band of frequencies, while lower Q values will affect a wider band of frequencies.

**Band 4: High shelf filter** A high shelf filter boosts or lowers all frequencies above a

certain frequency limit, much like what a “treble” control found on ordinary stereo systems does. The high shelf filter is adjusted the same way as the low shelf filter, except that it works on the high end of the frequency spectrum rather than the low end.

As a general guide, EQ band 0 should be used for low frequencies, EQ bands 1 through 3 should be used for mids, and EQ band 4 should be used for highs.

**Enable EQ:** This option controls whether the EQ is on or off.

**Graphical EQ:** This option brings up a graphic EQ screen, which allows adjustment of each of the three parameters described above (gain, center frequency, and Q) for each of the five EQ bands.

Key	Action
<b>Scroll Backward</b>	Raises the highlighted parameter.
<b>Scroll Forward</b>	Lowers the highlighted parameter.
<b>Play</b>	Moves to the previous EQ band.
<b>Submenu</b>	Moves to the next EQ band.
<b>Select</b>	Toggles the cursor among the three parameters (gain, center frequency, Q) for the selected EQ band.
<b>Power/Right</b>	Exits the graphic EQ screen.

**Pre-cut:** If too much gain is added through the graphical EQ, your music may distort. The PRECUT setting allows you to adjust the overall gain of the EQ.

If your music distorts when using the EQ, trying changing this setting to a negative value.

**Simple EQ:** This option provides an easier alternative for those who are daunted by all of the parameters that can be adjusted using the graphical EQ. With the SIMPLE EQ, the only parameter that can be adjusted is the gain.

**Advanced EQ:** This sub menu provides options for adjusting the same parameters as the GRAPHICAL EQ. The only difference is that the parameters are adjusted through textual menus rather than through a graphic interface.

**Save EQ Preset:** This option saves the current EQ configuration in a .cfg file.

**Browse EQ Presets:** This menu displays a list of EQ presets, as well as any EQ configurations saved using the SAVE EQ PRESET option. Users unfamiliar with the operation of a parametric EQ may wish to use the presets instead of trying to configure the EQ, or use the presets for designing their own custom EQ settings.

## 6.9 Dithering

This setting controls the dithering and noise shaping functionality of Rockbox.

Most of Rockbox' audio file decoders work at a higher bit depth than the 16 bits used for output on the player's audio connectors. The simplest way to convert from one bit depth to another is simply discarding all the surplus bits. This is the default behaviour, and adds distortion to the signal that will vary in character along with the desired sound.

Dithering adds low-level noise to the signal prior to throwing away the surplus bits, which gives the resulting signal a uniform noise floor which is independent of the signal. Most people find this noise preferable to the time-varying noise heard when not performing dithering.

After dithering, noise shaping is performed. This basically just pushes the dithering noise to the parts of the frequency spectrum humans cannot hear so easily. In Rockbox' case, some of the noise is pushed up to above 10 kHz.

This setting will be put to its best use when listening to dynamic music with frequently occurring quiet parts, classical music being a typical example. It is worth noting that the effects of dithering and noise shaping are very subtle, and not easily noticable.

Rockbox uses highpass triangular distribution noise as the dithering noise source, and a third order noise shaper.

## 7 Playback Settings

The PLAYBACK SETTINGS menu allows you to configure settings related to audio playback.

### 7.1 Shuffle

Turning shuffle on will cause Rockbox to randomly re-order the playlist. Thus, to shuffle all of the audio files on the player, you first need to create a playlist containing all of them. For more information on creating playlists refer to section 4.4 (page 34).

Options: YES/NO.

### 7.2 Repeat

Configures settings related to repeating of directories or playlists.

Options: OFF / ALL / ONE / SHUFFLE / A-B:

**Off** The current playlist will not repeat when it is finished.

**Note:** If you have the AUTO-CHANGE DIRECTORY option set to YES, Rockbox will move on to the next directory on your hard drive. If the AUTO-CHANGE DIRECTORY option is set to NO, playback will stop when the current directory or playlist is finished.



**All** The current playlist will repeat when it is finished.

**One** Repeat one track over and over.

**Shuffle** When the current playlist has finished playing, it will be shuffled and then repeated.

**A-B** Repeats between two user defined points within a track, typically used by musicians when attempting to learn a piece of music. This option is more complicated to use than the others as the player must first be placed into A-B repeat mode and then the start and end points defined.

To set the Start Point (A) press **Power** + **Left**. Setting the End Point (B) is done accordingly using **Power** + **Right**. To reset the markers press **Power** + **Play**.

## 7.3 Play Selected First

This setting controls what happens when you select a file for playback while shuffle mode is on. If the `PLAY SELECTED FIRST` setting is `YES`, the file you selected will be played first. If this setting is `NO`, a random file in the directory will be played first.

## 7.4 Fast-Forward/Rewind

These settings control the speed and acceleration during fast forward and rewind. The setting `FF/RW MIN STEP` controls the initial speed and `FF/RW ACCEL` controls the acceleration.

## 7.5 Fade on Stop/Pause

Enables and disables a fade effect when you pause or stop playing a song. If the `Fade on Stop/Pause` option is set to `YES`, your music will fade out when you stop or pause playback, and fade in when you resume playback.

## 7.6 Party Mode

Enables unstoppable music playback. When new songs are selected, they are queued at the end of the current dynamic playlist instead of being played immediately. Pausing and stopping playback is disabled as well as skipping songs and launching plugins.

## 7.7 Crossfade

This setting enables a cross-fader. At the end of a song, the song will fade out as the next song fades in, creating a smooth transition between songs. The crossfade setting is particularly effective when the player is set on shuffle.

Options for crossfade settings are:

**Enable Crossfade** If set to `OFF`, crossfade is disabled. If set to `SHUFFLE`, crossfade is enabled when the shuffle feature is set to `YES`, but disabled otherwise. If set to `TRACK SKIP ONLY`, tracks will only crossfade when manually skipped. If set to `SHUFFLE AND TRACK SKIP` then crossfade will only be active when shuffle is set to `YES` and the track is manually skipped. If set to `ALWAYS`, tracks will always crossfade into one another.

**Fade In Delay** The “fade in delay” is the length of time between when the crossfade process begins and when the new track begins to fade in.

**Fade In Duration** The length of time, in seconds, that it takes your music to fade in once the `FADE IN DELAY` has ended.

**Fade Out Delay** The “fade out delay” is the length of time between when the crossfade process begins and when the old track begins to fade out.

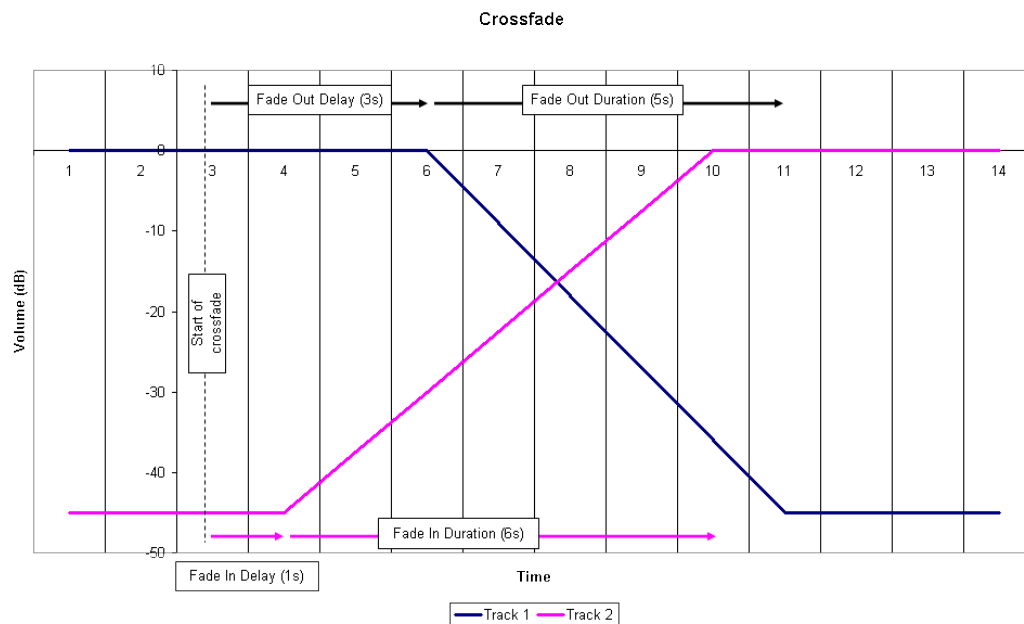
**Fade Out Duration** The length of time, in seconds, that it takes your music to fade out once the FADE OUT DELAY has ended.

**Fade Out Mode** If set to CROSSFADE, one song will fade out and the next song will simultaneously fade in. If set to MIX, the ending song will continue to play as normal until its end, while the starting song will fade in from under it. MIX mode is not used for manual track skips, even if it is selected here.

**Note:** The rules above apply except in the instance where FADE OUT DELAY plus FADE OUT DURATION is less than FADE IN DELAY (which would create a gap in the audio). In this case, the FADE IN DELAY is reduced to eliminate the gap.



The graphic below illustrates how the different settings work in practice.



## 7.8 Replaygain

This allows you to control the replaygain function. The purpose of replaygain is to adjust the volume of the music played so that all songs (or albums, depending on your settings) have the same apparent volume. This prevents sudden changes in volume when changing between songs recorded at different volume levels. For replaygain to work, the songs must have been processed by a program that adds replaygain information to the ID3 tags (or Vorbis tags).

**Note:** APEv2 tags are not currently supported.



Options for replaygain are:



**Enable Replaygain** This turns on/off the replaygain function.

**Prevent Clipping** Avoid clipping of a song's waveform. If a song would clip during playback, the volume is lowered for that song. Replaygain information is needed for this to work.

**Replaygain Type** Choose the type of replaygain to apply:

**Album Gain** Maintain a constant volume level between albums, but keep any intentional volume variations between songs in an album. (If album gain value is not available, uses track gain information).

**Track Gain** Maintain a constant volume level between tracks. If track gain value is not available, no replaygain is applied.

**Track Gain If Shuffling** Maintains a constant volume between tracks if SHUFFLE is set to YES. Reverts to album mode if SHUFFLE is set to NO.


**Pre-amp** This allows you to adjust the volume when replaygain is applied. Replaygain often lowers the volume, sometimes quite much, so here you can compensate for that. Please note that a (large) positive pre-amp setting can cause clipping, unless prevent clipping is enabled. The pre-amp can be set to any decibel (dB) value between -12dB and +12dB, in increments of 0.1dB.


## 7.9 Track Skip Beep

Controls the volume of the beep that is heard when skipping forward or backward between tracks. The beep is disabled when set to OFF.

## 7.10 Auto-Change Directory

Control what Rockbox does when it reaches the end of a directory. If AUTO-CHANGE DIRECTORY is set to YES, Rockbox will continue to the next directory. If AUTO-CHANGE DIRECTORY is set to NO, playback will stop at the end of the current playlist. Using the RANDOM feature requires you to first generate a folder list via the Random Folder Advance Configuration plugin (see section 11.4.11 (page 135)).


**Note:** You must have the REPEAT option set to NO for AUTO-CHANGE DIRECTORY to function properly. 

**Note:** This feature only works when songs have been played from the file browser. Using it with the database may cause unexpected behavior. 

## 7.11 Last.fm Log

Enables logging of your played tracks for submittal to <http://www.last.fm>. This service was formerly known as *Audioscrobbler*. When you enable this option, you'll have to

reboot to start the logging. The log-file is called `.scrobbler.log`, and is to be found in the root directory of your player.

**Note:** See  [LastFMLog](#) for a further description, and for tools you can use to submit your Last.fm log.



## 7.12 Cuesheet Support

Enables reading of cuesheet files for played tracks. If a cuesheet is found for a track, track markers are displayed on the progressbar and it is possible to skip between the tracks within the cuesheet. Also the information found in the cuesheet file will replace the information from the ID3 tags. When you enable this option, you'll have to reboot for it to come into effect.

## 7.13 Skip Length

Designed to speed up navigation when listening to long audio tracks, `SKIP LENGTH` changes the behavior of the **Left** and **Right** buttons so that they skip by a given time instead of skipping to a new track.

## 7.14 Prevent Track Skipping

If this option is enabled, the ability to manually skip tracks is disabled in order to avoid accidental track skips. It does not prevent changing tracks if a track ends, which can be achieved by combining this option with `REPEAT` set to `ONE`

## 8 General Settings

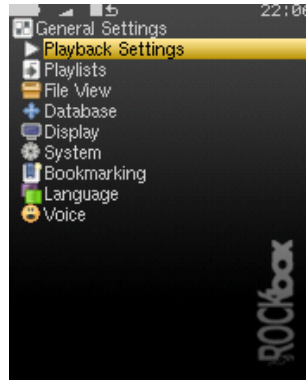


Figure 8.1: The general settings screen

### 8.1 Playlist

The PLAYLIST sub menu allows you to configure settings related to playlists.

**Recursively Insert Directories.** If set to ON, then when a directory is inserted or queued into a dynamic playlist, all subdirectories will also be inserted. If set to ASK, Rockbox will prompt the user about whether to include sub-directories.

**Warn When Erasing Dynamic Playlist.** If set to YES, Rockbox will provide a warning if the user attempts to take an action that will cause Rockbox to erase the current dynamic playlist.

### 8.2 File View

The File View menu deals with options relating to how the File Browser displays files.

**Sort Case Sensitive:** If this option is set to YES, all files that start with upper case letters will be listed first, followed by all files that begin with lower case letters. If this option is set to NO, then case will be ignored when sorting files.

**Sort Directories:** This option controls how Rockbox sorts directories. The default is to sort them alphabetically. BY DATE sorts them with the oldest directory first. BY NEWEST DATE sorts them with the newest directory first.

**Sort Files:** This option controls how Rockbox sorts files. All of the options for SORT DIRECTORIES are available in this option. In addition, there is a BY TYPE option which sorts files alphabetically by their type (such as .mp3) then alphabetically within each type.

**Interpret numbers when sorting:** AS WHOLE NUMBERS enables a sorting algorithm which is similar to the default sorting of, for example, Windows Explorer, Mac OS X's Finder or Nautilus, with regards to numbers at the beginning or within filenames. It combines consecutive digits to a number used for sorting, taking leading zeros into account.

AS DIGITS disables this algorithm, and causes every digit to be compared separately. The following table demonstrates the two sortings.

As whole numbers	As digits
03 Jackson.mp3	03 Jackson.mp3
1 Ring Of Fire.mp3	1 Ring Of Fire.mp3
2 I Walk The Line.mp3	10 A Thing Called Love.mp3
10 A Thing Called Love.mp3	2 I Walk The Line.mp3
Episode 1.ogg	Episode 1.ogg
Episode 57.ogg	Episode 233.ogg
Episode 233.ogg	Episode 57.ogg

**Show Files:** This option controls which files are displayed in the File Browser.

**All:** The FILE BROWSER displays all files and directories. Extensions are shown. No files or directories are hidden.

**Supported:** The FILE BROWSER displays all directories and files supported by Rockbox (see section A.1 (page 150)). Files and directories starting with . (dot) or with the *hidden* flag set are hidden.

**Music:** The FILE BROWSER displays only directories, playlists and the supported *audio* file formats. Extensions are stripped. Files and directories starting with . or with the “hidden” flag set are hidden.

**Playlists:** The FILE BROWSER displays only directories and playlists, for simplified navigation.

**Show Filename Extensions:** This option controls how file extensions are shown in the File Browser.

**Off:** The file extensions are never shown.

**On:** The file extensions are always shown.

**Only unknown types:** Only the extensions of unknown filetypes are shown.

**Only when viewing all types:** Only show file extensions when SHOW FILES is set to ALL.

**Follow Playlist:** This option determines what directory the FILE BROWSER displays first. If FOLLOW PLAYLIST is set to YES, when you enter the FILE BROWSER from the WPS, you will find yourself in the same directory as the currently playing file. If FOLLOW PLAYLIST is set to NO, when you enter the FILE BROWSER from the WPS, you will find yourself in the directory you were in when you last left the FILE BROWSER.

**Show Path:** If this setting is set to FULL PATH the full path to the current directory will be displayed on the first line in the FILE BROWSER. If set to CURRENT DIRECTORY ONLY only the name of the current directory will be displayed.

This has a similar effect on the Database browser. If set to CURRENT DIRECTORY ONLY or FULL PATH, then the title of each menu will be displayed on the first line in the DATABASE BROWSER.

## 8.3 Database

This sub menu allows you to configure the database. See section 4.2 (page 27) for more information about using the database.

## 8.4 Display

**LCD Settings:** This sub menu contains settings that relate to the display of the player.

**Backlight:** The amount of time the backlight shines after a key press. If set to OFF, the backlight will not light when a button is pressed. If set to ON, the backlight will never shut off. If set to a time (1 to 90 seconds), the backlight will stay lit for that amount of time after a button press.

**Backlight (While Plugged In):** This setting is equivalent to the BACKLIGHT setting except it applies when the player is plugged into the charger.

**Backlight on Hold:** This setting controls the behavior of the backlight when the Hold switch is toggled. If set to NORMAL the backlight will behave as usual. If set to OFF the backlight will be turned off immediately when the Hold switch is engaged and if set to ON the backlight will be turned on and stay on while the Hold switch is engaged.

**Caption Backlight:** This option turns on the backlight a number of seconds before the start of a new track, and keeps it on for the same number of seconds after the beginning so that the display can be read to see song information. The amount of time is determined by the value of the backlight timeout setting, but is no less than 5 seconds.

**Backlight Fade In:** This options turns on smooth backlight fading when the backlight is turning on. The fading time may dependent on the brightness level you have chosen. If it is turned off, the backlight will turn on immediately.

**Backlight Fade Out:** This options turns on smooth backlight fading when the backlight is turning off. The fading time may dependent on the brightness level you have chosen. If it is turned off, the backlight will turn off immediately.

**First Keypress Enables Backlight Only:** With this option enabled the first keypress while the backlight is turned off will only turn the backlight on without having any other effect. When disabled the first keypress will *also* perform its appropriate action.

**Sleep (After Backlight Off):** This setting controls how long rockbox will wait before turning off the display after the backlight is turned off. Turning off the display saves a little bit of battery power but turning on the display takes noticeably longer than just turning on the backlight.

**Brightness:** Changes the brightness of your LCD display.

**LCD Mode:** This setting lets you invert the colours of the display.

**Upside Down:** Displays the screen so that the top of the display is nearest the buttons. This is sometimes useful when carrying the player in a pocket for easy access to the headphone socket.

**Scrolling** This feature controls how text will scroll in Rockbox. You can configure the following parameters:

**Scroll Speed:** Sets how many times per second the automatic horizontal scrolling text will move a step.

**Scroll Start Delay:** Controls how many milliseconds Rockbox should wait before a new text begins automatically scrolling.

**Scroll Step Size:** Defines the number of pixels the text should move for each step, as used by the Scroll Speed setting.

**Bidirectional Scroll Limit:** Rockbox has two different automatic horizontal scrolling methods: 1) always scrolling the text to the left until the line has ended and then beginning again at the start, and 2) moving to the left until you can read the end of the line and then scrolling right until you see the beginning again. Rockbox chooses which method it should use depending of how much it has to scroll to the left. This setting lets you tell Rockbox where that limit is, expressed in percentage of the line length.

**Screen Scrolls Out of View:** Screens can be manually scrolled horizontally by pressing Long **Right/Left**. Setting this option to YES will keep the list entries at their fixed positions and allow them to be scrolled out of view, whereas NO will only scroll those entries which surpass the right margin.

**Screen Scroll Step Size:** Defines the number of pixels the horizontal manual screen scroll should move for each step.

**Paged Scrolling:** When set to YES scrolling vertically on pages that surpass the screen size will page up/down instead of simply changing lines. This can be useful on slow displays.

**Status/Scrollbar:** Settings related to on screen status display and the scrollbar.

**Scroll Bar:** Enables or disables the scroll bar at the left.

**Status Bar:** Enables or disables the status bar at the upper side.

**Volume Display:** Controls whether the volume is displayed as a graphic or a numeric value on the Status Bar. If you select a numeric display, volume is displayed in decibels. See section 6.1 (page 48) for more on the volume setting.

**Battery Display:** Controls whether the battery charge status is displayed as a graphic or numerical percentage value on the Status Bar.

**Peak Meter:** The peak meter can be configured with a number of parameters.

**Peak Release:** This determines how fast the bar shrinks when the music becomes softer. Lower values make the peak meter look smoother. Expressed in scale units per 10ms.

**Peak Hold Time:** Specifies the time after which the peak indicator will reset. For example, if you set this value to 5s, the peak indicator displays the loudest volume value that occurred within the last 5 seconds. Larger values are useful if you want to find the peak level of a song, which might be of interest when copying music from the player via the analogue output to some other recording device.

**Clip Hold Time:** The number of seconds that the clipping indicator will be visible after clipping is detected.

**Clip Counter:** Show the number of times the clip indicator went active during recording in front of the peak meters.

**Scale:** Select whether the peak meter displays linear or logarithmic values. The human ear perceives loudness on a logarithmic scale. If the Scale setting is set to LOGARITHMIC (dB) scale, the volume values are scaled logarithmically. The volume meters of digital audio devices usually are scaled this way. On the other hand, if you are interested in the power level that is applied to your headphones you should choose LINEAR display. This setting cannot be displayed in units like volts or watts because such units depend on your headphones.

**Minimum and maximum range:** These two options define the full value range that the peak meter displays. Recommended values for the LOGARITHMIC (dB) setting are -40 dB for minimum and 0 dB for maximum. Recommended values for LINEAR display are 0 and 100%. Note that -40 dB is approximately 1% in linear value, but if you change the minimum setting in linear mode slightly and then change to the dB scale, there will be a large change. You can use these values for ‘zooming’ into the peak meter.

**Default Codepage:** A codepage describes the way extended characters that are not available within the ASCII character set are encoded. ID3v1 tags do not have a codepage encoding contained so Rockbox needs to know what encoding has been

used when generating these tags. This should be “ISO-8859-1” but to support languages outside Western Europe most applications use the setting of your operating system instead. If your operating system uses a different codepage and you are getting garbled extended characters you should adjust this settings. In most cases sticking to “ISO-8859-1” would be sufficient.

## 8.5 System

### 8.5.1 Start Screen

Set the screen that Rockbox will start in. Selecting RESUME PLAYBACK will resume playback where it was when the player was shut off if there is a playlist to resume and will then end up in the WPS. Selecting PREVIOUS SCREEN will make Rockbox start in the screen it was when the player was shut off.

### 8.5.2 Disk

Options relating to the hard disk.

**Directory Cache:** Rockbox has the ability to cache the contents of your drive in RAM. The DIRECTORY CACHE takes a small amount of memory away from Rockbox that would otherwise be used to buffer music, but it speeds up navigation in the file browser by eliminating the slight pause between the time a navigation button is pressed and the time Rockbox responds. Turning this setting on activates the directory cache, and turning it off deactivates the directory cache.

**Note:** The first time you enable the directory cache, Rockbox will request a reboot of the player and upon restarting take a few minutes to scan the drive. After this, the directory cache will work in the background.



### 8.5.3 Idle Poweroff

Rockbox can be configured to turn off power after the unit has been idle for a defined number of minutes. The player is idle when playback is stopped or paused. It is not idle while the USB or charger is connected, or while recording. Settings are either OFF or 1 to 10 minutes in 1 minute steps. Then 15,30,45 and 60 minutes are available.

### 8.5.4 Limits

This sub menu relates to limits in the Rockbox operating system.

**Max Entries in File Browser:** This setting controls the limit on the number of files that you can put in any particular directory in the file browser. You can configure the size to be between 50 and 10,000 files in steps of 50. The default is 400. Higher values will shorten the music buffer, so you should increase this setting *only* if you have directories with a large number of files.



**Max Playlist Size:** This setting controls the maximum size of a playlist. The playlist size can be between 1,000 and 32,000 files, in steps of 1,000 (default is 10,000). Higher values will shorten the music buffer, so you should increase this setting *only* if you have very large playlists.

### 8.5.5 Car Adapter Mode

This option turns ON and OFF the car ignition auto stop function.

**Car Adapter Mode:** When using the player in a car, CAR ADAPTER MODE automatically stops playback on the player when power (i.e. from cigarette lighter power adapter) to the external DC in jack is turned off. If the CAR ADAPTER MODE is set to ON, Rockbox will pause playback when the external power off condition is detected. Rockbox will then shutdown the player after the length of time set in the IDLE POWEROFF setting (see above). If power to the DC in jack is turned back on before the *Idle Poweroff* function has shut the player off, playback will be resumed 5 seconds after the power is applied. This delay is to allow for the time while the car engine is being started.

Once the player is shut off either manually, or automatically with the IDLE POWEROFF function, it must be powered up manually to resume playback.

### 8.5.6 Wheel Light Timeout

This setting controls the amount of time the wheel lights shine after a button press or wheel turn. If set to OFF, the LEDs will not light when a button is pressed. If set to ON, the lights will never shut off. If set to a time (1 to 120 seconds), the wheel will stay lit for that amount of time after a button press or wheel turn.

## 8.6 Bookmarking

Bookmarks allow you to save your current position within a track so that you can return to it at a later time. Bookmarks are saved on a per directory basis (for dynamic playlists) or for individual (saved) playlists. They are stored next to the directory/playlist they reference. You can store multiple bookmarks for the same track.

**Bookmark on Stop.** This option controls whether Rockbox writes a bookmark to the disk when playback is stopped. Setting this to NO turns automatic bookmarking completely off. In contrast YES turns automatic bookmarking on while ASK asks on stopping the track if a bookmark should be created. With the above options YES and ASK if there is an existing `.bmark` file the current position information will be added to the front of the existing list, up to the maximum number of allowed bookmarks per file (currently 10). If no `.bmark` file exists, one will be created with the new bookmark information. Finally, if the MAINTAIN A LIST OF RECENTLY USED BOOKMARKS option is enabled, the bookmarking information will be added to recent bookmarks list.

**Yes – Recent Only.** Turns on automatic bookmarking – One bookmark only

**Ask – Recent Only.** Asks if a bookmark should be created when stopping track – One bookmark only

With the two RECENT ONLY options, nothing is written to the `.bmark` file. If the MAINTAIN A LIST OF RECENTLY USED BOOKMARKS option is enabled, the bookmarking information will however be added to recent bookmarks list.

**Note:** The RESUME function remembers your position in the most recently accessed track regardless of how the BOOKMARK ON STOP option is set.



**Load Last Bookmark.** When the LOAD LAST BOOKMARK option is set to YES, Rockbox automatically returns to the position of the last bookmark within a file when that file is played.

When the LOAD LAST BOOKMARK option is set to ASK, Rockbox will give the user the option of starting from the beginning of the track or from the bookmark.

When the LOAD LAST BOOKMARK option is set to NO, playback always starts from the beginning of the track, and the user must play the bookmark or use the LOAD BOOKMARK function in the Main Menu, while the file is playing, to resume at the bookmarked location.

**Maintain a list of Recently Used Bookmarks.** This list of Most Recent Bookmarks (MRB's) may be accessed through the RECENT BOOKMARKS option of the BOOKMARKS sub menu of the Main Menu. When set to YES each new bookmark will be added to the MRB list. Setting this to NO disables the addition of bookmarks to the MRB list. UNIQUE ONLY behaves like the YES setting but in addition all older entries for the current (dynamic) playlist will be removed from the MRB whenever a new entry is added.

**Bookmark list keys.** The following keys can be used to navigate in any bookmark list.

Key	Action
<b>Scroll Forward</b>	Selects the next bookmark.
<b>Scroll Backward</b>	Selects the previous bookmark.
<b>Select or Right Left</b>	Resumes from the selected bookmark. Exits Recent Bookmark menu
<b>Rec</b>	Deletes the currently selected bookmark
<b>Long Select</b>	Enters the context menu for the selected bookmark.

There are two options in the context menu:

RESUME will commence playback of the currently selected bookmark entry.

DELETE will remove the currently selected bookmark entry from the list.

## 8.7 Language

This setting controls the language of the Rockbox user interface. Selecting a language will activate it. The language files must be in the `/.rockbox/langs/` directory. See section 12.1.3 (page 141) for further details about languages.

## 8.8 Voice

**Voice Menus.** This option controls the voicing of menus/settings as they are selected by the cursor. In order for this to work, a voice file must be present in the `/.rockbox/langs/` directory on the player. Voice files are large and are not shipped with Rockbox by default. The voice file is the name of the language for which it is made, followed by the extension `.voice`. So for English, the file name would be `english.voice`. This option is on by default, but will do nothing unless the appropriate voice file is installed in the correct place on the player. The Voice Menus have several limitations:

- Setting the Sound Option CHANNELS to KARAOKE may disable voice menus.
- Plugins and the wake up alarm do not support voice features.

**Voice Directories.** This option controls voicing of directory names. A voice file must be present for this to work. Several options are available.

**Spell.** Speak the directory name by spelling it out letter by letter. Support is provided only for the most common letters, numbers and punctuation.

**Numbers.** Each directory is assigned a number based upon its position in the file list. They are then announced as “Directory 1”, “Directory 2” etc.

**Off.** No attempt will be made to speak directory names.

You can use pre-generated `.talk` clips to have directory names spoken properly, but you must enable this explicitly (see below).

**Use Directory .talk Clips.** This option turns on the use of `.talk` clips for directories.

**On.** Use special pre-recorded MP3 files (`_dirname.talk`) in each directory. These must be generated in advance, and are typically produced synthetically using a text-to-speech engine on a PC.

**Off.** No checking is made for directory `.talk` clips; they are not used even if present. This can reduce disk activity.

Use of a `.talk` clip takes precedence over other directory name voicing. Otherwise (e.g. if a `.talk` clip is not available), voicing uses the method set under VOICE DIRECTORIES above.

**Voice Filenames.** This option controls voicing of filenames. Again, a voice file must be present for this to work. The options provided are SPELL, NUMBERS, and OFF which function the same as for VOICE DIRECTORIES. You can use pre-generated .talk clips to have filenames spoken properly, but you must enable this explicitly (see below).

**Use File .talk Clips.** This option turns on the use of .talk clips for files.


**On.** Use special pre-recorded MP3 files for each file. This functions the same as for directories except that the .talk clip file must have the same name as the described file with an extra .talk extension (e.g. Punkadiddle.mp3 would require a file called Punkadiddle.mp3.talk).

**Off.** No checking is made for file .talk clips; they are not used even if present. This can reduce disk activity.

Use of a .talk clip takes precedence over other filename voicing. Otherwise (e.g. if a .talk clip is not available), voicing uses the method set under VOICE FILENAMES above.

**Say File Type.** This option turns on voicing of file types when VOICE FILENAMES is set to SPELL or NUMBERS. When VOICE DIRECTORIES is set to SPELL, “Directory” will be voiced after each spelled out directory.

**Announce Battery Level.** When this option is enabled the battery level is announced when it falls under 50%, 30% and 15%.

See  [VoiceHowto](#) for more details on configuring speech support in Rockbox.

## 9 Theme Settings

The **THEME SETTINGS** menu offers options that you can change to customize the visual appearance of Rockbox.

**Browse Themes.** This option will display all the currently installed themes on the player, press **Select** or **Right** to load the chosen theme and apply it.

A theme is a configuration file, stored in a specific directory, that typically changes the WPS, font used and on some platforms additional information such as background image and text colours.

There are a number of themes that ship with Rockbox. If none of these suit your needs, many more can be downloaded from [. Some of the downloads from this website will actually be standalone WPS files, others will be full-blown themes.](#)

**Note:** Themes do not have to be purely visual. It is quite possible to create a theme that switches between audio configurations for use in the car, with headphones and when connected to an external amplifier. See section [12.2.2](#) (page [143](#)) for more details.



**Browse Fonts.** Browse the installed fonts on your player. Selecting one will activate it. See section [12.1.2](#) (page [141](#)) for further details about fonts.

**Browse WPS files.** Opens the **FILE BROWSER** in the `/.rockbox/wps` directory and displays all `.wps` files. Selecting one will activate it, stop will exit back to the menu. For further information about the WPS see section [4.3](#) (page [29](#)). For information about editing a `.wps` file see section [12.2](#) (page [143](#)).

**Show Icons.** Rockbox has the ability to display an icon to the left of the file in the **FILE BROWSER**. For details of these icons, see section [A.1](#) (page [150](#)). These icons can also be customised. See the [IconSets](#) and [CustomIcons](#) Wiki pages for details.

**Clear Backdrop:** Rockbox allows you to select bitmap pictures to use as backdrops, see section [12.1.5](#) (page [143](#)) for further information. This option allows you to clear the backdrops that you set.

**Line Selector Type.** This option allows you to select which type of line selector to use.

**Pointer:** A small arrow to the left of the menu text.

**Bar (inverse):** A bar with inverted foreground and background colour.

**Bar (Solid Colour):** A bar with a solid colour, the colour is set in the **COLOURS** submenu.

**Bar (Gradient Colour):** A bar with a colour gradient, the colours are set in the COLOURS submenu.

**Colours.** The options in this menu sets the colours for visual elements in Rockbox.

**Line Selector Colours.** These options sets the colours for the line selector bars.

**Primary Colour:** Set the primary colour used for the gradient line selector bar and the colour used for the solid color line selector bar.

**Secondary Colour:** Set the secondary colour used for the gradient line selector bar.

**Text Colour:** Set the colour of the selected text when using the solid colour or the gradient colour line selection bars.

**Background Colour:** Sets the background colour for the display.

**Foreground Colour:** Sets the colour used for text and icons.

**Reset Colours:** Resets the LCD display to Rockbox's default colours.

## 10 Recording Settings

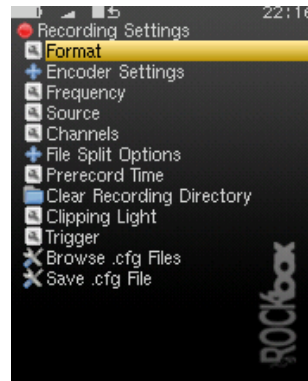


Figure 10.1: The recording settings screen

**Note:** To change the location where recordings are stored open the CONTEXT MENU (see section 4.1.2 (page 24)) on the directory where you want to store them in the FILE BROWSER and select SET AS RECORDING DIRECTORY.



### 10.1 Format

Choose which format to save your recording in. The available choices are the two uncompressed formats PCM WAVE and AIFF, the losslessly compressed WAVPACK and the lossy MPEG LAYER 3.

### 10.2 Encoder Settings

This sets the bitrate when using the MPEG LAYER 3 format. And has no settings for the other formats.

### 10.3 Frequency

Recordings can only be made at a 22.05kHz frequency (sample rate) on this player.

## 10.4 Source

Choose the source of the recording. The options are: MIC. For recording from the radio see section 5.9 (page 44).

## 10.5 Channels

This allows you to select mono or stereo recording. Please note that for mono recording, only the left channel is recorded. Mono recordings are usually somewhat smaller than stereo.

## 10.6 Mono Mode

When configured to record to mono and the source is a stereo signal, use this setting to configure how the mono signal is created. Options are L, R and L+R.

## 10.7 File Split Options

This sub menu contains options for file splitting, which can be used to split up long recordings into manageable pieces. The splits are seamless (frame accurate), no audio is lost at the split point. The break between recordings is only the time required to stop and restart the recording, on the order of 2 – 4 seconds.

**Split Measure:** This option controls whether to split the recording when the SPLIT FILE-SIZE is reached or when the SPLIT TIME has elapsed.

**What to do when Splitting:** This controls what will happen when the splitting condition is fulfilled the two available options here are START A NEW FILE or STOP RECORDING.

**Split Time:** Set the time to record between each split, if time is used as SPLIT MEASURE. Options (hours:minutes between splits): Off, 00:05, 00:10, 00:15, 00:30, 1:00, 1:14 (74 minute CD), 1:20 (80 minute CD), 2:00, 4:00, 8:00, 10:00, 12:00, 18:00, 24:00.

**Split Filesize:** Set the filesize to record between each split, if filesize is used as SPLIT MEASURE.

## 10.8 Prerecord Time

This setting buffers a small amount of audio so that when the record button is pressed, the recording will begin from that number of seconds earlier. This is useful for ensuring that a recording begins before a cue that is being waited for.



## 10.9 Clear Recording Directory

Resets the location where the recorded files are saved to the root of your player's drive.

## 10.10 Clipping Light

Causes the backlight to flash on when clipping has been detected.

Options: OFF, MAIN UNIT ONLY, MAIN AND REMOTE UNIT, REMOTE UNIT ONLY.

## 10.11 Trigger

When you record a source you often are only interested in the sound and not the silence in between. The recording trigger provides you with a tool to automatically distinguish between sound and silence and record the sound only. Unfortunately it is not very easy to make this distinction between silence and sound because you hardly ever encounter real silence. There always are background noises. What is considered as background noise depends on the situation. For example during a lecture the very low noise of rustling paper might be considered as background noise. During a rock concert the murmur of the audience might be considered background noise which is much louder compared to rustling paper. Also the duration of the signal matters. When you record speech you want to record every syllable. When you record live music you may not be interested in that chord the guitarist strokes for two minutes before the show to verify his amp is turned on. The trigger features numerous parameters to adapt its behaviour to the desired situation.

**Trigger** This parameter specifies the trigger mode. When set to OFF the recording must be started manually and apart from the Prerecord time no other parameter has any effect. ONCE will have the trigger start one recording only; after the recording has finished the input signal will not start another recording. REPEAT will have the trigger start multiple recordings.

**Trigtype** **Add description of Trigtype** Options: STOP, PAUSE, NEW FILE.

**Prerecord Time** This specifies the time that is included into the recording before the trigger event occurs. This is very useful if you record a signal that fades in. Usually you want to set the prerecord time  $\geq$  start duration. That ensures that you record the entire sound. Strictly speaking the prerecord time is not a special parameter of the trigger. It is available during normal recordings too.

**Start Above** The start threshold defines the minimal volume a sound must have to start the recording. It is displayed numerically in the line "Start Above". Note that the unit of the threshold depends on the settings of the peak meter. (i.e. When the peak meter displays db you can adjust the level in db and when the peak meter is set to linear the threshold is displayed as percentage.) In the peak meter at the bottom of the screen the start threshold is displayed graphically by a little triangle


pointing to the right. There are two special values. The value OFF turns the start condition off. With this setting you have to start the recording manually and the trigger only stops the recording according to the stop condition. The setting -INF sets the trigger to the absolute minimum. This setting only makes sense when you record via a digital input as even the noise of the device itself would exceed this threshold immediately.

**for at least** The start duration defines the minimal duration that a signal must exceed the start threshold to start the recording. Depending on your situation you may want to set this setting to 0 (e.g. when copying a song from a commercial medium) or to quite big values. Because sound is not continuous by nature (think of percussion) neglectable dropouts are tolerated during this start duration.

**Stop Below** When the sound level drops below the stop threshold the recording is stopped. It is displayed numerically in the line "Stop Below". Just like the start threshold the unit of the stop threshold depends on the settings of the peak meter. There's also a small triangular marker in the peak meter at the bottom of the screen. In contrast to the start threshold marker it points to the left. The value OFF turns the stop condition off. With this setting you have to stop the recording manually.

**for at least** This time specifies the duration the signal must drop below the stop threshold to stop the recording. By selecting high values you can ensure that, for example, trailing fade-outs are recorded entirely.

**Presplit Gap** When the signal drops below the stop threshold for the time specified by the presplit gap a new recording may be started when the signal raises above the start threshold. Thus the value of the presplit gap should be smaller than the stop hold time. Otherwise the recording would stop anyway and the presplit gap has no effect. For most uses I recommend to set this parameter equal to the stop hold time. Sometimes you may encounter a sound source (e.g. a CD) where the songs have fade outs and hardly any gaps between the tracks. Here you can set the stop hold time to long values to ensure that all fade outs are recorded completely. By specifying a short presplit gap you still can split the recording into separate tracks whenever the trigger start condition is met.

More information can be found at  [VolumeTriggeredRecording](#).

# 11 Plugins

Plugins are programs that Rockbox can load and run. Only one plugin can be loaded at a time. Plugins have exclusive control over the user interface. This means you cannot switch back and forth between a plugin and Rockbox. When a plugin is loaded, you need to exit it to return to the Rockbox interface. Most plugins will not interfere with music playback but some of them will stop playback while running. Plugins have the file extension `.rock`. Most of them can be started from BROWSE PLUGINS in the MAIN MENU.

Viewer plugins get started automatically by opening an associated file (i.e. text files, chip8 games), or from the OPEN WITH option on the CONTEXT MENU.

## 11.1 Games

See also the Chip-8 emulator in section 11.3.2 (page 117) and Rockboy in section 11.3.8 (page 122).

### 11.1.1 Blackjack



Figure 11.1: Blackjack

Blackjack, a game played in casinos around the world, is now available in the palm of your hand! The rules are simple: try to get as close to 21 without going over or simply beat out the dealer for the best hand. Although this may not seem difficult, blackjack is a game renowned for the strategy involved. This version includes the ability to split, buy insurance, and double down.

For the full set of rules to the game, and other fascinating information visit <http://www.blackjackinfo.com/blackjack-rules.php>

Key	Action
<b>In menu</b>	
<b>Select</b>	Start new game
<b>Rec</b>	Resume saved game
<b>Play</b>	Show high scores
<b>Power</b>	Quit
<b>In game</b>	
<b>Left / Right /</b>	
<b>Scroll Forward /</b>	Enter betting amount
<b>Scroll Backward</b>	
<b>Select</b>	Hit (Draw new card)
<b>Right</b>	Stay (End hand)
<b>Left</b>	Double down
<b>Rec</b>	Save game
<b>Power</b>	Return to menu or cancel

### 11.1.2 BrickMania

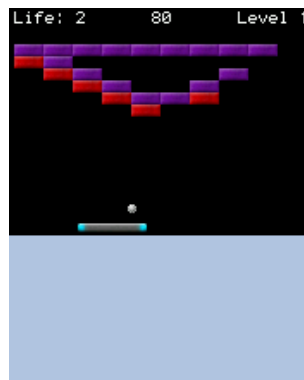


Figure 11.2: BrickMania

BrickMania is a clone of the classic game Breakout. The aim of the game is to destroy all the bricks by hitting them with the ball once or more. Sometimes a special item falls down when you destroy a brick. For a special item to take effect, you must catch it with the paddle. Look out for the bad ones.

### Special items

Displayed	Name	Description
N	Normal	Returns paddle to normal.
D	Die	Ball dies; lose a life.
L	Life	Gain a life.
F	Fire	Allows you to shoot bricks with paddle.
G	Glue	Ball sticks to paddle each time it hits.
B	Ball	Immediately fires another ball.
FL	Flip	Flip left / right movement.

Key	Action
<b>Left / Right</b>	
<b>Scroll Backward</b>	Moves the paddle
<b>/ Scroll Forward</b>	
<b>Select</b>	Release the ball / Fire
<b>Power</b>	Open menu / Quit

### 11.1.3 Bubbles



Figure 11.3: Bubbles

The goal of the game is to beat each level as quickly as possible by clearing the board of all bubbles. Bubbles are removed from the board when a cluster of three or more of the same type is formed. The game is over when any bubbles on the board extend below the bottom line. To make things more difficult, the entire board is shifted down every

time a certain number of shots have been fired. Points are awarded depending on how quickly the level was completed.

Key	Action
<b>Play</b>	Pause game
<b>Left / Right</b>	Aim the bubble
<b>Select</b>	Fire bubble
<b>Submenu</b>	Save game
<b>Power</b>	Exit to menu

### 11.1.4 Chessbox



Figure 11.4: Chessbox

Chessbox is a one-person chess game with computer artificial intelligence. The chess engine is a port of GNU Chess 2 by John Stanback.

It also works as a PGN file viewer. Instead of executing the game from the plugin menu, look for any file with `.pgn` extension in the file browser and execute it. Chessbox will show the list of matches included in the file and allow you to select the one you want to watch. After that, you can scroll back and forth through the moves of the game. If the menu is invoked while in the viewer, the user is allowed to select a new match from the same file or quit the game.

“Force play” while the computer is thinking will cause it to make its move immediately. If done while it’s your turn, the computer will move for you and flip the board so that you are playing from the other side. If you want, you can force play an entire game and watch the artificial intelligence fight against itself.

When you quit the game the current state will be saved and restored when you resume the game. The menu also allows the user to reload the last game saved, save the current position and start a new game without having to quit the game.

**Keys**

Key	Action
Direction keys	Move the cursor
<b>Select</b>	Pick up / Drop piece
<b>Rec</b>	Change level
<b>Select+Right</b>	Force play
<b>Power</b>	Show the menu

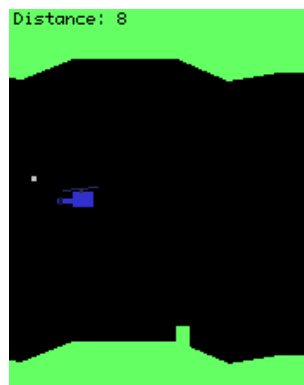
**11.1.5 Chopper**

Figure 11.5: Chopper

Navigate a cavernous maze without banging into walls, the ceiling, or the floor. How long can you fly your chopper?

Key	Action
<b>Select</b>	Make chopper fly
<b>Power</b>	Enter menu

**11.1.6 Dice**

Dice is a simple dice rolling simulator. Select number and type of dice to roll in a menu and start by choosing “Roll Dice”. The result is shown as individual numbers as well as the total of the rolled dice.

Key	Action
Play	Roll dice again
Power	Quit

### 11.1.7 Doom



Figure 11.6: Doom

This is the famous Doom game.

#### Getting started

For the game to run you need `.wad` game files located in `/.rockbox/doom/` on your player. Create the directory and save the following files there:

**rockdoom.wad.** The Rockbox `.wad`, based on `prboom.wad` from `prboom-2.2.6`

**Your wad files.** Copy all Doom wads you wish to play into that directory.

The needed files can be found at [PluginDoom](#)

To play addon wads create the `addons` directory within the doom directory. Place `wad` files in this directory. Currently doom only supports a maximum number of 10 addons.

A free alternative for Doom 2 is FreeDoom (<http://freedoom.sourceforge.net>). This can be used in place of `doom2.wad`, or it may be used as an addon in Doom, by placing it in the `addons` directory.

#### Menus

**Rockdoom Menu.** The Rockdoom menu is shown when Doom is first launched. This is the only time it can be accessed (before starting the game). To re-adjust Rockdoom options, you will need to quit your current game and restart the plugin.



**Main Menu.** The Doom plugin has a main menu, which is brought up before a game is started. It has the following entries:

- Game.* Select which (official) wad to launch
- Addon.* Select which unofficial addon wad to launch (From / .rockbox/doom/addons directory)
- Demos.* Select which demo file to play on game start
- Options.* Configure low-level Doom options
- Play Game.* Launch the wad/addon/Demo chosen

**Options Menu.** This menu has the following options:

- Sound.* Enable or Disable sound in Doom
- Set Keys.* Change the game key configuration
- Time Demo.* Run a timed demo, to test game speed on a player (Only runs on Doom Shareware)
- Player Bobbing.* Enable or Disable player up/Down movement
- Translucency.* Enable or Disable sprite translucency (Fireballs, Plasma...)
- Fake Contrast.* Enable or Disable modified game lighting
- Always Run.* Make the player always run
- Headsup Display.* Show the player status when in fullscreen
- Statusbar Always Red.* Disable color response statusbar

**InGame Main Menu.** This menu can only be accessed from within a running game, and is displayed by pressing **Power**

- New Game.* Start a new game
- Options.* In game options
- Load Game.* Load a saved game
- Save Game.* Save the current game
- Quit.* Quit the game

**InGame Options Menu.** This menu has the following options:

- End Game.* Ends the current game
- Messages.* Enable or Disable in game messages
- Screen Size.* Shrink or Enlarge the displayed portion of the game
- Gamma.* Change the brightness (Gamma) of the game
- Sound Volume.* Change the sound, music and system volume

**Note:** In game music is not currently supported



**Keys**

Key	Action
<b>Play</b>	Move Forward
<b>Submenu</b>	Down
<b>Left</b>	Turn Left
<b>Right</b>	Turn Right
<b>Select</b>	Shoot
<b>Rec</b>	Open
<b>Power</b>	InGame Menu
<b>Select</b>	Enter
<b>Scroll Forward</b>	Change Weapon

**Playing the game**

After installation of the wad files is complete you can start the game. **more description is needed**

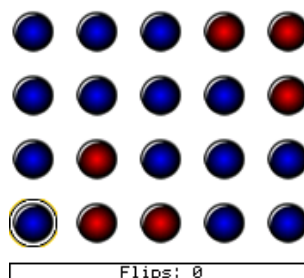
**11.1.8 Flipit**

Figure 11.7: Flipit

Flipping the colour of the token under the cursor also flips the tokens above, below, left and right of the cursor. The aim is to end up with a screen containing tokens of only one colour.

Key	Action
<b>Play / Submenu</b> <b>/ Left / Right</b>	Move the cursor
<b>Select</b>	Flip
<b>Rec+Left</b>	Shuffle
<b>Rec+Right</b>	Solve
<b>Rec+Select</b>	Solve step by step
<b>Power</b>	Quit the game

### 11.1.9 Goban

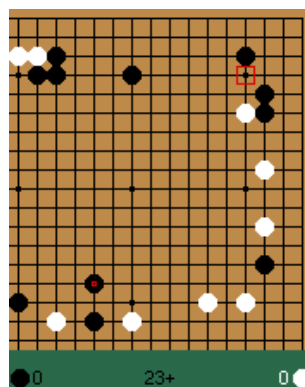


Figure 11.8: Goban

Goban is a plugin for playing, viewing and recording games of Go (also known as Weiqi, Baduk, Igo and Goe). It uses standard Smart Game Format (SGF) files for saving and loading games.

You can find a short introduction to Go at <http://senseis.xmp.net/?WhatIsGo> and more information about SGF files can be read at <http://senseis.xmp.net/?SmartGameFormat> or the SGF specification at <http://www.red-bean.com/sgf/>.

This plugin can load all modern SGF files (file format 3 or 4) with few problems. It attempts to preserve SGF properties which it doesn't understand, and most common SGF properties are handled fully. It is possible to view (and edit if you like) Kogo's Joseki Dictionary (<http://waterfire.us/joseki.htm>) with this plugin, although the load and save times can be on the order of a minute or two on particularly slow devices. Large SGF files may stop audio playback for the duration of the plugin's run in order to free up more memory and some very large SGF files will not even load on devices with little available memory.

*Note:* The plugin does *NOT* support SGF files with multiple games in one file. These are rare, but if you have one don't even try it (the file will most likely be corrupted if

you save over it). You have been warned.

The file `"/sgf/gbn_def.sgf"` is used by the plugin to store any unsaved changes in the most recently loaded game. This means that if you forget to save your changes, you should load `"/sgf/gbn_def.sgf"` immediately to offload the changes to another file. If you load another file first then your changes will be lost permanently. The `"/sgf/gbn_def.sgf"` file is also the file loaded if another is not selected.

The information panel which displays the current move number may also contain these markers:

Mark	Meaning
+	There are nodes after the current node in the SGF tree.
*	There are sibling variations which can be navigated to using the <i>Next Variation</i> menu option of the <i>Context Menu</i> or the <b>Rec</b> button.
C	There is a comment at the current node. It can be viewed/edited using the <i>Add/Edit Comment</i> menu option of the <i>Context Menu</i> .

## Controls

Key	Action
<b>Play</b>	Move cursor up
<b>Submenu</b>	Move cursor down
<b>Left</b>	Move cursor left
<b>Right</b>	Move cursor right
<b>Select</b>	Play a move (or use a tool if play-mode has been changed).
<b>Scroll Backward</b>	Retreat one node in the game tree
<b>Scroll Forward</b>	Advance one node in the game tree
<b>Power</b>	Main Menu
Long <b>Select</b>	Context Menu
<b>Rec</b>	Go to the next variation when at the first node in a branch

## Menus

**Main Menu.** The main menu for game setup and access to other menus.

*New.* Create a new game with your choice of board size and handicaps.

*Save.* Save the current state of the game. It will be saved to `"/sgf/gbn_def.sgf"` unless otherwise set.

*Save As.* Save to a specified file.

*Game Info.* View and modify the metadata of the current game.

*Playback Control.* Control the playback of the current playlist and modify the volume of your player.

*Zoom Level.* Zoom in or out on the board. If you set the zoom level, it will be saved and used again the next time you open this plugin.

*Options.* Open the Options Menu.

*Context Menu.* Open the Context Menu which allows you to set play modes and other tools.

*Quit.* Leave the plugin. Any unsaved changes are saved to `"/sgf/gbn_def.sgf"`.

**Game Info.** The menu for modifying game info (metadata) of the current game. This information will be saved to the SGF file and can be viewed in almost all SGF readers.

*Basic Info.* Shows a quick view of the basic game metadata, if any has been set (otherwise does nothing). This option does not allow editing.

*Time Limit.* The time limit of the current game.

*Overtime.* The overtime settings of the current game.

*Result.* The result of the current game. This text must follow the format specified at <http://www.red-bean.com/sgf/properties.html#RE> to be read by other SGF readers. Some examples are *B+R* (Black wins by resignation), *B+5.5* (Black wins by 5.5 points), *W+T* (White wins on Time).

*Handicap.* The handicap of the current game.

*Komi.* The komi of the current game (compensation to the white player for black having the first move).

*Ruleset.* The name of the ruleset in use for this game. The *NZ* and *GOE* rulesets include suicide as a legal move (for multi-stone suicide only); the rest do not.

*Black Player.* The name of the black player.

*Black Rank.* Black's rank, in dan or kyu.

*Black Team.* The name of black's team, if any.

*White Player.* The name of the white player.

*White Rank.* White's rank, in dan or kyu.

*White Team.* The name of white's team, if any.

*Date.* The date that this game took place. This text must follow the format specified at <http://www.red-bean.com/sgf/properties.html#DT> to be read by other SGF readers.

*Event.* The name of the event which this game was a part of, if any.

*Place.* The place that this game took place.

*Round.* If part of a tournament, the round number for this game.

*Done.* Return to the previous menu.

**Options.** Customize the behavior of the plugin in certain ways.

*Show Child Variations?* Enable this to mark child variations on the board if there are more than one. Note: variations which don't start with a move are not visible in this way.

*Disable Idle Poweroff?* Enable this if you do not want the player to turn off after

a certain period of inactivity (depends on your global Rockbox settings).

*Idle Autosave Time.* Set the amount of idle time to wait before automatically saving any unsaved changes. These autosaves go to the file `"/sgf/gbn.def.sgf"` regardless of if you have loaded a game or used *Save As* to save the game before or not. Set to *Off* to disable this functionality completely.

*Automatically Show Comments?* If this is enabled and you navigate to a node containing game comments, they will automatically be displayed.

**Context Menu.** The menu for choosing different play modes and tools, adding or editing comments, adding pass moves, or switching between sibling variations.

*Play Mode.* Play moves normally on the board. If there are child moves from the current node, this mode will let you follow variations by simply playing the first move in the sequence. Unless it is following a variation, this mode will not allow you to play illegal moves. This is the default mode before another is set after loading a game or creating a new one.

*Add Black Mode.* Add black stones to the board as desired. These stones are not moves and do not perform captures or count as ko threats.

*Add White Mode.* Add white stones to the board as desired. These stones are not moves and do not perform captures or count as ko threats.

*Erase Stone Mode.* Remove stones from the board as desired. These removed stones are not counted as captured, they are simply removed.

*Pass.* Play a single pass move. This does not change the mode of play.

*Next Variation.* If the game is at the first move in a variation, this will navigate to the next variation after the current one. This is the only way to reach variations which start with adding or removing stones, as you cannot follow them by "playing" the same move.

*Force Play Mode.* The same as Play Mode except that this mode will allow you to play illegal moves such as retaking a ko immediately without a ko threat, suicide on rulesets which don't allow it (including single stone suicide), and playing a move where there is already a stone.

*Mark Mode.* Add generic marks to the board, or remove them.

*Circle Mode.* Add circle marks to the board, or remove them.

*Square Mode.* Add square marks to the board, or remove them.

*Triangle Mode.* Add triangle marks to the board, or remove them.

*Label Mode.* Add one character labels to the board. Each label starts at the letter 'a' and each subsequent application of a label will increment the letter. To remove a label, click on it until it cycles through the allowed letters and disappears.

*Add/Edit Comment.* Add or edit a comment at the current node.

*Done.* Go back to the previous screen.

### 11.1.10 Invadrox



Figure 11.9: Invadrox

Invadrox is a clone of the classic arcade game Space Invaders. Kill those pesky aliens before they get to you. Remember, they increase speed, drop down and reverse direction after every pass!

Key	Action
Left and Right	Move left and right
<b>Select</b>	Fire
<b>Power</b>	Quit

### 11.1.11 Jewels



Figure 11.10: Jewels

Jewels is a simple yet addicting game which involves swapping pairs of jewels in order to form connected segments of three or more of the same type.

The goal of the game is to score as many points as possible before running out of available moves. Higher points are awarded to larger combos. The game advances to the next level after every one hundred points and randomly clears several jewels.

Key	Action
<b>Left/Right/ Play/Submenu</b>	Move the cursor around the jewels
<b>Select</b>	Select a jewel
Long <b>Select</b>	Show the in-game menu
<b>Power</b>	Exit

### 11.1.12 MazezaM



Figure 11.11: MazezaM

The goal of this puzzle game is to escape a dungeon consisting of ten “mazezams”. These are rooms containing rows of blocks which can be shifted left or right. You can move the rows only by pushing them and if you move the rows carelessly, you will get stuck. You can have another go by selecting “retry level” from the menu, but this will cost you a life. You start the game with three lives. Luckily, there are checkpoints at levels four and eight.



Key	Action
<b>Scroll Forward,</b> <b>Scroll Backward,</b> <b>Left, Right</b>	Move Character
<b>Power</b>	Menu

### 11.1.13 Minesweeper



Figure 11.12: Minesweeper plugin

The classic game of minesweeper. Use the **Play** and **Submenu** keys to select the required percentage of mines to set the difficulty then press the **Select** key to begin.

The aim of the game is to uncover all of the squares on the board. If a mine is uncovered then the game is over. If a mine is not uncovered, then the number of mines adjacent to the current square is revealed. The aim is to use the information you are given to work out where the mines are and avoid them. When the player is certain that they know the location of a mine, it can be tagged to avoid accidentally “stepping” on it.

Key	Action
<b>Play / Submenu</b> <b>/ Left / Right</b>	Move the cursor across the minefield
<b>Scroll Forward /</b> <b>Scroll Backward</b>	Scroll through the entire minefield
<b>Rec</b>	Toggle flag on / off
<b>Select</b>	Reveal the contents of the current square
Long <b>Rec</b>	Display the current game status
<b>Power</b>	Exit the game

### 11.1.14 Pacbox



Figure 11.13: Pacbox

Pacbox is an emulator of the Pacman arcade machine hardware. It is a port of *PIE* – *Pacman Instructional Emulator* (<http://www.ascotti.org/programming/pie/pie.htm>).

### ROMs

To use the emulator to play Pacman, you need a copy of ROMs for “Midway Pacman”.

Filename	MD5 checksum
pacman.5e	2791455babaf26e0b396c78d2b45f8f6
pacman.5f	9240f35d1d2beee0ff17195653b5e405
pacman.6e	290aa5eae9e2f63587b5dd5a7da932da
pacman.6f	19a886fcd8b5e88b0ed1b97f9d8659c0
pacman.6h	d7cce8bffd9563b133ec17ebbb6373d4
pacman.6j	33c0e197be4c787142af6c3be0d8f6b0

These need to be stored in the `/.rockbox/pacman/` directory on your player. In the MAME ROMs collection the necessary files can be found in `pacman.zip` and `puckman.zip`. The MAME project itself can be found at <http://www.mame.net>.

### Keys

Key	Action
<b>Right</b>	Move Up
<b>Left</b>	Move Down
<b>Play</b>	Move Left
<b>Submenu</b>	Move Right
<b>Select+Submenu</b>	Insert Coin
<b>Select</b>	1-Player Start
<b>Rec</b>	2-Player Start
<b>Power</b>	Menu

#### 11.1.15 Pegbox

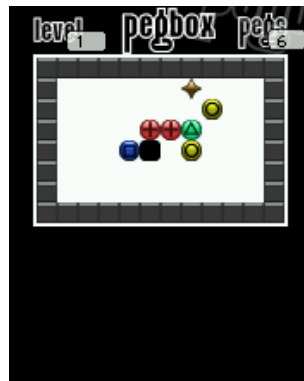


Figure 11.14: pegbox

To beat each level, you must destroy all of the pegs. If two like pegs are pushed into each other they disappear except for triangles which form a solid block and crosses which allow you to choose a replacement block.

Key	Action
<b>In game</b>	
<b>Play, Submenu,</b>	to move around
<b>Left, Right</b>	
<b>Select</b>	to select/save
<b>Rec</b>	to restart level
<b>Scroll Backward</b>	to go up a level
<b>Scroll Forward</b>	to go down a level
<b>Power</b>	to quit

### 11.1.16 Pong

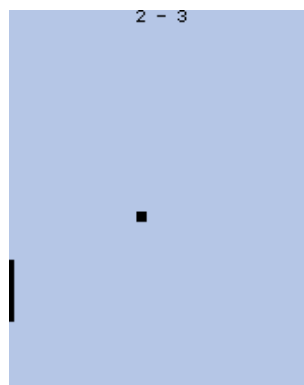


Figure 11.15: Pong

Pong is a simple two player “tennis game”. Whenever a player misses the ball the other scores.

Key	Action
<b>Left</b>	Left player up
<b>Submenu</b>	Left player down
<b>Play</b>	Right player up
<b>Right</b>	Right player down
<b>Power</b>	Quit

### 11.1.17 Robotfindskitten

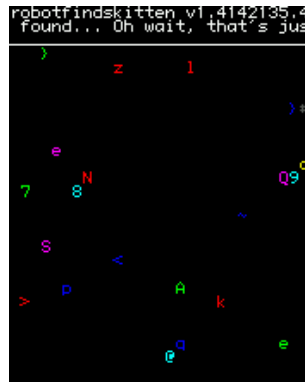


Figure 11.16: Robotfindskitten

In this game, you are robot (#). Your job is to find kitten. This task is complicated by the existence of various things which are not kitten. Robot must touch items to determine if they are kitten or not. The game ends when robotfindskitten.

Key	Action
Scroll Forward, Scroll Backward, Left, Right	Move robot
Power	Quit

### 11.1.18 Rockblox

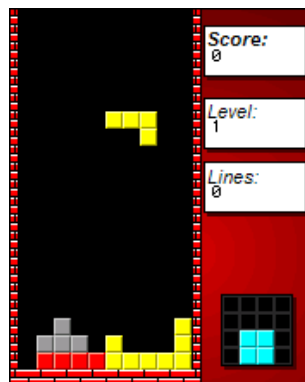


Figure 11.17: Rockblox

Rockblox is a Rockbox version of the classic falling blocks game from Russia. The aim of the game is to make the falling blocks of different shapes form full rows. Whenever a row is completed, it will be cleared away, and you gain points. For every ten lines completed, the game level increases, making the blocks fall faster. If the pile of blocks reaches the ceiling, the game is over.

Key	Action
<b>Rec</b>	Restart game
<b>Left</b>	Move left
<b>Right</b>	Move right
<b>Submenu</b>	Move down
<b>Scroll Forward</b>	Rotate left
<b>Scroll Backward</b>	Rotate right
<b>Select</b>	Drop
<b>Hold switch</b>	Pause
<b>Power</b>	Quit

### 11.1.19 Rockblox1d

Rockblox1d is a game for people who find rockblox too hard. In this version the second dimension is missing so the user only has to move the bricks down. No horizontal moving anymore and no need to rotate the brick!

Key	Action
<b>Select</b>	Move down faster
<b>Power</b>	Quit

### 11.1.20 Rocklife

This an implementation of J. H. Conway's Game of Life (see [http://en.wikipedia.org/wiki/Conway%27s\\_Game\\_of\\_Life](http://en.wikipedia.org/wiki/Conway%27s_Game_of_Life) for a detailed description).

Rockbox can open files with a configuration description (`.cells` files). Just "play" such file and the game configuration stored in it will be loaded into this plugin.

A `.cells` file is a text file. A capital 'O' marks a live cell, a dot marks a dead cell, all other characters are ignored. Everything on a line starting with an exclamation sign (and including it) is a comment and is ignored.

### 11.1.21 Sliding Puzzle

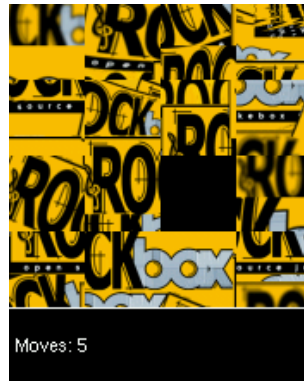


Figure 11.18: Sliding puzzle

The classic sliding puzzle game. Rearrange the pieces so that you can see the whole picture, or switch to number tiles if you like it a little easier

Key controls:

Key	Action
<b>Left, Right, Play</b> and <b>Submenu</b>	Move Tile
<b>Rec</b>	Shuffle
<b>Select</b>	Change between picture and numbered tiles
<b>Power</b>	Stop the game

### 11.1.22 Snake




Figure 11.19: Snake

This is the popular snake game. The aim is to grow your snake as large as possible by eating the dots that appear on the screen. The game will end when the snake touches either the borders of the screen or itself.

Key	Action
<b>Play/Submenu</b>	Change levels (1 is slowest, 9 is fastest)
<b>Select</b>	Toggle Play/Pause

### 11.1.23 Snake 2



Figure 11.20: Snake 2 – The Snake Strikes Back



Another version of the Snake game. Move the snake around, and eat the apples that pop up on the screen. Each time an apple is eaten, the snake gets longer. The game ends when the snake hits a wall, or runs into itself.

Key	Action
<b>In menu</b>	
<b>Play / Submenu</b>	Set game speed
<b>Right / Left</b>	Select starting maze
<b>Rec</b>	Select game type (A or B)
<b>Select</b>	Start the game
<b>In game</b>	
<b>Play / Submenu</b> <b>/ Left / Right</b>	Steer the snake
<b>Select</b>	Pause and resume the game
<b>Power</b>	Quit

In game A, the maze stays the same, in game B after an increasing number of apples eaten the maze is replaced by a new one.

### 11.1.24 Sokoban

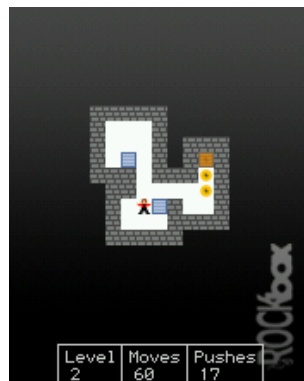


Figure 11.21: Sokoban

The object of the game is to push boxes into their correct position in a crowded warehouse with a minimal number of pushes and moves. The boxes can only be pushed, never pulled, and only one can be pushed at a time.

Sokoban may be used as a viewer for viewing saved solutions and playing external level sets with the `.sok` extension. Level sets should be in the standard Sokoban text

format or RLE (Run Length Encoded). For more information about the level format, see [http://sokobano.de/wiki/index.php?title=Level\\_format](http://sokobano.de/wiki/index.php?title=Level_format)

Key	Action
<b>In game</b>	
<b>Play, Submenu, Left, Right</b>	Move the “sokoban” up, down, left, or right
<b>Power</b>	Menu
<b>Select+Submenu</b>	Back to previous level
<b>Select+Right</b>	Restart level
<b>Select+Play</b>	Go to next level
<b>Select</b>	Undo last movement
<b>Rec</b>	Redo previously undone move
<b>Solution playback</b>	
<b>Select</b>	Pause/resume
<b>Play/Submenu</b>	Increase/decrease playback speed
<b>Left/Right</b>	Go backward/forward (while paused)
<b>Power</b>	Quit

Some places where can you can find level sets:

- <http://www.sourcecode.se/sokoban/levels.php>
- <http://sokobano.de/en/levels.php>

Note that some level sets may contain levels that are too large for this version of Sokoban and are unplayable as a result.

### 11.1.25 Solitaire



Figure 11.22: Klondike solitaire

This is the classic Klondike solitaire game for Rockbox. This is probably the best-known solitaire in the world. Many people do not even realize that other games exist. Though the name may not be familiar, the game itself certainly is. This is due in no small part to Microsoft's inclusion of the the game in every version of Windows. Though popular, the odds of winning are rather low, perhaps one in thirty hands.

For the full set of rules to the game, and other interesting information visit <http://www.solitairecentral.com/rules/klondike.html>

Key	Action
<b>Scroll Forward / Scroll Backward / Left / Right</b>	Move Cursor around.
<b>Select</b>	Select cards, move cards, reveal hidden cards...
<b>Rec</b>	If a card was selected – unselect it, else Draw 3 new cards from the remains stack
<b>Left</b>	Put the card from the top of the remains stack on top of the cursor
<b>Rec + Right</b>	Put the card under the cursor on one of the 4 final colour stacks.
<b>Right</b>	Put the card on top of the remains stack on one of the final colour stacks.
<b>Power</b>	Show menu

### 11.1.26 Spacerocks

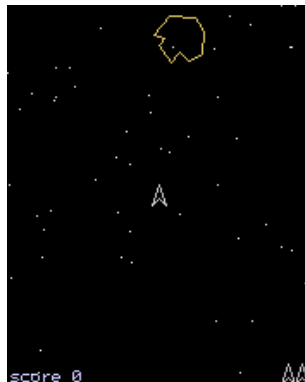


Figure 11.23: Spacerocks

Spacerocks is a clone of the old arcade game Asteroids. The goal of the game is to blow up the asteroids and avoid being hit by them. Once in a while, a UFO will appear – shoot this for extra points.

Key	Action
<b>Select</b>	Shoot
<b>Play</b>	Thrust
<b>Scroll</b>	Turn left/right
<b>Backward/ Scroll Forward</b>	
<b>Submenu</b>	Teleport
<b>Rec</b>	Pause game
<b>Power</b>	Quit

### 11.1.27 Star

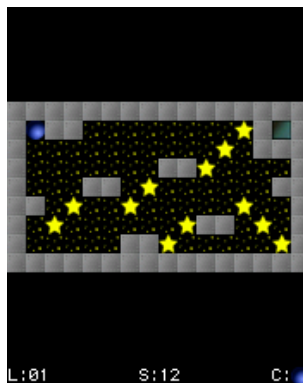


Figure 11.24: Star game

This is a puzzle game. It is actually a rewrite of Star, a game written by CDK designed for the hp48 calculator.

Rules: Take all of the “o”s to go to the next level. You can switch control between the filled circle, which can take “o”s, and the filled square, which is used as a mobile wall to allow your filled circle to get to places on the screen it could not otherwise reach. The block cannot take “o”s.

Key	Action
<b>Left</b>	Move Left
<b>Right</b>	Move Right
<b>Play</b>	Move Up
<b>Submenu</b>	Move Down
<b>Select</b>	Switch between circle and square
<b>Select+Left</b>	Previous level
<b>Select+Submenu</b>	Reset level
<b>Select+Right</b>	Next level
<b>Power</b>	Exit the game

### 11.1.28 Sudoku



Figure 11.25: Sudoku

Sudoku in Rockbox can act as both a plugin and a viewer. When starting Sudoku from the BROWSE PLUGINS menu, a random game will be generated automatically, and an estimate of its difficulty (very easy, easy, medium, hard or fiendish) will be displayed on the screen. New games can be generated from the GENERATE menu option. When “playing” an existing Sudoku game file from Rockbox’ file browser the plugin is invoked as viewer. The selected Sudoku will get loaded and you can start solving it. The sudoku games need to be stored as text files with the extension `.ss` as single file per game.

You can create and save your own grids under the NEW menu option. Enter the menu (as described in the key table below) when you have finished and enter the full path to save to including the `.ss` extension (e.g. `/sudoku/new.ss`).

## The scratchpad

When you play Sudoku on paper most people like to mark numbers in cells that are possible candidates for the cells. This can be done with the scratchpad, shown as separate column. Change the number under the cursor to the number you want to put on the scratchpad and press the scratchpad button, the number will then be added. If the number was already on the scratchpad it will get removed again. The column is stored separately for every cell on the board. The stored values can be displayed inline as small dots by enabling the SHOW MARKINGS settings.

**Note:** The scratchpad is *not* saved when saving the game.



Key	Action
<b>Play / Submenu</b> <b>/ Left / Right</b>	Move the cursor
<b>Scroll Backward</b> <b>/ Scroll Forward</b>	Change number under the cursor
Long <b>Scroll</b> <b>Backward /</b> <b>Scroll Forward</b>	Constantly changing the number under the cursor
<b>Select</b>	Open Menu
<b>Rec</b>	Add/Remove number to scratchpad
<b>Power</b>	Quit

Some places where you can find `.ss` files:

- Simple Sudoku (Advanced Puzzle Packs 1 and 2 located near the bottom of that page): <http://www.angusj.com/sudoku/>
- Kjell's Sudoku generator/solver: <http://kjell.haxx.se/sudoku/>

### 11.1.29 Wormlet

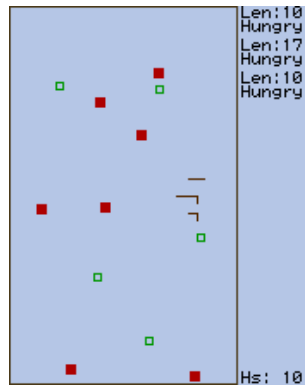


Figure 11.26: Wormlet game

Wormlet is a multi-worm game on a multi-threaded multi-functional Rockbox console. You navigate a hungry little worm. Help your worm to find food and to avoid poisoned argh-tiles. The goal is to turn your tiny worm into a big worm for as long as possible.

#### Menu controls:

Key	Action
Left / Right	Controls number of worms in the game

#### Game controls:

Key	Action
Left	Turn left
Right	Turn right
Play	Turn Up
Submenu	Turn Down

#### The game

Use the control keys of your worm to navigate around obstacles and find food. Worms do not stop moving except when dead. Dead worms are no fun. Be careful as your worm will try to eat anything that you steer it across. It won't distinguish whether it is edible or not.

**Food.** The small square hollow pieces are food. Move the worm over a food tile to eat it. After eating the worm grows. Each time a piece of food has been eaten a new

piece of food will pop up somewhere. Unfortunately for each new piece of food that appears two new “argh” pieces will appear, too.

**Argh.** An “argh” is a black square poisoned piece - slightly bigger than food - that makes a worm say “Argh!” when run into. A worm that eats an “argh” is dead. Thus eating an “argh” must be avoided under any circumstances. “Arghs” have the annoying tendency to accumulate.

**Worms.** Thou shall not eat worms. Neither other worms nor thyself. Eating worms is blasphemous cannibalism, not healthy and causes instant death. And it doesn't help anyway: the other worm isn't hurt by the bite. It will go on creeping happily and eat all the food you left on the table.

**Walls.** Don't crash into the walls. Walls are not edible. Crashing a worm against a wall causes it a headache it doesn't survive.

**Game over.** The game is over when all worms are dead. The longest worm wins the game.

**Pause the game.** Press **Select** to pause the game. Press **Select** again to resume the game.

**Stop the game.** There are two ways to stop a running game.

- If you want to quit Wormlet entirely simply hit **Power**. The game will stop immediately and you will return to the game menu.
- If you want to stop the game and still see the screen hit **Rec**. This freezes the game. If you hit **Rec** button again a new game starts with the same configuration. To return to the games menu you can hit **Power**. A stopped game can not be resumed.

### The scoreboard

On the right side of the game field is the score board. For each worm it displays its status and its length. The top most entry displays the state of worm 1, the second worm 2 and the third worm 3. When a worm dies its entry on the score board turns black.

**Len:** Here the current length of the worm is displayed. When a worm is eating food it grows by one pixel for each step it moves.

**Hungry:** That's the normal state of a worm. Worms are always hungry and want to eat. It is good to have a hungry worm since it means that your worm is alive. But it is better to get your worm growing.

**Growing:** When a worm has eaten a piece of food it starts growing. For each step it moves over food it can grow by one pixel. One piece of food lasts for 7 steps. After your worm has moved 7 steps the food is used up. If another piece of food is eaten while growing it will increase the size of the worm for another 7 steps.



**Crashed:** This indicates that a worm has crashed against a wall.

**Argh:** If the score board entry displays “Argh!” it means the worm is dead because it tried to eat an “argh”. Until we can make the worm say “Argh!” it is your job to say “Argh!” aloud.

**Wormed:** The worm tried to eat another worm or even itself. That’s why it is dead now. Making traps for other players with a worm is a good way to get them out of the game.

### Hints

- Initially you will be busy with controlling your worm. Try to avoid other worms and crawl far away from them. Wait until they curl up themselves and collect the food afterwards. Don’t worry if the other worms grow longer than yours - you can catch up after they’ve died.
- When you are more experienced watch the tactics of other worms. Those worms controlled by artificial stupidity head straight for the nearest piece of food. Let the other worm have its next piece of food and head for the food it would probably want next. Try to put yourself between the opponent and that food. From now on you can ‘control’ the other worm by blocking it. You could trap it by making a 1 pixel wide U-turn. You also could move from food to food and make sure you keep between your opponent and the food. So you can always reach it before your opponent.

### 11.1.30 Xobox

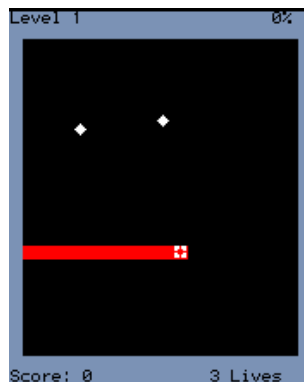


Figure 11.27: Xobox

Xobox is a simple clone of the well known arcade game Qix. The aim of the game is to section off parts of the arena with your trail in order to remove that section from the

game. Be careful not to get in the way of enemy balls because, if they hit you or your trail, you lose a life. To finish a level you have to section off more than 75%.

Key	Action
<b>Play, Submenu, Left, Right</b>	Move around the arena
<b>Rec</b>	Pause
<b>Power</b>	Open menu

## 11.2 Demos

### 11.2.1 Bounce

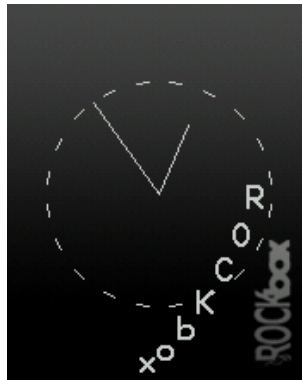


Figure 11.28: Bounce

This demo is of the word “Rockbox” bouncing across the screen. There is also an analogue clock in the background. In `SCROLL` MODE the bouncing text is replaced by a different one scrolling from right to left.

Key	Action
<b>Scroll Backward / Scroll Forward</b>	Moves to next/previous option
<b>Left / Right</b>	Increases/decreases option value
<b>Select</b>	Toggles Scroll mode
<b>Power</b>	Exits bounce demo

Available options are:

**Xdist/Ydist.** The distance to X axis and Y axis respectively

**Xadd/Yadd.** How fast the code moves on the sine curve on each axis

**Xsane/Ysane.** Changes the appearance of the bouncing.

### 11.2.2 Credits

The credits plugin scrolls the entire list of the names of all the Rockbox contributors after displaying the Rockbox logo and version. This plugin is called when selecting **VERSION** from the **SYSTEM** section of the Rockbox main menu. Exit at any time by pressing **Left**.

### 11.2.3 Cube

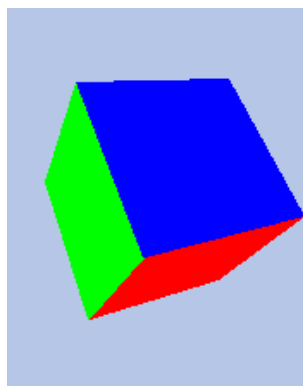


Figure 11.29: Cube

This is a rotating cube screen saver in 3D.

Key	Action
<b>Rec</b>	Display at maximum frame rate
<b>Select</b>	Pause
Long <b>Select</b>	Cycle draw mode
<b>Right / Left</b>	Select axis to adjust
<b>Scroll Forward /</b> <b>Scroll Backward</b>	Change speed/angle (speed can not be changed while paused)
<b>Power</b>	Quit

### 11.2.4 Demystify

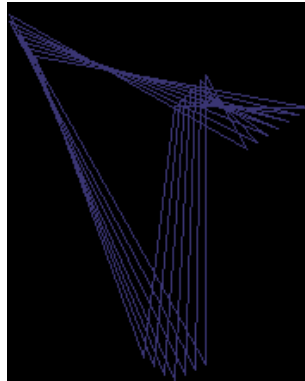


Figure 11.30: Demystify

Demystify is a screen saver like demo.

Key	Action
Right / Left	Increase / decrease speed
Scroll Forward / Scroll Backward	Add / remove polygon
Power	Quit

### 11.2.5 Fire

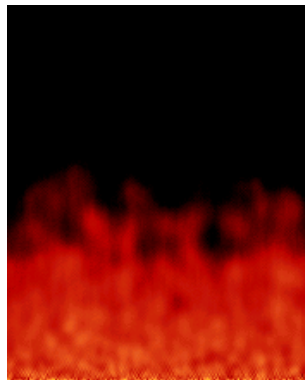


Figure 11.31: Fire

Fire is a demo displaying a fire effect.

Key	Action
<b>Scroll Forward / Scroll Backward</b>	Increase / decrease number of flames
<b>Left</b>	Toggle flame type
<b>Right</b>	Toggle moving flames
<b>Power</b>	Quit

### 11.2.6 Logo

Demo showing the Rockbox logo bouncing around the screen.

Key	Action
<b>Right / Left</b>	Increase / decrease speed on the x-axis
<b>Play / Submenu</b>	Increase / decrease speed on the y-axis
<b>Power</b>	Quit

### 11.2.7 Mandelbrot

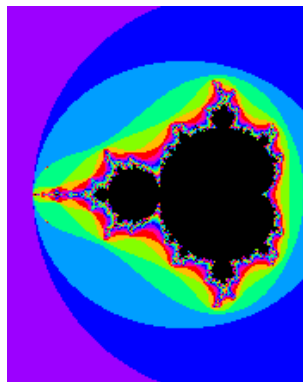


Figure 11.32: Mandelbrot

This demonstration draws fractal images from the Mandelbrot set .

Key	Action
Direction keys	Move about the image
<b>Scroll Forward</b>	Zoom in
<b>Scroll Backward</b>	Zoom out
<b>Select+Left</b>	Decrease iteration depth (less detail)
<b>Select+Right</b>	Increase iteration depth (more detail)
<b>Rec</b>	Reset and return to the default image
<b>Power</b>	Quit

### 11.2.8 Mosaïque

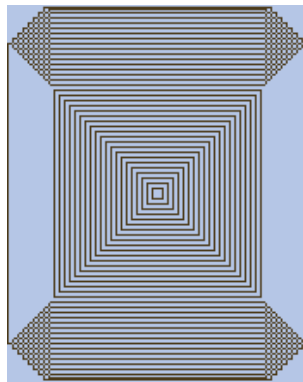


Figure 11.33: Mosaïque

This simple graphics demo draws a mosaic picture on the screen of the player. Press **Power** to quit.

### 11.2.9 Oscilloscope

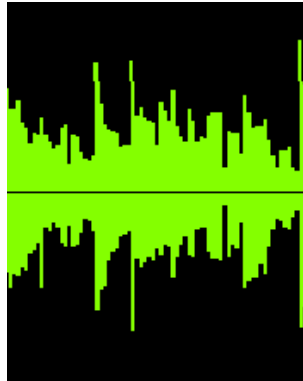


Figure 11.34: Oscilloscope

This demo shows the shape of the sound samples that make up the music being played. At faster speed rates, the player is less responsive to user input and music may start to skip.

#### Keys

Key	Action
<b>Select</b>	Toggle filled / curve / plot
<b>Submenu</b>	Toggle whether to scroll or not
<b>Play</b>	Toggle drawing orientation
<b>Rec</b>	Pause the demo
<b>Scroll Forward /</b> <b>Scroll Backward</b>	Increase / decrease volume
<b>Right / Left</b>	Increase / decrease speed
<b>Power</b>	Exit demo

### 11.2.10 PictureFlow



Figure 11.35: PictureFlow

PictureFlow is a plugin that provides a visualisation of your albums with their associated cover art.

#### Requirements

PictureFlow uses both the album art (see section C (page 162)) and database (see section 4.2 (page 27)) features of Rockbox. It is therefore important that these are working correctly before attempting to use PictureFlow. In addition, there are some other points of which to be aware:

- PictureFlow will accept album art larger than the dimensions of the screen, but the larger the dimensions, the longer they will take to scale.

**Note:** PictureFlow is a visualisation only. It cannot be used to select and play music.



#### Keys

Key	Action
<b>Scroll Forward / Scroll Backward</b>	Scroll through albums / track list
<b>Select</b>	Enter track list
<b>Left</b>	Exit track list
<b>Submenu</b>	Enter menu
<b>Power</b>	Exit PictureFlow



**Main Menu**

**Settings.** Enter the settings menu.

**Return.** Exit menu.

**Quit.** Exit PictureFlow plugin.

**Settings Menu**

**Show FPS.** Displays frames per second on screen.

**Spacing.** The distance between the front edges of the side slides, i.e. changes the degree of overlap of the side slides. A larger number means less overlap. Scales with zoom.

**Centre margin.** The distance, in screen pixels, with zoom at 100, between the centre and side slides. Scales with zoom.

**Number of slides.** Sets the number of slides at each side, including the centre slide. Therefore if set to 4, there will be 3 slides on the left, the centre slide, and then 3 slides on the right.

**Zoom.** Changes the distance at which slides are rendered from the "camera".

**Show album title.** Allows setting the album title to be shown above or below the cover art, or not at all.

**Resize Covers.** Set whether to automatically resize the covers or to leave them at their original size.

**Rebuild cache.** Rebuild the PictureFlow cache. This is needed in order for PictureFlow to pick up new albums, and may occasionally be needed if albums are removed.

### 11.2.11 Plasma

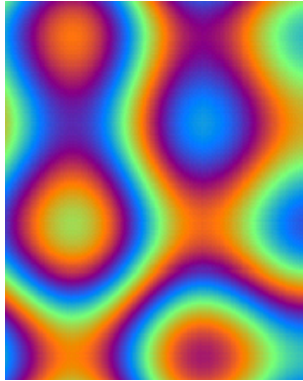


Figure 11.36: Plasma

Plasma is a demo displaying a 80's style retro plasma effect.

Key	Action
<b>Play / Submenu</b>	Adjust frequency
<b>Select</b>	Change colours
<b>Power</b>	Quit

### 11.2.12 Snow

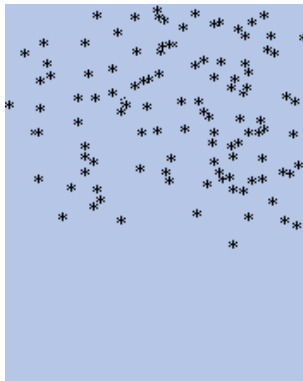


Figure 11.37: Have you ever seen snow falling?

This demo replicates snow falling on your screen. If you love winter, you will love this demo. Or maybe not. Press **Power** to quit.

### 11.2.13 Starfield

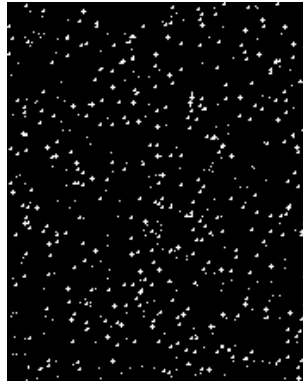


Figure 11.38: Starfield

Starfield simulation (like the classic screensaver).

Key	Action
<b>Right</b> / <b>Left</b>	Increase / decrease number of stars
<b>Play</b> / <b>Submenu</b>	Increase / decrease speed
<b>Select</b>	Change colours
<b>Power</b>	Quit

### 11.2.14 VU meter

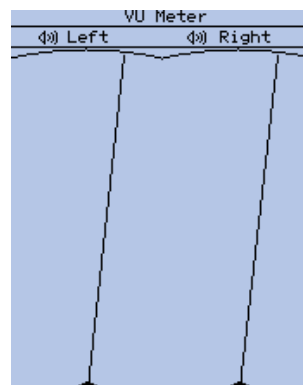


Figure 11.39: VU-Meter

This is a VU meter, which displays the volume of the left and right audio channels. There are 3 types of meter selectable. The analogue meter is a classic needle style. The digital meter is modelled after LED volume displays, and the mini-meter option allows for the display of small meters in addition to the main display (as above). From the settings menu the decay time for the meter (its memory), the meter type and the meter scale can be changed.

Key	Action
<b>Power</b>	Save settings and quit
<b>Rec</b>	Help
<b>Select</b>	Settings
<b>Scroll Forward</b>	Raise Volume
<b>Scroll Backward</b>	Lower Volume

## 11.3 Viewers

Viewers are plugins which are associated with specific file extensions. They cannot be run directly but are started by “playing” the associated file. Viewers are stored in the `/.rockbox/rocks/viewers/` directory.

### 11.3.1 Shortcuts

The Shortcuts Plugin allows you to jump to places within the file browser without having to navigate there manually. The plugin works with `.link` files. A `.link` file is just a text file with every line containing the name of the file or the directory you want to quickly jump to. All names should be full absolute names, i.e. they should start with a `/`. Directory names should also end with a `/`.

#### How to create `.link` files

You can use your favourite text editor to create a `.link` file on the PC and then copy the file to the player. Or you can use the context menu on either a file or a directory in the file browser tree, and use the “Add to shortcuts” menu option. This will append a line with the full name of the file or the directory to the `shortcuts.link` file in the root directory of the player. (The file will be created if it does not exist yet.) You can later rename the automatically created `shortcuts.link` file or move it to another directory if you wish. Subsequent calls of the context menu will create it again.

#### How to use `.link` files, i.e. jump to desired places

To use a `.link` file just “play” it from the file browser. This will show you a list with the entries in the file. Selecting one of them will then exit the plugin and leave you within

the directory selected, or with the file selected in the file browser. You can then play the file or do with it whatever you want. The file will not be “played” automatically.

If the `.link` file contains only one entry no list will be shown, you will directly jump to that location. The file `shortcuts.link` in the root directory is an exception. After “playing” it, the list will be shown even if the file contains just one entry.

If the list you are seeing is from `shortcuts.link` in the root directory, you can delete the selected entry by pressing **Submenu**. Deleting entries from other `.link` files is not possible.

### Advanced Usage

Placing the line “`#Display last path segments=n`” (where `n` is a number) in the beginning of a `.link` file will leave just the last `n` segments of the entries when they are shown. For example, if `n` is chosen to be 1, then the entry `/MyMusic/collection/song.mp3` will be shown as `song.mp3`. This allows you to hide common path prefixes.

You can also provide a custom display name for each entry individually. To do so, append a tabulator character after the entry’s path followed by your custom name. That name will then be used for showing the entry. For example:

---

EXAMPLE

---

```
/MyMusic/collection/song.mp3<TAB>My favourite song!
```

---

### 11.3.2 Chip-8 Emulator

Chip8 is a kind of assembly language for a long-gone architecture. This plugin runs games written using the chip8 instructions. To start a game open a `.ch8` file in the FILE BROWSER

There are lots of tiny Chip8 games (usually only about 256 bytes to a couple of KB) which were made popular by the HP48 calculator’s emulator for them. The original Chip8 had 64x32 pixel graphics, and the new superchip emulator supports 128x64 graphics.

The only problem is that they are based on a 4x4 keyboard, but since most games do not use all of the buttons, this can easily be worked around.

To do this, one may put a `.c8k` file with the same name as the original program which contains new key mappings (for `BLINKY.ch8`, one writes a `BLINKY.c8k` file). That `.c8k` file contains 16 characters describing the mapping from the Chip8 keyboard to the default key mapping (that way, several Chip8 keys can be pressed using only one Rockbox key). For example, a file containing the single line:

---

CODE

---

```
0122458469ABCDEF
```

---


would correspond to the following non-default mappings:

$3 \rightarrow 2, 6 \rightarrow 8, 7 \rightarrow 4, 8 \rightarrow 6.$

The default keymappings are:

Chip8	Off	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Key	Power	Scroll Backward				Left	Select	Right	Scroll Forward								

Some places where you can find .ch8 files:

- The PluginChip8 page on [www.rockbox.org](http://www.rockbox.org) has several attached:  [PluginChip8](#)
- Check out the HP48 chip games section: <http://www.hpcalc.org/hp48/games/chip/>
- PC emulator by the guy who wrote the HP48 emulator: <http://www.pdc.kth.se/~lfo/chip8/CHIP8.htm>
- Links to other chip8 emulators: <http://www.zophar.net/chip8.html>

### 11.3.3 JPEG viewer

Open a JPEG file in the FILE BROWSER to view it.

**Note:** When an audio file is playing the size of the image is limited as the decoding process needs to share memory with audio tracks. To be able to view a bigger file you may need to stop playback.



Key	Action
<b>Play / Submenu</b> <b>/ Left / Right</b>	Move around in zoomed in image
<b>Select</b>	Zoom in
<b>Long Select</b>	Zoom out
<b>Scroll Forward</b>	Next jpeg in directory
<b>Scroll Backward</b>	Previous jpeg in directory
<b>Rec</b>	Toggle slide show mode
<b>Power</b>	Show menu

The menu has the following entries.

**Quit.** Quits the viewer and returns to the FILE BROWSER.

**Toggle Slideshow Mode.** Enables or disables the slideshow mode.

**Change Slideshow Timeout.** You can set the timeout for the slideshow between 1 second and 20 seconds.

**Show Playback Menu.** From the playback menu you can control the playback of the currently loaded playlist and change the volume of your player.

**Display Options.** From this menu you can force the viewer to render the image in greyscale using the GREYSCALE option or set the method of dithering used in the DITHERING submenu.

**Return.** Returns you to the image

**Note:** Progressive scan and other unusual JPEG files are not supported, and will result in various “unsupported xx” messages. Processing could also fail if the image is too big to decode which will be explained by a respective message.



### 11.3.4 Lua scripting language

To quote from the Lua website (<http://www.lua.org>), Lua is a “powerful, fast, lightweight, embeddable scripting language”. Select a .lua file in the FILE BROWSER to run it. For more information on programming in Lua, please see <http://www.lua.org/manual/5.1/> and <http://www.lua.org/pil/>.


There are a few exceptions/additions to the Lua support in Rockbox:

**No floating point support.** The number type in Lua is usually float, however in the Rockbox implementation it is integer.

**Non-supported libraries.** The coroutine, debug, file, io, math and package libraries are not supported.

**Partially-supported libraries.** The os library is only partially supported.


**Additional libraries.** The bitlib library is integrated to support bitwise operators. See <http://luaforge.net/projects/bitlib> and <http://lua-users.org/wiki/BitwiseOperators>.

Documentation of the API is still a work in progress, and the API itself is not finalised. For the latest information, see  [PluginLua](#).

**Note:** Please note that if a script does not provide a way to exit, then the only way to exit will be to reset the player.



### 11.3.5 Midiplay

To get MIDI file playback, a patchset is required. This file contains the instruments required to synthesize the music. A sample patchset is available through the wiki at  [PluginMidiPlay](#), and needs to be extracted to the .rockbox directory in the root of

your player. There should now be a `/.rockbox/patchset/` directory, with the patchset directory containing several `.pat` files and two `.cfg` files. Just select a MIDI file with either the `.mid` or `.midi` extension in the file browser to start playback.

**Note:** Currently playing MIDI files is still in its early stages and you might experience “Buffer miss!” with many files, except simple ones.



Key	Action
<b>Scroll Forward/</b> <b>Scroll Backward</b>	Volume up/ Volume down
<b>Right/ Left</b>	Skip 3 seconds forward/ backward
<b>Play</b>	Pause/Resume playback
<b>Power</b>	Stop playback and quit

### 11.3.6 MPEG Player

The Mpeg Player is a video player plugin capable of playing back MPEG-1 and MPEG-2 video streams with MPEG audio multiplexed into `.mpg` files.

To play a video file, you just select it in the Rockbox FILE BROWSER. If your file does not have the `.mpg` extension but is encoded in the supported format, you will need to use the OPEN WITH... context menu option and choose MPEGPLAYER.

Key	Action
<b>Play</b>	Pause / Resume
<b>Power</b>	Stop
<b>Scroll Backward</b> <b>/ Scroll Forward</b>	Adjust volume up / down
<b>Left / Right</b>	Rewind / Fast Forward
<b>Select</b>	Open the MPEG Player menu

When a video file is selected, the start Menu will be displayed, unless it is disabled via the option “start menu” (see below). In the latter case the video will start playing immediately - unless a resume point is found, in which case the resume menu is presented.

Start Menu

**Play from beginning** Resume information is discarded and the video plays from the start.

**Resume time (min): x.x** Resume video playback at stored resume time x.x (start of the video if no resume time is found).



**Set start time (min)** A preview screen is presented consisting of a thumbnail preview and a progress bar where the user can select a start time by 'seeking' through the video. The video playback is started by pressing the select button.

**Quit mpegplayer** Exit the plugin.

Resume Menu

**Yes (min): x.x** Resume video playback at stored resume time x.x.

**No** Play video from the beginning.

Main Menu

**Display Options** Opens "Display Options" submenu - see below.

**Start Menu** (default: on) Enable/disable the start menu.

**Clear all resumes: x** Discard all x resume points.

**Quit mpegplayer** Exit the plugin.


Display Options Menu

**Dithering** (default: off) Prevent banding effects in gradients by blending of colours. (only available on Sansa e200, Sansa c200 and Gigabeat F/X)

**Show FPS** (default: off) This option displays (once a second - if your video is full-screen this means it will get overwritten by the video and appear to flash once per second) the average number of frames decoded per second, the total number of frames skipped (see the Skip Frames option), the current time (in 100Hz ticks) and the time the current frame is due to be displayed.

**Limit FPS** (default: on) With this option disabled, mpegplayer will display the video as fast as it can. Useful for benchmarking.

**Skip frames** (default: on) This option causes mpegplayer to attempt to maintain real-time playback by skipping the display of frames - but these frames are still decoded. Disabling this option can cause loss of A/V sync.

See this page in the Rockbox wiki for information on how to encode your videos to the supported format.  [PluginMpegplayer](#)

### 11.3.7 PPM viewer

Open a PPM file in the FILE BROWSER to view it.

ppmviewer exits when any button is pressed.

**Note:** Both ASCII PPM (P3) and raw PPM (P6) files are supported.

For more information about PPM files, see <http://netpbm.sourceforge.net/doc/ppm.html>



### 11.3.8 Rockboy

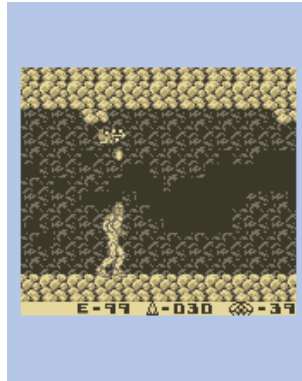


Figure 11.40: Rockboy

Rockboy is a Nintendo Game Boy and Game Boy Color emulator for Rockbox based on the gnuBoy emulator. To start a game, open a ROM file saved as `.gb` or `.gbc` in the file browser.

#### Default keys

Key	Action
<b>Play / Submenu</b> <b>/ Left / Right</b>	Direction keys
<b>Select</b>	A button
<b>Rec</b>	B button
<b>Scroll Backward</b>	Start
<b>Scroll Forward</b>	Select
<b>Power</b>	Open Rockboy menu

#### Rockboy menu

**Load Game...** Loads a previously saved game.

**Save Game...** Saves your current state.

**Options... Max Frameskip.** Change frameskip setting to improve speed.

**Sound.** Toggle sound on or off.

**Stats.** Toggle showing fps and current frameskip.

**Set Keys (BUGGY)** Select this option to set a new keymapping.

**Screen Size.** Chose whether the original aspect ratio should be kept when scaling the picture to the screen or whether it should be displayed unscaled.

**Screen Rotate.** Rotate the displayed picture by 90 degrees.

**Set Palette.** Pick one of a few predefined colour palettes.

**Quit RockBoy.** Quits the Rockboy plugin.

### 11.3.9 Search

This plugin can be used on playlists. It searches through the playlist that it opened on looking for any occurrences of the string entered by the user. The results of this search are saved to a new playlist, **search\_results.m3u**, within the same directory as the original playlist.

### 11.3.10 Sort

This plugin takes a file and sorts it in ascending alphabetical order. Case is ignored. This is useful for ordering playlists generated by the **CREATE PLAYLIST** menu option (see section 5.10 (page 45)).

### 11.3.11 Text Viewer

This is a Viewer for text files with word wrap. Just open a .txt file to display it. The text viewer features controls to handle various styles of text formatting, has top-of-file and bottom-of-file buttons. You can view files without a .txt extension by using *Open with* from the *Context Menu* (see section 4.1.2 (page 24)).

Key	Action
<b>Play</b>	Scroll-up
<b>Submenu</b>	Scroll-down
<b>Left</b>	Top of file (Narrow mode) / One screen left (Wide mode)
<b>Right</b>	Bottom of file (Narrow mode) / One screen right (Wide mode)
<b>Scroll Backward</b>	One line up
<b>Scroll Forward</b>	One line down
<b>Rec</b>	Toggle autoscroll
<b>Select</b>	Enter menu
<b>Power</b>	Exit text viewer

## The Viewer's Menu

**Quit** Exits the plugin.

**Viewer Options Encoding** sets the codepage in the text viewer. Available settings: UTF-8 (Unicode), BIG5 (Traditional Chinese), KSX-1001 (Korean), GB-2312 (Simple Chinese), SJIS (Japanese), CP1250 (Central European), ISO-8859-2 (Latin Extended), ISO-8859-9 (Turkish), ISO-8859-6 (Arabic), ISO-8859-11 (Thai), CP1251 (Cyrillic), ISO-8859-8 (Hebrew), ISO-8859-7 (Greek), ISO-8859-1 (Latin 1). This setting only applies to the plugin and is independent from the DEFAULT CODEPAGE setting (see section 8.4 (page 63)).

**Word Wrap** toggles between Wrap and Chop.

**Off (Chop Words)** breaks lines at white space or hyphen.

**On** breaks lines at the maximum column limit.

**Line Mode** cycles through Normal, Join and Expand and Reflow Lines.

**Reflow Lines** justifies the text fully.

**Expand** adds a blank line. Useful for making the paragraphs clearer in some book style text files.

**Join** joins lines. Useful for adopting the orphans that occur with e-mail style (i.e. pre-wrapped) text files.

**Normal** breaks lines at newline characters.

**Wide View** toggles between Narrow and Wide.

**Yes** sets maximum column to 114. Useful for navigating large files. (Currently, Wide and Join cannot be selected together.)

**No (Narrow)** sets maximum column to the screen width.

**Show Scrollbar** toggles scrollbar for the current View mode. If the file fits on one screen, there is no scrollbar and toggling this setting has no effect.

**On** has a scrollbar by default, until toggled.

**Off** has no scrollbar by default, until toggled.

**Overlap Pages** toggles between Normal and Overlap.

**Yes** tells page-down/page-up to retain one line from previous screen.

**No** sets page-down/page-up to one full screen.

**Scroll Mode** controls the function of the “Scroll-up” and “Scroll-down” buttons.

**Scroll by Line**

**Scroll by Page**

**Auto-scroll Speed** controls the speed of auto-scrolling in number of lines per scroll step, available options are 1 to 10 lines. As an example, a setting of 4 will scroll up the text four lines per second.

**Show Playback Menu** controls the playback of the currently loaded playlist and change the volume of your player without leaving the plugin.

**Return** to the text view.

**Note:** The text viewer automatically saves its settings and also stores the current position in the viewed text files (up to the last 46 files).



### Compatibility

- Currently messages are in English
- Does not currently support right-to-left languages.

#### 11.3.12 VBRfix

This function scans a VBR (Variable Bitrate) MP3 file and updates/creates the Xing VBR header. The Xing header contains information about the VBR stream used to calculate average bit rate, time information and to more accurately fwd/rew in the stream. This function is especially useful when the playback of a file skips, fwd/rew does not work correctly or the time display is incorrect.

**Note:** VBRfix can only run when music is turned off (since it uses the same memory as the player) and can take a while to complete if run on big files.



#### 11.3.13 ZXBox



Figure 11.41: ZXBox

ZXBox is a port of the “Spectemu” ZX Spectrum 48k emulator for Rockbox ([project's homepage](#)). To start a game open a tape file or snapshot saved as `.tap`, `.tzx`, `.z80` or `.sna` in the file browser.

**Note:** As ZXBox is a 48k emulator only loading of 48k z80 snapshots is possible.



### Default keys

The emulator is set up for 5 different buttons: Up, Down, Left, Right and Jump/Fire. Each one of these can be mapped to one key of the Spectrum Keyboard or they can be

used like a “Kempston” joystick. Per default the buttons, including an additional but fixed menu button, are assigned as follows:

Key	Action
<b>Play/Submenu/Left/Right</b>	Directional movement
<b>Select</b>	Jump/Fire
<b>Power</b>	Open ZXBox menu

### ZXBox menu

**Vkeyboard.** This is a virtual keyboard representing the Spectrum keyboard. Controls are the same as in standard Rockbox, but you just press one key instead of entering a phrase.

**Play/Pause Tape.** Toggles playing of the tape (if it is loaded).

**Save Quick Snapshot.** Saves snapshot into `/.rockbox/zxboxq.z80`.

**Load Quick Snapshot.** Loads snapshot from `/.rockbox/zxboxq.z80`.

**Save Snapshot.** Saves a snapshot of the current state. You would enter the full path and desired name - for example `/games/zx/snapshots/chuckie.sna`. The snapshot format will be chosen after the extension you specified, per default `.z80` will be taken in case you leave it open.

**Toggle Fast Mode.** Toggles fastest possible emulation speed (no sound, maximum frameskip etc.). This is Useful when loading tapes with some specific loaders.

**Options. Map Keys To Kempston.** Controls whether the player’s buttons should simulate a “Kempston” joystick or some assigned keys of the Spectrum keyboard.

**Display Speed.** Toggle displaying the emulation speed (in percent).

**Invert Colors.** Inverts the Spectrum colour palette, sometimes helps visibility.

**Frameskip** Sets the number of frames to skip before displaying one. With zero frameskip ZXBox tries to display 50 frames per second.

**Sound.** Turns sound on or off.

**Volume.** Controls volume of sound output.

**Predefined Keymap** Select one of the predefined keymaps. For example `2w90z` means: map ZXBox’s **Up** to 2, **Down** to w, **Left** to 9, **Right** to 0 and **Jump/Fire** to z. This example keymap is used in the “Chuckie Egg” game.

**Custom Keymap** This menu allows you to map one of the Spectrum keys accessible through the plugin’s virtual keyboard to each one of the buttons.


**Quit.** Quits the emulator..

## Hacking graphics

Due to ZXBox's simple (but fast) scaling to the screen by dropping lines and columns some games can become unplayable. It is possible to hack graphics to make them better visible with the help of an utility such as the "Spectrum Graphics Editor". Useful tools can be found at the "World of Spectrum" site (<http://www.worldofspectrum.org/utilities.html>).

## 11.4 Applications

### 11.4.1 Battery Benchmark

The BATTERY BENCHMARK plugin enables you to test your battery's performance whilst using your player normally. Results can be submitted to the  [BatteryRuntime](#) wiki page.

#### How it works

Once loaded, BATTERY BENCHMARK runs in the background recording various information about your battery to memory. A new point is written to memory every minute. Every time the disk is accessed for any reason (such as refilling the audio buffer, opening a directory or entering USB mode etc.) then the information in memory is written to disk. Once the memory becomes full (after many hours), then the data are written to disk anyway. This is done so that the data are not biased by excessive additional disk accesses. The file is written to the root directory of your player and is called `battery_bench.txt`. The plugin will continue to log info until:

- Another plugin is loaded.
- The player is shut down.
- The battery is empty.

Benchmarks can be resumed if you accidentally load a plugin, or turn off your player, so long as the log file `battery_bench.txt` is not deleted.

#### Information explained

At the top of the `battery_bench.txt` file is various information on how to use the plugin, followed by the data themselves.

**Time** This column reports the total time of operation of the player. It is not the time that you started the plug-in. If you have your player on for 5 minutes and then start the plugin, it will start measuring from 5 minutes.

**Seconds** The same as **Time**, except measured in seconds.

**Level** The percent level of the battery estimated by Rockbox, and not the actual battery level. The actual battery level can be seen from the **Voltage** column

**Time Left** This shows the time remaining until the battery is empty, again as estimated by Rockbox.

**Voltage** The battery voltage in mV at the moment the measurement was taken.

**C** This stands for Charger. An "A" in that column shows if the power adapter was attached to the unit at the time of the measurement.

**U** USB powered. Only for targets that support this. A "U" will indicate if the unit was using the USB port for power at the time of the measurement.

### Usage

The log file can be used to tell you how long the battery lasted (with some limitations, see below), but it is most useful for graphing discharge curves in order to improve Rockbox's estimation of battery level and time remaining. The battery log (`battery_bench.txt`) is in CSV format (comma separated variables) and thus can be easily imported into a spreadsheet or similar program.

### Limitations

As BATTERY BENCHMARK needs to write the data held in memory to disk in order to save them, it is possible that should Rockbox shut down due to low battery then there will not be enough power remaining to write the data to disk. Therefore all measurements since the previous save will be lost.

## 11.4.2 Calculator



Figure 11.42: Calculator



This is a simple scientific calculator for use on the player. It works like a standard calculator. Pressing the “1st” and “2nd” buttons will toggle between other available math functions.

Key	Action
<b>Left / Right / Play / Submenu / Scroll Forward / Scroll Backward</b>	Move around the keypad
<b>Select</b>	Select a button
<b>Rec</b>	Delete last entered digit or clear after calculation
Long <b>Select</b>	Calculate
<b>Power</b>	Quit

### 11.4.3 Calendar

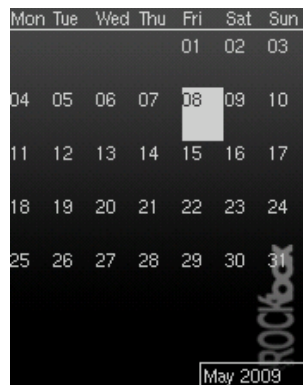


Figure 11.43: Calendar

This is a small and simple calendar application with memo saving function. Dots indicate dates with memos. The available memo types are: one off, yearly, monthly, and weekly memos.

Key	Action
<b>Left / Right / Scroll Forward / Scroll Backward</b>	Move the selector
<b>Select</b>	Show memos for the selected day
<b>Play / Submenu</b>	Previous / Next month
<b>Power</b>	Quit

#### 11.4.4 Chess Clock

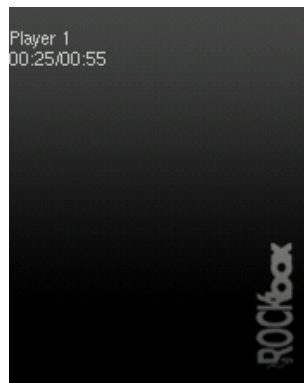


Figure 11.44: Chess Clock

The chess clock plugin is designed to simulate a chess clock, but it can be used in any kind of game with up to ten players.

##### Setup

Key	Action
<b>Right / Left</b>	Increase / decrease displayed Value
<b>Select</b>	Move to next screen
<b>Power</b>	Move to previous screen

- First enter the number of players (1–10)
- Then set the total game time in mm:ss

- Then the maximum round time is entered. For example, this could be used to play Scrabble for a maximum of 15 minutes each, with each round taking no longer than one minute.
- Done. Player 1 starts in paused mode.

### While playing

The number of the current player is displayed on the top line. The time below is the time remaining for that round (and possibly also the total time left if different).

Keys are as follows:

Key	Action
<b>Power</b>	Exit plugin
<b>Submenu</b>	Restart round for the current player
<b>Select</b>	Pause the time (press again to continue)
<b>Right</b>	Switch to next player
<b>Left</b>	Switch to previous player
<b>Play</b>	Open menu ( <b>Select</b> to select.)

From the menu it is possible to delete a player, modify the round time for the current player or set the total time for the game. When the round time is up for a player the message “ROUND UP!” is shown (press NEXT to continue). When the total time is up for a player the message “TIME UP!” is shown. The player will then be removed from the timer.

#### 11.4.5 Clock

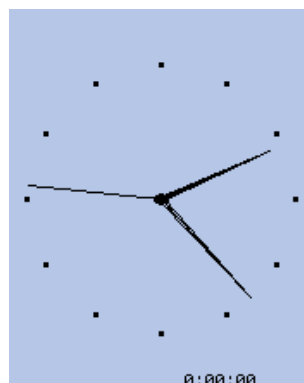


Figure 11.45: Clock

This is a fully featured analogue and digital clock plugin.

### Key configuration

Key	Action
<b>Left / Right</b>	Cycle through modes
<b>Scroll Forward / Scroll Backward</b>	Cycle through skins
<b>Submenu</b>	Main Menu
<b>Select</b>	Start / Stop Counter
<b>Long Select</b>	Reset Counter
<b>Power</b>	Save Settings (if enabled) and Exit

### Clock Menu

**View Clock** Exits the menu and returns to the current clock mode display.

**Mode Selector** Opens a menu from which you can select a clock mode to view.

**Counter Settings** Opens a menu from which you can adjust settings pertaining to the counter.

**Mode Settings** Opens a menu from which you can adjust settings pertaining to the current clock mode (analog, digital, binary).

**General Settings Reset Settings** Reset all settings to their default values.

**Save Settings** Save all settings to disk.

**Show Counter** Toggle Counter display.

**Save** Choose whether to disable automatic saving, saving to disk on exit, or saving to disk every settings change.

**Backlight** Choose whether to disable the backlight, use the user's timeout setting, or keep the backlight on.

**Idle Poweroff** Toggle Idle Poweroff.

**Note:** This setting is not saved to disk.



**Help** Opens a brief help screen with key mappings and functionality.

**Credits** Displays a credits roll.

### Analog mode

Small, round, analog clock is displayed in the middle of the LCD. Time readout, if enabled, is displayed at the upper left. If Time readout is in 12-hour ("12h") mode, AM

or PM will be displayed at the upper right. The Date readout, if enabled, is displayed at the lower left. The Counter, if enabled, is displayed at the lower right. The second hand, if enabled, is displayed along with the hour and minute hands. Digit display, if enabled, places “12”, “3”, “6”, and “9” around the face of the clock in their respective positions.

### Digital mode

An imitation of an LCD, this mode shows a Clock comprised of digital “segments”. The Date readout, if enabled, is displayed at the bottom, center. The Second readout, if in “Text” mode, is displayed at the top, center; if in “Bar” mode, is displayed as a progress bar at the top of the LCD; if in “Invert” mode, will invert the LCD left-to-right as the seconds pass (a fully-inverted LCD means the entire minute has passed). The Counter, if displayed, is shown at the upper left. The Blinking Colon, if enabled, blinks the colon once every second. 12-hour mode, if enabled, will display the time in a 12-hour format.

### LCD mode

Based on the Digital Mode, the LCD mode is another imitation of an LCD. The settings available in this mode are exactly the same as Digital Mode, but they are independent of Digital Mode. For example, you can have the Date Readout enabled in Digital Mode and disabled in LCD Mode.

### Fullscreen

A Fullscreen clock is displayed. Show Border, if enabled, will draw a small box at every hour position (1 to 12 inclusive). Invert Seconds, if enabled, will invert the LCD as the seconds pass. Second Hand, if enabled, will draw a second hand among the hour and minute hands.

### Binary mode

This mode shows a Binary clock. The hour is displayed on the top line, the minute is displayed on the middle line, and the seconds are on the last line. Circle mode, if enabled, draws empty and full circles, instead of zeros and ones. For help on reading binary, please visit: [http://en.wikipedia.org/wiki/Binary\\_numeral\\_system](http://en.wikipedia.org/wiki/Binary_numeral_system)

### Plain mode

This mode shows a “plain” clock in large text that takes up nearly the whole LCD.

## 11.4.6 Disk Tidy

Disk Tidy deletes junk files left behind by Windows, Linux or OS X after a USB connection. Select the OS’s files you want to delete in the ‘Files to Clean’ menu and select ‘Start

Cleaning’ to begin to process. The settings are stored in `.rockbox/rocks/apps/disktidy.config`, in a plain text file that is user-modifiable to allow more entries to be added.

### Available Options

**All** selects all Linux, OS X, and Windows files.

**None** deselects all file options.

**Linux** selects Linux files. Default files are `.dolphinview`, `.d3lphinview`, and `.Trash-*/.`

**Windows** selects Windows files. Default files are `Thumbs.db`, `RECYCLE.BIN`, `Desktop.ini`, `/Recycled` and `/System Volume Information`.

**Mac** selects OS X files. Default files are `._*`, `.DS_Store` and `/.Trashes`.

**Other** selects additional files added in by the user.

Key	Action
Left	Exit / Abort

### 11.4.7 Keybox

Keybox is an encrypted password storage using the “Tiny Encryption Algorithm” with a key derived using md5.

#### Using Keybox

To get started, start up the plugin and select ENTER KEYBOX. The first time you enter Keybox you will be prompted for a master password and for confirmation of the master password. The master password is the password that you must use to access your stored passwords.

Once inside, enter the context menu by pressing Long **Select**. From the context menu you can create new entries, delete entries and edit entries. Each entry has a “title”, a “user name” and a “password”.

Selecting RESET KEYBOX from the main menu will delete the current list of passwords and a new, empty list will be created the next time you select ENTER KEYBOX after prompting for a new master password. Entries are automatically saved when the plugin is exited.

### 11.4.8 Lamp

Lamp is a simple plugin to use your player as a lamp (flashlight, torch). You get an empty screen with maximum brightness.

Key	Action
<b>Left/Right</b>	Toggle between colours
<b>Power</b>	Quit

### 11.4.9 md5sum

Open a file, a directory or just launch it from the plugin menu to create an md5sum of the file, the directory's contents or the whole filesystem. If the file's extension is `.md5` or `.md5sum`, it will check the md5 sums in the file instead. If the file's extension is `.md5list` it will compute md5 sums for all the files listed.

### 11.4.10 Metronome

This plugin can be used as a metronome to keep time during music practice. Adjust the tempo through the interface or by tapping it out on the appropriate button.

Key	Action
<b>Power</b>	Exit plugin Start / Stop
<b>Left / Right</b>	Tap tempo Adjust tempo Adjust volume

### 11.4.11 Random Folder Advance Configuration

This plugin is used to configure the folders which will be considered when the Auto-Change Directory feature is set to RANDOM.

#### Menu

**Generate Folder List** Generates a list of all folders found on the player. You can filter the directories which are scanned by creating a file called `/.rockbox/folder_advance_dir.txt`. Only the directories in this file and any contained directories will be scanned. You can have up to 10 directories ignored by the scan by placing a minus sign before them in the list (i.e. `-/CDs` will cause everything in the `/CDs` directory to be ignored.). If you just want `/CDs` to be

ignored but want to include the folders within it you need to have both `-/CDs` and `CDs` as entries.

**Edit Folder List** Enter the folder list editor

**Export List To Textfile** Exports the list to `/.rockbox/folder_advance_list.txt`

**Import List From Textfile** Imports the list from `/.rockbox/folder_advance_list.txt`

**Quit**

#### Folder List Editor Keys

Key	Action
<b>Select or Right</b>	Delete selected folder
<b>Long Select</b>	Bring up the context menu which allows you to remove the selected folder or it's entire folder tree
<b>Left</b>	Exit

#### 11.4.12 Rockpaint

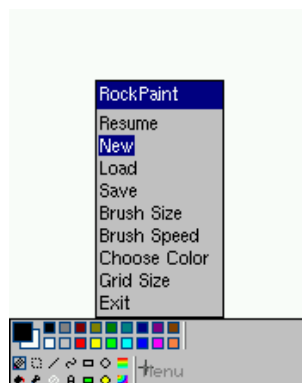


Figure 11.46: Rockpaint

Rockpaint is a bitmap (`.bmp`) editor for Rockbox. It can open any `.bmp` file whose dimensions are the same size as your device's screen or smaller; it can also create empty bitmaps for you to work with.



## Opening A File

To open a file, you may use either the context menu option "Open With" in the File Browser, or you may enter Rockpaint first using the Plugins menu and open a file from there. To perform the latter, simply press Rockpaint's Menu button or move the cursor beyond the bottom of the screen; then move the cursor onto "Menu" and select it. Finally, select "Load" and navigate to the image you wish to open.

## Tools

Rockpaint offers several tools to aid you in editing; you can view them by either pressing Rockpaint's "Menu" key or by attempting to move the cursor beyond the bottom of the screen. From top to bottom and left to right, and by section, they are as follows:

**Colour Picker** The top left tool shows your colours that are at the ready. To swap them, "click" on the background colour. To edit the foreground colour, click on it.

**Preset Palette** Several preset colours are available. Clicking on one changes the foreground of the Colour Picker to the selected colour.

**Pencil** Draws as you move the cursor. You can change the brush size with the Menu option "Brush Size". Use the Select key to toggle the tool while editing the image.

**Selection tool** Allows you to select a rectangular region; once you do, you will be shown a menu of options (including "cancel" if you make a mistake).

**Line tool** Draws a straight line.

**Curve tool** Allows you to draw a line and curve it.

**Rectangle tool** Draws an unfilled rectangle.

**Circle tool** Draws an unfilled circle.

**Gradient fill** To use this tool, click at the starting and ending points. Starting with the background and going to the foreground colour, Rockpaint will fill the region with a gradual colour change.

**Bucket fill** Fills an same-colour or empty region with a colour.

**Dropper** Click on a colour in the image to change the foreground colour to it.

**Eraser** The opposite of the pencil; it changes painted pixels to white.

**Text tool** "Draws" text on the image.

**Filled rectangle** Same as the Rectangle tool, but fills it with colour.

**Filled circle** Same as the Circle tool, but fills it with colour.

**Curved Gradient Fill** Same as Gradient fill, but you must draw two lines. Rockpaint will draw a curved, gradual change of colour in the region.

**Menu** This opens the Main Menu. You can also press the Menu key to open it.

### Main Menu

The main menu consists of the following:

**Resume** Closes the Main Menu.

**New** Creates a new canvas and discards the current file. BE CAREFUL. You will lose any unsaved changes in the file that is currently open.

**Load** Loads a bitmap file. Simply navigate to the file as you would in the file browser.

**Save** Saves the current file. If it has not been saved before, you will be given a chance to name it and choose the saving location.

**Brush speed** Changes the speed at which the selection cursor moves when you hold down a movement button.

**Brush size** Allows you to adjust the drawing size of the pencil tool.

**Choose colour** Allows you to manually edit the foreground colour. You can edit the RGB and/or the HSV values.

**Grid size** Allows you to show or hide a grid over the canvas, and to specify its size.

**Exit** Exits Rockpaint.

**Warning:** BE CAREFUL. Rockpaint will NOT prompt you to save if you select Exit, so any unsaved changes will be lost.



Key	Action
<b>Power</b>	Quits Rockpaint immediately.
<b>Left</b>	Moves the cursor to the left.
<b>Right</b>	Moves the cursor to the right.
<b>Play</b>	Moves the cursor up.
<b>Submenu</b>	Moves the cursor down.
<b>Select+Power</b>	Displays the Main Menu.
<b>Rec</b>	Displays the toolbar.
<b>Select</b>	Toggles the brush and selects objects.

### 11.4.13 Stats

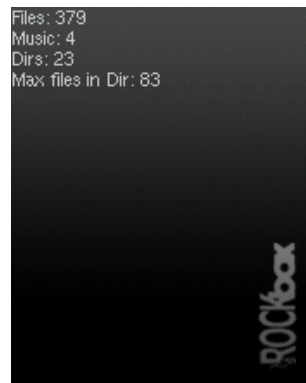


Figure 11.47: The stats-plugin

The stats-plugin simply counts the number of files, music files and directories on your player. Press **Power** to abort counting and exit the plugin. Press it again to quit after counting has finished.

### 11.4.14 Stopwatch

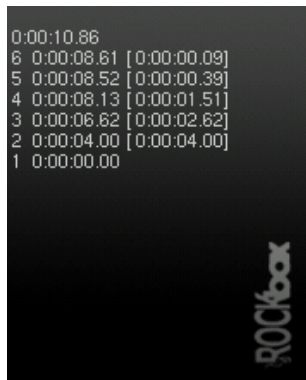


Figure 11.48: Stopwatch

A simple stopwatch program with support for saving times.

Key	Action
<b>Power</b>	Quit Plugin
<b>Right</b>	Start / stop
<b>Left</b>	Reset timer (only when timer is stopped)
<b>Select</b>	Take lap time
<b>Play / Submenu</b>	Scroll through lap times

### 11.4.15 Text Editor

This plugin allows you to view and edit simple text documents on your DAP. You can view files by using **OPEN WITH** from the **CONTEXT MENU** (see section 4.1.2 (page 24)).

#### Usage

If you start the Text Editor from the plugin browser you will be greeted with a blank screen. When started from the **OPEN WITH** menu item your file should be shown on the screen. You can now edit the file. The Text Editor is line based. This means you can edit one line at a time using the **VIRTUAL KEYBOARD** (see section 4.1.3 (page 26)).

- Move the selection bar to the line you want to edit.
- Edit the highlighted text line or insert a new one using the Item Menu.
- When finished editing exit the Text Editor. You'll be shown a list of save options.

**Note:** When you have not changed the file the Text Editor will quit immediately.



Key	Action
<b>Select or Right</b>	Edit Line / Select Character
<b>Left</b>	Exit / Abort Editing
<b>Submenu</b>	Show Item Menu
<b>Long Select</b>	Delete Line

## 12 Advanced Topics

### 12.1 Customising the User Interface

#### 12.1.1 Getting Extras

Rockbox supports custom fonts. A collection of fonts is available for download in the font package at <http://www.rockbox.org/daily.shtml>.

#### 12.1.2 Loading Fonts

Rockbox can load fonts dynamically. Simply copy the `.fnt` file to the player and “play” it in the FILE BROWSER. If you want a font to be loaded automatically every time you start up, it must be located in the `/.rockbox/fonts` directory and the filename must be at most 24 characters long. You can browse the fonts in `/.rockbox/fonts` under SETTINGS → THEME SETTINGS → BROWSE FONTS in the MAIN MENU.

**Note:** Advanced Users Only: Any BDF font file up to 16 pixels high should be usable with Rockbox. To convert from `.bdf` to `.fnt`, use the `convbdf` tool. This tool can be found in the `tools` directory of the Rockbox source code.



#### 12.1.3 Loading Languages

Rockbox can load language files at runtime. Simply copy the `.lng` file (*do not use the `.lang` file*) to the player and “play” it in the Rockbox directory browser or select SETTINGS → GENERAL SETTINGS → LANGUAGE from the MAIN MENU.

**Note:** If you want a language to be loaded automatically every time you start up, it must be located in the `/.rockbox/langs` directory and the filename must be a maximum of 24 characters long.



If your language is not yet supported and you want to write your own language file find the instructions on the Rockbox website: [☞LangFiles](#)

#### 12.1.4 Changing Filetype Colours

Rockbox has the capability to modify the FILE BROWSER to show files of different types in different colours, depending on the file extension.

##### Set-up

There are two steps to changing the filetype colours – creating a file with the extension `.colours` and then activating it using a config file. The `.colours` files *must* be stored

in the `/.rockbox/themes/` directory. The `.colours` file is just a text file, and can be edited with your text editor of choice.

### Creating the `.colours` file

The `.colours` file consists of the file extension (or `folder`) followed by a colon and then the colour desired as an RGB value in hexadecimal, as in the following example:

```
folder:808080
mp3:00FF00
ogg:00FF00
txt:FF0000
???:FFFFFF
```

The permissible extensions are as follows:

folder, m3u, m3u8, cfg, wps, lng, rock, bmark, cue, colours, mpa, mi4, mp1, mp2, mp3, ogg, oga, wma, wmv, asf, wav, flac, ac3, a52, mpc, wv, m4a, m4b, mp4, mod, shn, aif, aiff, spx, sid, adx, nsf, nsfe, spc, ape, mac, sap, mpg, mpeg, bmp, fmr, fnt, kbd

All file extensions that are not either specifically listed in the `.colours` files or are not in the list above will be set to the colour given by `???`. Extensions that are in the above list but not in the `.colours` file will be set to the foreground colour as normal.

### Activating

To activate the filetype colours, the `.colours` file needs to be invoked from a `.cfg` configuration file. The easiest way to do this is to create a new text file containing the following single line:

```
filetype colours: /.rockbox/themes/filename.colours
```

where filename is replaced by the filename you used when creating the `.colours` file. Save this file as e.g. `colours.cfg` in the `/.rockbox/themes` directory and then activate the config file from the menu as normal (SETTINGS → THEME SETTINGS → BROWSE THEMES).

### Editing

The built-in TEXT EDITOR (see section 11.4.15 (page 140)) automatically understands the `.colours` file format, but an external text editor can also be used. To edit the `.colours` file using Rockbox, “play” it in the FILE BROWSER. The file will open in the TEXT EDITOR. Upon selecting a line, the following choices will appear:

### Extension Colour

If **Extension** is selected, the VIRTUAL KEYBOARD (see section 4.1.3 (page 26)) appears, allowing the file extension to be modified. If **Colour** is selected, the colour selector screen appears. Choose the desired colour, then save the `.colours` file using the standard TEXT EDITOR controls.

## 12.1.5 Loading Backdrops

Rockbox supports showing an image as a backdrop in the FILE BROWSER and the menus. The backdrop image must be a `.bmp` file of the exact same dimensions as the display in your player (176x220x16 with the last number giving the colour depth in bits). To use an image as a backdrop browse to it in the FILE BROWSER and open the CONTEXT MENU (see section 4.1.2 (page 24)) on it and select the option SET AS BACKDROP. If you want rockbox to remember your backdrop the next time you start your player the backdrop must be placed in the `/.rockbox/backdrops` directory.

## 12.2 Configuring the WPS

### 12.2.1 WPS – General Info

**Description:** The WPS or WHILE PLAYING SCREEN is the name used to describe the information displayed on the player's screen whilst an audio track is being played. The default WPS is a relatively simple screen displaying Track name, Artist, Album etc. in the default font as a purely text based layout. There are a number of WPS files included in Rockbox, and you can load one of these at any time by selecting it in SETTINGS → THEME SETTINGS → BROWSE .WPS FILES.

**Note:** “Playing” a `.wps` from the FILE BROWSER has the same effect.



**File Location:** Custom WPS files may be located anywhere on the drive. The only restriction is that they must end in `.wps`. When you “play” a `.wps` file, it will be used for future WPS screens, and if the “played” `.wps` file is located in the `/.rockbox/wps` directory, it will be remembered and used after reboot. The name of the `.wps` file must be no more than 24 characters long for it to be remembered.

### 12.2.2 WPS – Build Your Own

Quite simply, enter the WPS code in your favourite text editor, Notepad on Windows works fine. When you save it, instead of saving it as a `.txt` file, save it as a `.wps` file. Example: Instead of `Rockbox.txt`, save the file as `Rockbox.wps`. To make sure non english characters display correctly in your WPS you must save the `.wps` file with UTF-8 character encoding. This can be done in most editors, for example Notepad in Windows 2000 or XP (but not in 9x/ME) can do this. See appendix section B (page 152) for all the tags that are available.

- All characters not preceded by % are displayed as typed.
- Lines beginning with # are comments and will be ignored.
- Maximum file size used is 1600 bytes. If you have a bigger WPS file, only the first part of it will be loaded and used.

**Note:** Keep in mind that your player resolution is 176x220x16 (with the last number giving the colour depth in bits) when designing your own WPS, or if you use a WPS designed for another target. 

### Conditional Tags

**If/else:** Syntax: `[%?xx<true|false>`

If the tag specified by “xx” has a value, the text between the “<” and the “|” is displayed (the true part), else the text between the “|” and the “>” is displayed (the false part). The else part is optional, so the “|” does not have to be specified if no else part is desired. The conditionals nest, so the text in the if and else part can contain all % commands, including conditionals.

**Enumerations:** Syntax: `[%?xx<alt1|alt2|alt3|...|else>`

For tags with multiple values, like Play status, the conditional can hold a list of alternatives, one for each value the tag can have. Example enumeration:

---

EXAMPLE

---

```
[%?mp<Stop|Play|Pause|Fwd|Rew>
```


---

The last else part is optional, and will be displayed if the tag has no value. The WPS parser will always display the last part if the tag has no value, or if the list of alternatives is too short.

### Next Song Info

You can display information about the next song – the song that is about to play after the one currently playing (unless you change the plan).

If you use the upper-case versions of the three tags: F, I and D, they will instead refer to the next song instead of the current one. Example: %Ig is the genre name used in the next song and %Ff is the mp3 frequency.

**Note:** The next song information *will not* be available at all times, but will most likely be available at the end of a song. We suggest you use the conditional display tag a lot when displaying information about the next song! 

### Alternating Sublines

It is possible to group items on each line into 2 or more groups or “sublines”. Each subline will be displayed in succession on the line for a specified time, alternating continuously through each defined subline.



Items on a line are broken into sublines with the semicolon ';' character. The display time for each subline defaults to 2 seconds unless modified by using the '%t' tag to specify an alternate time (in seconds and optional tenths of a second) for the subline to be displayed.

Subline related special characters and tags:

; Split items on a line into separate sublines

**%t** Set the subline display time. The '%t' is followed by either integer seconds (%t5), or seconds and tenths of a second (%t3.5).

Each alternating subline can still be optionally scrolled while it is being displayed, and scrollable formats can be displayed on the same line with non-scrollable formats (such as track elapsed time) as long as they are separated into different sublines. Example subline definition:

---

EXAMPLE

---

```
%s%t4%ia;%s%it;%t3%pc %pr : Display id3 artist for 4 seconds,
                             Display id3 title for 2 seconds,
                             Display current and remaining track time
                             for 3 seconds,
                             repeat...
```

---

Conditionals can be used with sublines to display a different set and/or number of sublines on the line depending on the evaluation of the conditional. Example subline with conditionals:

---

EXAMPLE

---

```
%(?it<%t8%s%it|%s%fn>;%?ia<%t3%s%ia|%t0>
```

---

The format above will do two different things depending if ID3 tags are present. If the ID3 artist and title are present:

- Display id3 title for 8 seconds,
- Display id3 artist for 3 seconds,
- repeat...

If the ID3 artist and title are not present:

- Display the filename continuously.

Note that by using a subline display time of 0 in one branch of a conditional, a subline can be skipped (not displayed) when that condition is met.

## Using Images

You can have as many as 52 images in your WPS. There are various ways of displaying images:

1. Load and always show the image, using the `%x` tag
2. Preload the image with `%xl` and show it with `%xd`. This way you can have your images displayed conditionally.
3. Load an image and show as backdrop using the `%X` tag. The image must be of the same exact dimensions as your display.

Example on background image use:

---

EXAMPLE

---

```
%X|background.bmp|
```

---

The image with filename `background.bmp` is loaded and used in the WPS.

Example on bitmap preloading and use:

---

EXAMPLE

---

```
%x|a|static_icon.bmp|50|50|
%xl|b|rep_off.bmp|16|64|
%xl|c|rep_all.bmp|16|64|
%xl|d|rep_one.bmp|16|64|
%xl|e|rep_shuffle.bmp|16|64|
%?mm<%xdb|%xdc|%xdd|%xde>
```

---

Four images at the same x and y position are preloaded in the example. Which image to display is determined by the `%mm` tag (the repeat mode).

## Example File

---

EXAMPLE

---

```
%s%?in<%in - >%?it<%it|%fn> %?ia<[%ia%?id<, %id>]>
%pb%pc/%pt
```

---

That is, “tracknum – title [artist, album]”, where most fields are only displayed if available. Could also be rendered as “filename” or “tracknum – title [artist]”.

## 12.3 Managing Rockbox Settings

### 12.3.1 Introduction to .cfg Files.

Rockbox allows users to store and load multiple settings through the use of configuration files. A configuration file is simply a text file with the extension `.cfg`.

A configuration file may reside anywhere on the disk. Multiple configuration files are permitted. So, for example, you could have a `car.cfg` file for the settings that you use

while playing your jukebox in your car, and a `headphones.cfg` file to store the settings that you use while listening to your player through headphones.

See section 12.3.2 (page 147) below for an explanation of the format for configuration files. See section 12.3.3 (page 148) for an explanation of how to create, edit and load configuration files.

### 12.3.2 Specifications for .cfg Files.

The Rockbox configuration file is a plain text file, so once you use the SAVE .CFG FILE option to create the file, you can edit the file on your computer using any text editor program. See Appendix section D (page 164) for available settings. Configuration files use the following formatting rules:

1. Each setting must be on a separate line.
2. Each line has the format “setting: value”.
3. Values must be within the ranges specified in this manual for each setting.
4. Lines starting with `#` are ignored. This lets you write comments into your configuration files.

Example of a configuration file:

---

EXAMPLE

---

```
volume: 70
bass: 11
treble: 12
balance: 0
time format: 12hour
volume display: numeric
show files: supported
wps: /.rockbox/car.wps
lang: /.rockbox/afrikaans.lng
```

---

**Note:** As you can see from the example, configuration files do not need to contain all of the Rockbox options. You can create configuration files that change only certain settings. So, for example, suppose you typically use the player at one volume in the car, and another when using headphones. Further, suppose you like to use an inverse LCD when you are in the car, and a regular LCD setting when you are using headphones. You could create configuration files that control only the volume and LCD settings. Create a few different files with different settings, give each file a different name (such as `car.cfg`, `headphones.cfg`, etc.), and you can then use the BROWSE .CFG FILES option to quickly change settings.



A special case configuration file can be used to force a particular setting or settings every time Rockbox starts up (e.g. to set the volume to a safe level). Format a new configuration file as above with the required setting(s) and save it into the `/.rockbox` directory with the filename `fixed.cfg`.

### 12.3.3 The Manage Settings menu

The **MANAGE SETTINGS** menu can be found in the **MAIN MENU**. The **MANAGE SETTINGS** menu allows you to save and load **.cfg** files.

**Browse .cfg Files** Opens the **FILE BROWSER** in the **/.rockbox** directory and displays all **.cfg** (configuration) files. Selecting a **.cfg** file will cause Rockbox to load the settings contained in that file. Pressing **Left** will exit back to the **MANAGE SETTINGS** menu. See the **WRITE .CFG FILES** option on the **MANAGE SETTINGS** menu for details of how to save and edit a configuration file.

**Reset Settings** This wipes the saved settings in the player and resets all settings to their default values.

**Note:** You can also reset all settings to their default values by turning off the player, turning it back on, and holding the **Rec** button immediately after the player turns on.



**Save .cfg File** This option writes a **.cfg** file to your player's disk. The configuration file has the **.cfg** extension and is used to store all of the user settings that are described throughout this manual.

Hint: Use the **SAVE .CFG FILE** feature (**MAIN MENU** → **MANAGE SETTINGS**) to save the current settings, then use a text editor to customize the settings file. See Appendix section [D](#) (page [164](#)) for the full reference of available options.

**Save Sound Settings** This option writes a **.cfg** file to your player's disk. The configuration file has the **.cfg** extension and is used to store all of the sound related settings.

**Save Theme Settings** This option writes a **.cfg** file to your player's disk. The configuration file has the **.cfg** extension and is used to store all of the theme related settings.

## 12.4 Firmware Loading















### 12.4.1 Using ROLO (Rockbox Loader)

Rockbox is able to load and start another firmware file without rebooting. You just “play” a file with the extension **.mi4**. This can be used to test new firmware versions without deleting your current version.



# A File formats

## A.1 Supported file formats

Icon	File Type	Extension	Action when selected
	Directory	<i>none</i>	Enter the directory
	Audio file	<i>various</i> (see <a href="#">A.2</a> )	Start playing the file and show the WPS
	Cuesheet	<code>.cue</code>	View the cuesheet file
	Playlist	<code>.m3u</code> , <code>.m3u8</code>	Load the playlist and start playing the first file
	Rockbox firmware	<code>.mi4</code>	Load the new firmware with ROLO
	While Playing Screen	<code>.wps</code>	Load the new WPS display configuration
	Language File	<code>.lng</code>	Load the language file
	Text File	<code>.txt</code>	Display the text file using the text viewer plugin
	Configuration File	<code>.cfg</code>	Load the settings file
	Font	<code>.fnt</code>	Change the user interface font to this one
	Plugin	<code>.rock</code>	Start the plugin
	Chip8 game	<code>.ch8</code>	Play the Chip8 game
	Image	<code>.jpg</code>	View the JPEG image
	Video	<code>.mpg</code> , <code>.mpeg</code> , <code>.mpv</code> , <code>.m2v</code>	Play the MPEG1/2 video
	FM Presets	<code>.fmr</code>	Load the FM Presets (previous are discarded)
	Voice file	<code>.voice</code>	Allow Rockbox to speak menus
	Bookmark	<code>.bmark</code>	Display all bookmarks for an audio file
	Link	<code>.link</code>	Display list of target files and directories; selecting one jumps to the target. See section <a href="#">11.3.1</a> (page <a href="#">116</a> ).
	Colours	<code>.colours</code>	Open the colours file for editing. See section <a href="#">12.1.4</a> (page <a href="#">141</a> ).
	Game of Life	<code>.cells</code>	Show the configuration with the “Rocklife” plugin

## A.2 Supported audio formats

Format	Extension	Notes
<i>Lossy codecs</i>		
MPEG audio	.mp1, .mpa, .mp2, .mp3	Some old “floor 0” files may crash Rockbox.
OGG/Vorbis	.ogg, .oga	
Musepack	.mpc	
Advanced Audio Coding	.m4a, .m4b, .mp4	
Windows Media Audio	.wma, .wmv, .asf	Supports downmixing for playback of 5.1 streams in stereo.
ATSC A/52	.a52, .ac3	
ADX	.adx	
Speex	.spx	
<i>Lossless codecs</i>		
Waveform audio format	.wav	Seeking not supported. Only -c1000 files decode fast enough to be useful.
Audio Interchange File Format	.aif, .aiff	
Free Lossless Audio	.flac	
Apple Lossless	.m4a, .mp4	
Wavpack	.wv	
Shorten	.shn	
Monkey’s Audio	.ape, .mac	
<i>Other codecs</i>		
Sound Interface Device	.sid	
MOD	.mod	
NES Sound Format	.nsf, .nsfe	
SPC700	.spc	
Atari SAP	.sap	

## B WPS Tags

### B.1 Status Bar

Tag	Description
%we	Display Status Bar
%wd	Hide Status Bar

These tags override the player setting for the display of the status bar. They must be noted on their own line (which will not be shown in the WPS).

### B.2 Information from the track tags

Tag	Description
%ia	Artist
%ic	Composer
%id	Album Name
%ig	Genre Name
%in	Track Number
%it	Track Title
%iv	ID3 version (1.0, 1.1, 2.2, 2.3, 2.4, or empty if not an ID3 tag)
%iy	Year

Remember that this information is not always available, so use the conditionals to show alternate information in preference to assuming.

These tags, when written with a capital “I” (e.g. %Ia or %Ic), produce the information for the next song to be played.



## B.3 Power Related Information

Tag	Description
%b1	Numeric battery level in percents Can also be used in a conditional: <code>%(b1&lt;-1 0 1 2 ... N)&gt;</code> , where the value <code>-1</code> is used when the battery level isn't known (it usually is)
%bv	The battery level in volts
%bt	Estimated battery time left
%bp	"p" if the charger is connected (only on targets that can charge batteries)
%bc	"c" if the unit is currently charging the battery (only on targets that have software charge control or monitoring)
%bs	Remaining time of the sleep timer (if it is set)

## B.4 Information about the file

Tag	Description
%fb	File Bitrate (in kbps)
%fc	File Codec (e.g. "MP3" or "FLAC"). This tag can also be used in a conditional tag, <code>%(fc&lt;mp1 mp2 mp3 aiff wav ogg flac mpc a52 wavpack alac aac- shn sid adx nsf speex spc ape wma mod sap unknown)&gt;</code> . The codec order is as follows: MP1, MP2, MP3, AIFF, WAV, Ogg Vorbis (OGG), FLAC, MPC, AC3, WavPack (WV), ALAC, AAC, Shorten (SHN), SID, ADX, NSF, Speex, SPC, APE, WMA, MOD, SAP.
%ff	File Frequency (in Hz)
%fm	File Name
%fn	File Name (without extension)
%fp	File Path
%fs	File Size (in Kilobytes)
%fv	"(avg)" if variable bit rate or empty string if constant bit rate
%d1	First directory from the end of the file path
%d2	Second directory from the end of the file path
%d3	Third directory from the end of the file path

Example for the %dN commands: If the path is `"/Rock/Kent/Isola/11 - 747.mp3"`, %d1 is "Isola", %d2 is "Kent" and %d3 is "Rock".

These tags, when written with the first letter capitalized (e.g. %Fn or %D2), produce the information for the next file to be played.

## B.5 Playlist/Song Info

Tag	Description
%pb	Progress Bar This will replace the entire line with a progress bar. You can set the height, position and width of the progressbar (in pixels): %pb height leftpos rightpos toppos
%px	Percentage Played In Song
%pc	Current Time In Song
%pe	Total Number of Playlist Entries
%pm	Peak Meter. The entire line is used as volume peak meter.
%pn	Playlist Name (without path or extension)
%pp	Playlist Position
%pr	Remaining Time In Song
%ps	“s” if shuffle mode is enabled
%pt	Total Track Time
%pv	Current volume (in dB). Can also be used in a conditional: %?pv<0 1 2 ... N> 0 is used for mute, the last option is used for values greater than zero.

## B.6 Runtime Database

Tag	Description
%rp	Song playcount
%rr	Song rating (0-10). This tag can also be used in a conditional tag: %?rr<0 1 2 3 4 5 6 7 8 9 10>

## B.7 Sound (DSP) settings

Tag	Description
%Sp	Current playback pitch
%xf	Crossfade setting, in the order: Off, Shuffle, Skip, Always
%rg	ReplayGain value in use (x.y dB). If used as a conditional, Replaygain type in use: %?rg<Off Track Album TrackShuffle AlbumShuffle No tag>

## B.8 Virtual LED

Tag	Description
%lh	“h” if the flash storage is accessed

## B.9 Repeat Mode

Tag	Description
%mm	Repeat mode, 0-4, in the order: Off, All, One, Shuffle

Example: %?mm<Off|All|One|Shuffle|A-B>

## B.10 Playback Mode Tags

Tag	Description
%mp	Play status, 0-4, in the order: Stop, Play, Pause, Fast Forward, Rewind

Example: %?mp<Stop|Play|Pause|Fwd|Rew>

## B.11 Changing Volume

Tag	Description
%mv[t]	“v” if the volume is being changed

The tag produces the letter “v” while the volume is being changed and some amount of time after that, i.e. after the volume button has been released. The optional parameter *t* specifies that amount of time, in seconds. If it is not specified, 1 second is assumed.

The tag can be used as the switch in a conditional tag to display different things depending on whether the volume is being changed. It can produce neat effects when used with conditional viewports.

Example: %?mv2.5<Volume changing|%pv>

The example above will display the text “Volume changing” if the volume is being changed and 2.5 secs after the volume button has been released. After that, it will display the volume value.

## B.12 Settings

Tag	Description
<code>%St &lt;setting name&gt; </code>	The value of the Rockbox setting with the specified name. See section <a href="#">D</a> (page <a href="#">164</a> ) for the list of the available settings.

Examples:

1. As a simple tag: `%St|skip length|`
2. As a conditional: `;%St|eq enabled|<Eq is enabled|Eq is disabled>`

## B.13 Images

Tag	Description
<code>%X filename.bmp </code>	Load and set a backdrop image for the WPS. This image must be exactly the same size as your LCD.
<code>%P filename.bmp </code>	Load a Progress Bar image for the WPS. Use <code>%pb</code> tag to show the progress bar
<code>%x n filename x y </code>	Load and display an image <b>n</b> : image ID (a-z and A-Z) for later referencing in <code>%xd</code> <b>filename</b> : file name relative to <code>/.rockbox/</code> and including “.bmp” <b>x</b> : x coordinate <b>y</b> : y coordinate.
<code>%x1 n filename x y [nimages ]</code>	Preload an image for later display (useful for when your images are displayed conditionally) <b>n</b> : image ID (a-z and A-Z) for later referencing in <code>%xd</code> <b>filename</b> : file name relative to <code>/.rockbox/</code> and including “.bmp” <b>x</b> : x coordinate <b>y</b> : y coordinate <b>nimages</b> : (optional) number of sub-images (tiled vertically, of the same height) contained in the bitmap. Default is 1.
<code>%xdn[i]</code>	Display a preloaded image <b>n</b> : image ID (a-z and A-Z) as it was specified in <code>%x</code> or <code>%x1</code> <b>i</b> : (optional) number of the sub-image to display (a-z for 1-26 and A-Z for 27-52). By default the first (i.e. top most) sub-image will be used.

Examples:

1. Load and display the image `/.rockbox/bg.bmp` with ID “a” at 37, 109:  
`%x|a|bg.bmp|37|109|`
2. Load a bitmap strip containing 5 volume icon images (all the same size) with image ID “M”, and then reference the individual sub-images in a conditional:  
`%x1|M|volume.bmp|134|153|5|`  
`??pv<%xdMa|%xdMb|%xdMc|%xdMd|%xdMe>`

**Note:**



- The images must be in BMP format
- The image tag must be on its own line
- The ID is case sensitive, giving 52 different ID's
- The size of the LCD screen for each player varies. See table below for appropriate sizes of each device. The x and y coordinates must respect each of the players' limits.

## B.14 Album Art

Tag	Description
<code>%Cl x y [[l c r]maxwidth] [[t c b]maxheight] </code>	Define the settings for albumart x: x coordinate y: y coordinate maxwidth: Maximum height maxheight: Maximum width
<code>%C</code>	Display the album art as configured. This tag can also be used as a conditional.

The picture will be rescaled, preserving aspect ratio to fit the given `maxwidth` and `maxheight`. If the aspect ratio doesn't match the configured values, the picture will be placed according to the flags to the `maxwidth` and `maxheight` parameters:

- `maxwidth`:
  1. Align left
  - c. Align center (default)
  - r. Align right
- `maxheight`:
  - t. Align left
  - c. Align center (default)
  - b. Align right

Examples:

1. Load albumart at position 20,40 and display it without resizing:  
`%Cl|20|40||`
2. Load albumart at position 0,20 and resize it to be at most 100x100 pixels. If the image isn't square, align it to the bottom-right corner:  
`%CL|0|20|r100|b100|`

## B.15 Alignment

Tag	Description
%al	Align the text left
%ac	Center the text
%ar	Align the text right

All alignment tags may be present in one line, but they need to be in the order left – center – right. If the aligned texts overlap, they are merged.

## B.16 Conditional Tags

Tag	Description
%(xx<true false>	If / Else: Evaluate for true or false case
%(xx<alt1 alt2 alt3 ... else>	Enumerations: Evaluate for first / second / third / ... / last condition

## B.17 Subline Tags

Tag	Description
%t<time>	Set the subline display cycle time (%t5 or %t3.4 formats)
;	Split items on a line into separate sublines

Allows grouping of several items (sublines) onto one line, with the display cycling round the defined sublines. See section [12.2.2](#) (page [144](#)) for details.

## B.18 Time and Date

Tag	Description
%cd	Day of month
%ce	Zero padded day of month
%cH	Zero padded hour from 00 to 23 (24 hour format)
%ck	Hour from 0 to 23 (24 hour format)
%cI	Zero padded hour from 12 to 12 (am/pm format)
%cI	Hour from 12 to 12 (am/pm format)
%cm	Month
%cM	Minutes
%cS	Seconds
%cy	2-digit year
%cY	4-digit year
%cP	Capital AM/PM
%cp	Lowercase am/pm
%ca	Weekday name
%cb	Month name
%cu	Day of week from 1 to 7, 1 is Monday
%cw	Day of week from 0 to 6, 0 is Sunday
%cc	Check for presence of the clock hardware

The %cc tag returns “c” if the necessary hardware is present and can also be used as a conditional. This can be very useful for designing a WPS that works on multiple targets, some with and some without a clock. By using this tag as a conditional it is possible to display current date and time on those targets that support this (like the e200 and e200R Series), or alternate information on those that do not .

Example: `[%?cc<%cH:%cM|No clock detected>`



## B.19 Other Tags

Tag	Description
%%	The character ‘%’
%<	The character ‘<’
%	The character ‘ ’
%>	The character ‘>’
%;	The character ‘;’
%s	Indicate that the line should scroll. Can occur anywhere in a line (given that the text is displayed; see conditionals above). You can specify up to ten scrolling lines. Scrolling lines can not contain dynamic content such as timers, peak meters or progress bars.

## C Album Art

### C.1 Introduction

Rockbox allows you to put the album art, or another image related to the music on your playerto display it in the PictureFlow plugin or in the WPS. For this feature to work, you must observe a few rules.

### C.2 Limitations

Rockbox does not support album art embedded in your files' tags, and will instead look for a picture located in the filesystem. In addition to this, the pictures must be in the BMP or JPEG formats. Rockbox does not support RLE-compressed BMP files, nor does it support progressive and multi-scan JPEG files. JPEG files must consist of a single scan with interleaved components, as progressive and multi-scan images require much more memory to decode.

### C.3 Where to put album art

The pictures can be named a number of different ways, and placed to a number of different locations. You can have pictures specific to the file or the album or use a generic picture. You can place the picture in the same directory as the file, in the parent directory or in a fixed directory named `/.rockbox/albumart/`. The order Rockbox uses when looking for a picture is as follows (a list in braces means that those file extensions are tried in that order):

1. `./filename.{jpeg,jpg,bmp}`
2. `./albumtitle.{jpeg,jpg,bmp}`
3. `./cover.{jpeg,jpg,bmp}`
4. `./folder.jpg`
5. `/.rockbox/albumart/artist-albumtitle.{jpeg,jpg,bmp}`
6. `../albumtitle.{jpeg,jpg,bmp}`
7. `../cover.{jpeg,jpg,bmp}`

The following characters will be replaced with an underscore (\_) when looking for albumtitle.bmp or artist-albumtitle.bmp: \ / : < > ? \* |. Doublequotes will be replaced by single qutoes. See [AlbumArt](#) in the wiki for more details and programs that will help you automate the process of putting album art on your player.

## D Config file options

Setting	Allowed Values	Unit
volume	-74 to +6	dB
bass	-24 to +24	dB
treble	-24 to +24	dB
balance	-100 to +100	%
channels	stereo, mono, custom, mono left, mono right, karaoke	N/A
stereo_width	0 to 250	%
shuffle	on, off	N/A
repeat	off, all, one, shuffle, ab	N/A
play selected	on, off	N/A
party mode	on, off	N/A
scan min step	1, 2, 3, 4, 5, 6, 8, 10, 15, 20, 25, 30, 45, 60	seconds
seek acceleration	very fast, fast, normal, slow, very slow	N/A
antiskip	5s, 15s, 30s, 1min, 2min, 3min, 5min, 10min	N/A
volume fade	on, off	N/A
sort case	on, off	N/A
show files	all, supported, music, playlists	N/A
show filename exts	off, on, unknown, view_all	N/A
follow playlist	on, off	N/A
playlist viewer icons	on, off	N/A
playlist viewer indices	on, off	N/A
playlist viewer track display	track name,full path	N/A
recursive directory insert	on, off, ask	N/A
scroll speed	1 to 25	Hz
scroll delay	0 to 2500	ms
scroll step	<b>devise a way to get ranges from config-*.h</b>	pixels
screen scroll step	<b>devise a way to get ranges from config-*.h</b>	pixels
Screen Scrolls Out Of View	on, off	N/A
bidir limit	0 to 200	% screen
scroll paginated	on, off	N/A

Setting	Allowed Values	Unit
hold_lr_for_scroll_in_list	on, off	N/A
show path in browser	off, current directory, full path	N/A
contrast	0 to 63	N/A
backlight timeout	off, on, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 45, 60, 90, 120	seconds
backlight timeout plugged	off, on, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 45, 60, 90, 120	seconds
backlight filters first keypress	on, off	N/A
backlight on button hold	normal, off, on	N/A
caption backlight	on, off	N/A
brightness	<b>devise a way to get ranges from config-*.h</b>	N/A
disk spindown	3 to 254	seconds
battery capacity	<b>devise a way to get ranges from config-*.h</b>	mAh
car adapter mode	on, off	N/A
idle poweroff	off, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 30, 45, 60	minutes
max files in playlist	1000 - 32000	N/A
max files in dir	50 - 10000	N/A
lang	/path/filename.lng	N/A
wps	/path/filename.wps	N/A
autocreate bookmarks	off, on	N/A
autoload bookmarks	off, on	N/A
use most-recent-bookmarks	off, on	N/A
pause on headphone unplug	off, pause, pause and resume	N/A
rewind duration on pause	0 to 15	seconds
disable autoresume if phones not present	off, on	N/A
Last.fm Logging	off, on	N/A
talk dir	off, number, spell	N/A
talk dir clip	off, on	N/A
talk file	off, number, spell	N/A
talk file clip	off, on	N/A
talk filetype	off, on	N/A
talk menu	off, on	N/A
Announce Battery Level	off, on	N/A
sort files	alpha, oldest, newest, type	N/A
sort dirs	alpha, oldest, newest	N/A
sort interpret number	digits, numbers	N/A
tagcache_autoupdate	on, off	N/A

Setting	Allowed Values	Unit
warn when erasing dynamic playlist	on, off	N/A
cuesheet support	on, off	N/A
folder navigation	off, on, random	N/A
gather runtime data	off, on	N/A
usb charging	on, off	N/A
skip length	track, 1s, 2s, 3s, 5s, 7s, 10s, 15s, 20s, 1min, 90s, 2min, 3min, 5min, 10min, 15min	N/A
prevent track skip	on, off	N/A
start in screen	previous, root, files, db, wps, menu, recording, radio, bookmarks	N/A
playlist catalog directory	/path/to/dir	N/A
list_accel_start_delay	0 to 10	ms
list_accel_wait	1 to 10	seconds
replaygain	on, off	N/A
replaygain type	track, album, track shuffle	N/A
replaygain noclip	on, off	N/A
replaygain preamp	-120 to 120	0.1dB
crossfade	off, shuffle, track skip, always	N/A
crossfade fade in delay	0 to 7	seconds
crossfade fade out delay	0 to 7	seconds
crossfade fade in duration	0 to 15	seconds
crossfade fade out duration	0 to 15	seconds
crossfade fade out mode	crossfade, mix	N/A
crossfeed	on, off	N/A
crossfeed direct gain	0 to 60	0.1dB
crossfeed cross gain	30 to 120	0.1dB
crossfeed hf attenuation	60 to 240	0.1dB
crossfeed hf cutoff	500 to 2000	Hz
eq enabled	on, off	N/A
eq precut	0 to 240	0.1dB
eq band 0 cutoff	0 to 32768	Hz
eq band 1 cutoff	0 to 32768	Hz
eq band 2 cutoff	0 to 32768	Hz
eq band 3 cutoff	0 to 32768	Hz
eq band 4 cutoff	0 to 32768	Hz
eq band 0 q	0 to 64	N/A
eq band 1 q	0 to 64	N/A
eq band 2 q	0 to 64	N/A
eq band 3 q	0 to 64	N/A

Setting	Allowed Values	Unit
eq band 4 q	0 to 64	N/A
eq band 0 gain	-240 to 240	0.1dB
eq band 1 gain	-240 to 240	0.1dB
eq band 2 gain	-240 to 240	0.1dB
eq band 3 gain	-240 to 240	0.1dB
eq band 4 gain	-240 to 240	0.1dB
dithering enabled	on, off	N/A
beep	off, weak, moderate, strong	N/A
keyclick	off, weak, moderate, strong	N/A
keyclick repeats	on, off	N/A
dircache	on, off	N/A
tagcache_ram	on, off	N/A
peak meter release	1 to 126	?
peak meter hold	off, 200ms, 300ms, 500ms, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 30, 1min	N/A
peak meter clip hold	on, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 45, 60, 90, 2min, 3min, 5min, 10min, 20min, 45min, 90min	N/A
peak meter busy	on, off	N/A
peak meter dbfs	on, off	on: dbfs, off: linear
peak meter min	0 to 89 (dB) or 0 to 100 (%)	dB or %
peak meter max	0 to 89 /(dB) or 0 to 100 (%)	dB or %
statusbar	on, off	N/A
scrollbar	on, off	N/A
volume display	graphic, numeric	N/A
battery display	graphic, numeric	N/A
font	/path/filename.fnt	N/A
kbd	/path/filename.kbd	N/A
invert	on, off	N/A
flip display	on, off	N/A
selector type	pointer, bar (inverse) , bar (color), bar (gradient)	N/A
show icons	on, off	N/A
iconset	/path/filename.bmp	N/A
viewers iconset	/path/filename.bmp	N/A
backdrop	/path/filename.bmp	N/A
foreground colour	000000 to FFFFFFFF	RRGGBB
background colour	000000 to FFFFFFFF	RRGGBB
line selector start colour	000000 to FFFFFFFF	RRGGBB
line selector end colour	000000 to FFFFFFFF	RRGGBB
line selector text colour	000000 to FFFFFFFF	RRGGBB
filetype colours	/path/filename.colours	N/A

Setting	Allowed Values	Unit
time format	12hour, 24hour	N/A
rec quality	0 to 7	0: small size, 7: high quality
rec frequency	48, 44, 32, 24, 22, 16	kHz
rec source	mic, line, spdif	N/A
rec channels	mono, stereo	N/A
rec mic gain	0 to 15	N/A
rec left gain	0 to 15	N/A
rec right gain	0 to 15	N/A
editable recordings	off,on	N/A
rec timesplit	off, 0:05, 0:10, 0:15, 0:30, 1:00, 2:00, 4:00, 6:00, 8:00, 16:00, 24:00	h:mm
pre-recording time	off, 1 to 30	seconds
rec directory	/path/to/dir	N/A
force fm mono	off, on	N/A



## E Menu Overview

include an overview of the menu structure here

## F User feedback

### F.1 Bug reports

If you experience inappropriate performance from any supported feature, please file a bug report on our web page. Do not report missing features as bugs, instead file them as feature ideas (see below).

For open bug reports refer to <http://www.rockbox.org/tracker/index.php?type=2>

#### F.1.1 Rules for submitting new bug reports

1. Check that the bug has not already been reported
2. Always include the following information in your bug report:
  - Which exact player you have.
  - Which exact Rockbox version you are using (Menu->Info -> Version)
  - A step-by-step description of what you did and what happened
  - Whether the problem is repeatable or a one-time occurrence
  - All relevant data regarding the problem, such as playlists, MP3 files etc. (IMPORTANT!)

### F.2 Feature ideas

To suggest an idea for a feature or to read those made by others, see <http://forums.rockbox.org/index.php?board=49.0>. Please keep in mind that this forum is for the discussion of feature ideas - they are not requests and there is no guarantee they will be acted upon.

#### F.2.1 Rules for submitting a new feature idea

1. Check that the feature has not already been suggested. Duplicates are really boring!
2. Check that the feature has not already been implemented. Download the latest current/daily build and/or search the mail list archive.
3. Check that the feature is possible to implement (see section [F.2.2](#) (page 171)).

### F.2.2 Features we will not implement

This is a list of Feature Requests we get repeatedly that we simply cannot do. View it as the opposite of a TODO!

- Interfacing with other USB devices (like cameras) or 2 player games over USB  
The USB system demands that there is a master that talks to a slave. The player can only serve as a slave, as most other USB devices such as cameras can. Thus, without a master no communication between the slaves can take place. If that is not enough, we have no way of actually controlling the communication performed over USB since the USB circuit in the player is strictly made for disk-access and does not allow us to play with it the way we'd need for any good communication to work.
- Support other file systems than FAT32 (like NTFS or ext2 or whatever)!  
No. support for more file systems will just take away valuable ram for unnecessary features. You can partition your player fine, just make sure the first one is FAT32 and then make the other ones whatever file system you want. Just do not expect Rockbox to understand them.
- Add scandisk-like features!  
It would be a very slow operation that would drain the batteries and take a lot of useful ram for something that is much better and faster done when connected to a host computer.

# G Changelog

## G.1 What is new since v3.0?

### G.1.1 New features

- ★ 2008-12-09: Album Art resizing.
- ★ 2008-12-09: FM radio support on Gigabeat S.
- ★ 2008-11-26: Software controlled backlight fading for targets without hardware fading (e200v1, c200v1, X5, Cowon D2 and H300)

### G.1.2 Enhancements

- ★ 2008-12-01: Several new tags were added to the WPS syntax
- ★ 2008-11-20: The build system received a major overhaul
- ★ 2008-11-03: Customisable options in the QuickScreen
- ★ 2008-10-25: Calendar plugin on all RTC equipped targets
- ★ 2008-10-08: Configurable mono recording mode
- ★ 2008-10-07: Support for version 1.1 scrobbler log files
- ★ 2008-10-03: APE playback optimized
- ★ 2008-09-21: MP3 playback optimized for dual-core targets

## G.2 What is new since v2.5?

### G.2.1 New features

- ★ 2008-07-27: SAP codec
- ★ 2008-07-14: Initial support for the Onda VX747
- ★ 2008-07-07: Added keybox plugin
- ★ 2008-06-10: md5sum plugin added
- ★ 2008-05-21: MOD codec support added
- ★ 2008-05-21: Initial support for the Philips GoGear SA9200.
- ★ 2008-05-04: Added study mode
- ★ 2008-05-03: Sound on the Gigabeat S.
- ★ 2008-04-24: Initial support for the Creative Zen Vision:M
- ★ 2008-04-23: Lamp (originally "flashlight") plugin
- ★ 2008-03-23: New bitmap strips feature in the WPS
- ★ 2008-03-23: The iAudio M3 is now a supported target
- ★ 2008-03-21: Viewport tag added for WPS
- ★ 2008-03-18: The Olympus m:robe 100 is now a supported target

- ★ 2007-12-09: PictureFlow: A nice animated visualization for album art
- ★ 2007-11-26: Matrix Demo
- ★ 2007-11-11: Rockbox can now display album art
- ★ 2007-09-06: Sound on Sansa c200
- ★ 2007-09-04: The SanDisk Sansa e200R models are now Rockboxed!
- ★ 2007-08-06: Make several splashes and confirmation screens speak
- ★ 2007-08-03: iPod 3rd gen is now officially a supported target
- ★ 2007-08-02: Superdom game
- ★ 2007-07-27: Sound on iPod 2nd Gen
- ★ 2007-07-25: Jackpot support for bitmap targets
- ★ 2007-07-03: WMA codec initial support
- ★ 2007-06-30: Reversi game
- ★ 2007-06-29: Rocklife plugin
- ★ 2007-06-28: Maze game
- ★ 2007-06-17: Custom filetype colour feature introduced
- ★ 2007-06-05: Monkey's Audio support
- ★ 2007-05-23: The 80GB Ipod Video is now supported by Rockbox
- ★ 2007-04-09: WAV file viewer
- ★ 2007-03-11: Sound on the Sansa e200
- ★ 2007-03-04: Rockbox runs and plays music on the iAudio M5
- ★ 2007-03-01: Add the Rockbox Menu
- ★ 2007-02-16: Chopper game
- ★ 2007-02-14: Cuesheet support
- ★ 2007-02-14: Icons in the menus
- ★ 2007-02-14: SPC codec
- ★ 2007-02-10: Album Artist and Comment Tag Support
- ★ 2007-02-09: Speex Codec Support
- ★ 2007-01-31: Invadrox, a Space Invaders clone
- ★ 2007-01-25: NSF codec
- ★ 2007-01-16: BlackJack plugin
- ★ 2007-01-02: Mazezam, a puzzle game for all bitmap lcd targets
- ★ 2006-12-29: Toshiba Gigabeat X and F series support
- ★ 2006-11-30: File properties in context menu
- ★ 2006-11-06: Samplerate and format selection added to recording settings. Encoders can be configured individually on a menu specific to the encoder in the recording menu
- ★ 2006-11-06: Pitch adjustment in semitone steps
- ★ 2006-10-27: Audio dithering option
- ★ 2006-10-19: last.fm (audioscrobbler) logging support
- ★ 2006-10-05: FM radio region setting
- ★ 2006-09-25: ADX codec
- ★ 2006-09-15: ZX spectrum emulator plugin - zxbox
- ★ 2006-08-28: Encoder Codec Interface for recording with additional FM recording support

- ★ 2006-08-07: Initial version of mpegplayer plugin
- ★ 2006-07-19: Rockpaint plugin
- ★ 2006-07-18: SID codec
- ★ 2006-07-18: Playlist catalog
- ★ 2006-04-19: Rockbox is functional and plays audio on the iPod Mini 1G
- ★ 2006-03-30: Rockbox is functional and plays audio on the iPod Mini 2G
- ★ 2006-03-28: DOOM
- ★ 2006-03-28: Sound on the iAudio X5 , X5L and X5V
- ★ 2006-03-26: Experimental WAV playback plugin for Archos Recorder/Ondio
- ★ 2006-03-26: Initial version of Tag Cache
- ★ 2006-03-20: Bubbles, a bubble game
- ★ 2006-03-19: Tetrox, a Tetris clone
- ★ 2006-03-12: Xobox, a Xonix/Qix clone
- ★ 2006-03-11: Pacbox, a pacman arcade machine emulator
- ★ 2006-02-22: "Chessbox" chess game plugin
- ★ 2006-02-13: iPod 5G audio playback
- ★ 2006-02-01: AIFF codec support added
- ★ 2006-01-28: Color bitmap support in the WPS (for color models)
- ★ 2006-01-23: Brickmania game plugin
- ★ 2005-12-06: Unicode support
- ★ 2005-11-05: Jewels game plugin - a Bejeweled clone.

## G.2.2 Enhancements

- ★ 2008-08-06: Redesigned recording screen
- ★ 2008-02-23: New default theme: cabbie 2.0
- ★ 2008-01-04: All new greyscale library with improved performance
- ★ 2007-08-08: Added support for grouping tags
- ★ 2007-08-06: Organise the plugins into categories
- ★ 2007-08-05: Voice file changes. Older voices no longer work, now all voice files are target-specific.
- ★ 2007-08-03: Added support for the disc number tag
- ★ 2007-04-04: WPS tokenizer: Rewritten WPS code
- ★ 2007-03-20: rockbox.\* file moved inside /.rockbox directory
- ★ 2007-01-23: Settings are now saved to /.rockbox/config.cfg and the hidden config sector is not used anymore
- ★ 2006-11-29: Playlists are saved with the extension .m3u8, extension .m3u is now read using the chosen codepage
- ★ 2006-09-16: New scheduler. Audio playback is now prioritised over other tasks
- ★ 2006-09-02: Enhanced statusbar in recording screen
- ★ 2006-08-15: Support for displaying the path in the file browser
- ★ 2006-02-07: Equalizer configuration for software codec platforms
- ★ 2006-02-06: The Rockbox manual is available in L<sup>A</sup>T<sub>E</sub>X format
- ★ 2005-12-05: New wps' added. Engineer2, marquee, and DancePuffDuo

### G.2.3 Bug fixes

## H Credits

People that have contributed to the project, one way or another. Friends!

▶ BJÖRN STENBERG ▶ LINUS NIELSEN FELTZ-  
 ING ▶ ANDY CHOI ▶ ANDREW JAMIESON  
 ▶ PAUL SUADE ▶ JOACHIM SCHIFFER  
 ▶ DANIEL STENBERG ▶ ALAN KORR ▶ GARY  
 CZVITKOVICZ ▶ STUART MARTIN ▶ FE-  
 LIX ARENDS ▶ ULF RALBERG ▶ DAVID  
 HÄRDEMAN ▶ THOMAS SAEYS ▶ GRANT  
 WIER ▶ JULIEN LABRUYÈRE ▶ NICOLAS  
 SAUZEDE ▶ ROBERT HAK ▶ DAVE CHAP-  
 MAN ▶ STEFAN MEYER ▶ ERIC LINENBERG  
 ▶ TOM CVITAN ▶ MAGNUS ÖMAN ▶ JEROME  
 KUPTZ ▶ JULIEN BOISSINOT ▶ NUUTTI KO-  
 TIVUORI ▶ HEIKKI HANNIKAINEN ▶ HARD-  
 EEP SIDHU ▶ MARKUS BRAUN ▶ JUSTIN  
 HEINER ▶ MAGNUS HOLMGREN ▶ BILL  
 NAPIER ▶ GEORGE STYLES ▶ MATS LIDELL  
 ▶ LEE MARLOW ▶ NATE NYSTROM ▶ NICK  
 ROBINSON ▶ CHAD LOCKWOOD ▶ JOHN  
 PYBUS ▶ UWE FREESE ▶ RANDY WOOD  
 ▶ GREGORY HAERR ▶ PHILIPP PERTER-  
 MANN ▶ GILLES ROUX ▶ MARK HILLEBRAND  
 ▶ DAMIEN TENEY ▶ ANDREAS ZWIRTES  
 ▶ KJELL ERICSON ▶ JIM HAGANI ▶ LU-  
 DOVIC LANGE ▶ MIKE HOLDEN ▶ SIMON  
 ELÉN ▶ MATTHEW P. O'REILLY ▶ CHRISTIAN  
 SCHÖNBERGER ▶ HENRIK BACKE ▶ CRAIG  
 SATHER ▶ JOSÉ MARIA GARCIA-VALDECASAS  
 BERNAL ▶ STEVIE OH ▶ JÖRG HOHENSOHN  
 ▶ DAVE JONES ▶ THOMAS PAUL DIFFEN-  
 BACH ▶ ROLAND KLETZING ▶ ITAI SHAKED  
 ▶ KEITH HUBBARD ▶ BENJAMIN METZLER  
 ▶ FREDERIC DANG NGOC ▶ PIERRE DE-  
 LORE ▶ HUW SMITH ▶ GARRETT DERNER  
 ▶ BARRY MCINTOSH ▶ LESLIE DONALD-  
 SON ▶ LEE PILGRIM ▶ ZAKK ROBERTS  
 ▶ FRANCOIS BOUCHER ▶ MATTHIAS WIEN-  
 TAPPER ▶ BRENT COUTTS ▶ JENS ARNOLD  
 ▶ GERALD VANBAREN ▶ CHRISTI SCARBOR-  
 OUGH ▶ STEVE CUNDARI ▶ MAT HOLTON  
 ▶ JAN GAJDOS ▶ ANTOINE CELLERIER  
 ▶ BRIAN KING ▶ JIRI JURECEK ▶ JACOB ERL-  
 BECK ▶ JEAN-PHILIPPE BERNARDY ▶ DAVE  
 HOOPER ▶ JONAS HÄGGQVIST ▶ THOM  
 JOHANSEN ▶ RINAT ZAKIROV ▶ MANUEL  
 DEJONGHE ▶ MARCOEN HIRSCHBERG  
 ▶ MICHIEL VAN DER KOLK ▶ TONY MOTAKIS  
 ▶ ANDY YOUNG ▶ ALEXANDRE BOURGET  
 ▶ RICHARD S. LA CHARITÉ III ▶ CHRIS-  
 TIAN GMEINER ▶ TOMAS Salfischberger  
 ▶ MIKA PEKKARINEN ▶ TAPPIO KARPPINEN  
 ▶ RICHARD OTTÓ O'BRIEN ▶ LUCA BU-  
 RELLI ▶ ALESSIO LENZI ▶ DAVID BRYANT  
 ▶ MARTIN ARVER ▶ ALEXANDER SPYRIDAKIS  
 ▶ PEDRO BALTAZAR VASCONCELOS ▶ RAY  
 LAMBERT ▶ DAVE WIARD ▶ PIETER BOS  
 ▶ KONSTANTIN ISAKOV ▶ BRYAN VANDYKE  
 ▶ HRISTO KOVACHEV ▶ SANDER SWEERS  
 ▶ ANTONIUS HELLMAN ▶ RYAN JACKSON  
 ▶ PER HOLMÄNG ▶ FREDERIC DEVERNAY  
 ▶ JOSÉ M. FANDIÑO ▶ GADI COHEN ▶ NAF-  
 TAL GOLDSTEIN ▶ DAVID DENT ▶ FRANK  
 DISCHNER ▶ LIBERMAN SHACHAR ▶ STEPHAN  
 WEZEL ▶ ALYSSA MILBURN ▶ KEVIN FER-  
 RARE ▶ ANTON OLEYNIKOV ▶ MARK ARIGO  
 ▶ MAGNUS WESTERLUND ▶ JAKE OWEN  
 ▶ MUSTAPHA SENHAJI ▶ ADAM BOOT  
 ▶ JONATHAN GORDON ▶ TAT TANG ▶ TOSHI-  
 HIKO ITOH ▶ DAVID J. SONG ▶ JEONG TAEK  
 IN ▶ ANDERS KAGERIN ▶ PETER D'HOYE  
 ▶ BEN BASHA ▶ BRANDON LOW ▶ NATHAN



HAND ▶ NICK LANHAM ▶ SEBASTIAN HENRIKSEN ▶ MARTIN SCARRATT ▶ KARL KURBJUN ▶ TOMASZ MALESINSKI ▶ ANDREW PILLEY ▶ MATT V.D. WESTHUIZEN ▶ TIM CRIST ▶ JVO STUDER ▶ DAN EVERTON ▶ IMRE HERCEG ▶ SEVEN LE MESLE ▶ CRAIG BACHELOR ▶ NIKOLAJ CHRISTENSEN ▶ MIKAEL MAGNUSSON ▶ DOMINIK WENGER ▶ HENRICO WITVLIET ▶ ANDREW SCOTT ▶ MIGUEL A. ARÉVALO ▶ AARON F. GONZALEZ ▶ ALEKSEY KOZYULIN ▶ JANI KINNUNEN ▶ RUI MARINHO ▶ ALUN THOMAS ▶ NILS WALLMÉNUS ▶ NAOAKI OKAZAKI ▶ WILL DYSON ▶ MATTHIAS MOHR ▶ CHRISTIAN MARG ▶ ELI SHERER ▶ FREDRIK ÖHRN ▶ NICOLAS PENNEQUIN ▶ RALF HERZ ▶ MICHAEL DiFEBBO ▶ DAVID ROTHENBERGER ▶ ROBERT KEEVIL ▶ MARK BRIGHT ▶ DOMINIK RIEBELING ▶ ALEXANDER BONDAR ▶ PETER CAWLEY ▶ RANI HOD ▶ TOM ROSS ▶ ANTON ROMANOV ▶ JEAN-LUC OHL ▶ STEVE BAVIN ▶ MARIANNE ARNOLD ▶ GAETANO VOCCA ▶ FREDERIK VESTRE ▶ WENBIN LEO ▶ TOM EVANS ▶ EWAN DAVIES ▶ FRÉDÉRIC FRANÇOIS ▶ MARC-ANDRÉ MOREAU ▶ IOANNIS KOUTOULAKIS ▶ ALISTAIR MARSHALL ▶ KARL OVE HUFTHAMMER ▶ VÍCTOR ZABALZA ▶ ULRICH PEGELOW ▶ ANDREAS MATTSSON ▶ DANIEL ANKERS ▶ PAUL LOUDEN ▶ RAINER SIN-SCH ▶ PLÁCIDO REVILLA ▶ MICHAEL SEVAKIS ▶ LUKAS SABOTA ▶ EMANUEL ZEPHIR ▶ ALEXANDER LEVIN ▶ BARRY WARDELL ▶ LARS VAN DE KLOMP ▶ PHILIPPE MIOSEC ▶ JOCHEN KEMNADE ▶ CORRY LAZAROWITZ ▶ TOM MEYER ▶ LAURENT BAUM ▶ JAMES TEH ▶ LIAM NATTRASS ▶ CHRISTIAN HACK ▶ WADE BROWN ▶ VADIM CHEKAN ▶ CHRISTOPHER BORCSOK ▶ VICTOR CARDENAS ▶ ANDREW MELVILLE ▶ PENGXUAN LIU ▶ ANDREW CUPPER ▶ THILO-ALEXANDER GINKEL ▶ ADAM GASHLIN ▶ ROBERT KUKLA ▶ DAVID QUESADA ▶ JARED STAFFORD ▶ MARTIN HENSEL ▶ STÉPHANE DOYON ▶ AUSTIN APPEL ▶ ANDRE SMITH ▶ TRAVIS HYYPPA ▶ IAN WEBBER ▶ PAVEL GNELITSA ▶ LUTZ BÖHNE ▶ WILL ROBERTSON ▶ ROBERT CARBONEAU ▶ YE WEI ▶ BRYAN CHILDS ▶ MIKE SCHMITT ▶ CHRIS TAYLOR ▶ TOBIAS LANGHOFF ▶ STEVE GOTTHARDT ▶ GREG WHITE ▶ MATTIEU FAVRÉAUX ▶ MALCOLM TYRRELL ▶ PIOTR JAFISZOW ▶ GARY ALLEN ▶ JOHN BOUANTOUN ▶ TOMASZ MON ▶ JAKUB MATOUŠEK ▶ ALBERT VELI ▶ CHRIS DOHAN ▶ TAKASHI OBARA ▶ RENE PEINTHOR ▶ ROAN HORNING ▶ BEN KEROACK ▶ SEAN MORRISEY ▶ SHAY GREEN ▶ NICK VANDERWEIT ▶ SIMON MENZEL ▶ TIMO HORSTSCHÄFER ▶ JACCO KONING ▶ CHRIS HAM ▶ JOSE RAMON GARCIA ▶ SIMON DESCARPENTRIES ▶ DOUGLAS VALENTINE ▶ JACOB GARDNER ▶ PASCAL BRIEHL ▶ DENIS STANISHEVSKIY ▶ EDDY COMAN ▶ LUKE BLANEY ▶ MARK REICHE ▶ MICHAL JEVJAK ▶ PHILIPPE LATULIPPE ▶ MAURICIO PECCORINI ▶ NATHAN HEP-TING ▶ AKIO IDEHARA ▶ DAGNI MCPHEE ▶ ALEX GERCHANOVSKY ▶ GERHARD DIRSCHL ▶ IVAN ZUPAN ▶ ALEXANDER PAPST ▶ CHRISTOPH REITER ▶ RHINO BANGA ▶ PAUL JONES ▶ MICHAEL GIACOMELLI ▶ ALEX WENGER ▶ ANDREE BUSCHMANN ▶ JOHNATHON MIHALOP ▶ RENE ALLKIVI ▶ TOBIAS SCHLADT ▶ JOHN ZHOU ▶ CHARLES VOELGER ▶ GERRITT GONZALES ▶ DIETER PELLKOEFER ▶ EVGENIY KACHALIN ▶ LENNY KOEPEL ▶ HARRY TU ▶ PAWEŁ WYSOCKI ▶ XINLU HUANG ▶ DANIEL DALTON ▶ BORIS GJENERO ▶ SYLVAIN FOURMANOIT ▶ ALEX PARKER ▶ MARIO LANG ▶ JUSTIN FOELL ▶ IGOR KUZMIN ▶ ADILSON VICENTE XAVIER ▶ JESSE LOCKWOOD ▶ JONATHAN BACKER ▶ SOFIAN BABAI ▶ COSTAS CALAMVOKIS ▶ CATALIN PATULEA ▶ PETER HARLEY ▶ MAX KELLEY ▶ ALEXANDER EICKHOFF ▶ PINITNUN SHANASABANG ▶ KEN FAZ-  
 ZONE ▶ DAVID BISHOP ▶ HEIN-PIETER VAN BRAAM ▶ PRZEMYSŁAW HOŁUBOWSKI

▶ STEPAN MOSKOVCHENKO ▶ JOHN S. GWYNNE ▶ BRIAN J. MOREY ▶ STIJN HISKEN  
 ▶ BERTRIK SIKKEN ▶ KARIM BOUCHER ▶ JAMES ESPINOZA ▶ FRANZ RÜHMLAND  
 ▶ JORDAN ANDERSON ▶ MAURUS CUELE-  
 NAERE ▶ CHRIS ALLEGRETTA ▶ ALASTAIR  
 S ▶ MARTIN CRKOVSKÝ ▶ ARIYA HIDAYAT  
 ▶ JONAS HURRELMANN ▶ LEE KANG HYUK  
 ▶ CLEMENS WERTHER ▶ ROBERT MENES  
 ▶ HENRI VALTA ▶ MELBA SITJAR ▶ MEHMET  
 Ş. ÇATALBAŞ ▶ SCOTT TINMAN ▶ ALEXAN-  
 DER KUZMENKOV ▶ THOMAS MARTITZ  
 ▶ PRAKARN SAHASOONTORNVUTE ▶ GEORGE  
 TAMPLARU ▶ APOORVA MAHAJAN ▶ VUONG  
 MINH HIEP ▶ MATEUSZ KUBICA ▶ FRANK  
 GEVAERTS ▶ CHELO SACRISTÁN ▶ SASCHA  
 WOLF ▶ NICKOLAY JORDANOV ▶ JOHANNES  
 VOGGENTHALER ▶ MARC GUAY ▶ ALEX  
 VANDERPOL ▶ JERRY LANGE ▶ YOHANN  
 MISQUITTA ▶ KEITH PERRI ▶ MARK FAW-  
 CUS ▶ IVAN PESIC ▶ MARCEL BARBULESCU  
 ▶ PHIL LIGHT ▶ ROB PURCHASE ▶ ANDREAS  
 MÜLLER ▶ CHRISTOPHER WILLIAMS ▶ MAR-  
 TIN RITTER ▶ JUSTIN HANNIGAN ▶ TOMASZ  
 WASILCZYK ▶ KENJIRO ARAI ▶ JOHN KAM-  
 INAR ▶ JORIS GOOSEN ▶ MARK GANSON  
 ▶ DAVIDE GENTILE ▶ JAMES VASILE ▶ MO-  
 HAMED TAREK ▶ MIKE BURKE ▶ MICHAEL  
 CHICOINE ▶ MACIEJ ADAMCZAK ▶ TOMER  
 SHALEV ▶ THIBAUT GIRKA ▶ RASMUS RY  
 ▶ WILLIAM POETRA YOGA HADISOESENSO  
 ▶ ADRIAN OSOIANU ▶ MARTIN PAHL ▶ ORI  
 AVTALION ▶ THOMAS SCHOTT ▶ DENNIS  
 IVANOV ▶ TAKUMI SUZUKI ▶ SHUNSUKE  
 SHIMIZU ▶ TADAYUKI NISHIZONO ▶ JUN  
 GU ▶ DANIEL WECK ▶ CLÉMENT PIT-  
 CLAUDEL ▶ JELLE GEERTS ▶ TADEUSZ PYŚ  
 ▶ ROSTISLAV CHEKAN ▶ FLORIN POPESCU  
 ▶ VOLKER MISCHE ▶ VITJA MAKAROV  
 ▶ FRANCISCO VILA ▶ CHRISTIAN LEES  
 ▶ RAFAËL CARRÉ ▶ DENES BALATONI ▶ ROY  
 WALLACE ▶ ERIC LASSAUGE ▶ FRANÇOIS  
 DINEL ▶ FRANCESCO RIGONI ▶ JOËL PUIK  
 ▶ KLAAS BOSTEELS ▶ TERUAKI KAWASHIMA  
 ▶ MARCIN LUKASIK ▶ LE JIN ▶ ALEX BEN-  
 NEE ▶ STÉPHANE QUERTINMONT ▶ BARTOSZ  
 FABIANOWSKI ▶ ADAM HOGAN ▶ ANDREW  
 MAHONE ▶ ANTON VERETENENKO ▶ VI-  
 CENTE IBARRA ▶ RUI ARAÚJO ▶ BRIAN  
 CLOUTIER ▶ OLIVIER BARBUT ▶ YOSHIHISA  
 UCHIDA ▶ SANGGON LEE ▶ ANTON VERETE-  
 NENKO ▶ KASPAR ROTHENFUSSER ▶ RYAN  
 PRESS ▶ CRAIG ELLIOTT ▶ KENDERES  
 TAMAS ▶ ERIC SHATTOW ▶ JOSHUA SIMMONS  
 ▶ SEI AOYUMI ▶ MARTIN POOL ▶ GARETH  
 SCHAKEL ▶ BRIAN SUTHERLAND ▶ SAM  
 BOUWER ▶ JOHANNES LINKE ▶ MICHAËL  
 BURTIN ▶ SASHA KHAMKOV ▶ KAI POSAD-  
 OWSKY ▶ JACK HALPIN ▶ JOHANNES  
 SCHWARZ ▶ DUSTIN SKORACKI ▶ TORNE  
 WUFF ▶ WOOKEY ▶ NICK SANT ▶ MICHAEL  
 CARR ▶ ERIC CLAYTON ▶ MARKO PAHLKE  
 ▶ VYTENIS SABELKA ▶ THE LIBMAD TEAM  
 ▶ THE WAVPACK TEAM ▶ THE FFMPEG TEAM  
 ▶ THE OGG VORBIS TEAM ▶ THE LIBA52  
 TEAM ▶ THE SPEEX TEAM ▶ THE LIBFAAD  
 TEAM ▶ THE DOOM TEAM ▶ THE GNUCHES  
 TEAM ▶ THE GNUBOY TEAM ▶ THE PACMAN  
 INSTRUCTIONAL EMULATOR TEAM ▶ THE  
 SPECTEMU TEAM ▶ THE LIBMPEG2 TEAM  
 ▶ THE GAME\_MUSIC\_EMU TEAM ▶ THE  
 OPENSPC DSP EMULATOR TEAM ▶ THE  
 ALAC DECODER TEAM ▶ THE UCL TEAM  
 ▶ THE IPOD LINUX TEAM ▶ THE VISION-8  
 EMULATOR TEAM ▶ THE ROBOTFINDSKIT-  
 TEN TEAM ▶ THE LIBMTP TEAM ▶ THE ASAP  
 TEAM

# I Licenses

## I.1 GNU Free Documentation License

Version 1.2, November 2002

Copyright ©2000,2001,2002 Free Software Foundation, Inc.

51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The purpose of this License is to make a manual, textbook, or other functional and useful document "free" in the sense of freedom: to assure everyone the effective freedom to copy and redistribute it, with or without modifying it, either commercially or non-commercially. Secondly, this License preserves for the author and publisher a way to get credit for their work, while not being considered responsible for modifications made by others.

This License is a kind of "copyleft", which means that derivative works of the document must themselves be free in the same sense. It complements the GNU General Public License, which is a copyleft license designed for free software.

We have designed this License in order to use it for manuals for free software, because free software needs free documentation: a free program should come with manuals providing the same freedoms that the software does. But this License is not limited to software manuals; it can be used for any textual work, regardless of subject matter or whether it is published as a printed book. We recommend this License principally for works whose purpose is instruction or reference.

### 1. APPLICABILITY AND DEFINITIONS

This License applies to any manual or other work, in any medium, that contains a notice placed by the copyright holder saying it can be distributed under the terms of this License. Such a notice grants a world-wide, royalty-free license, unlimited in duration, to use that work under the conditions stated herein. The "**Document**", below, refers to any such manual or work. Any member of the public is a licensee, and is addressed as "**you**". You accept the license if you copy, modify or distribute the work in a way requiring permission under copyright law.

A **"Modified Version"** of the Document means any work containing the Document or a portion of it, either copied verbatim, or with modifications and/or translated into another language.

A **"Secondary Section"** is a named appendix or a front-matter section of the Document that deals exclusively with the relationship of the publishers or authors of the Document to the Document's overall subject (or to related matters) and contains nothing that could fall directly within that overall subject. (Thus, if the Document is in part a textbook of mathematics, a Secondary Section may not explain any mathematics.) The relationship could be a matter of historical connection with the subject or with related matters, or of legal, commercial, philosophical, ethical or political position regarding them.

The **"Invariant Sections"** are certain Secondary Sections whose titles are designated, as being those of Invariant Sections, in the notice that says that the Document is released under this License. If a section does not fit the above definition of Secondary then it is not allowed to be designated as Invariant. The Document may contain zero Invariant Sections. If the Document does not identify any Invariant Sections then there are none.

The **"Cover Texts"** are certain short passages of text that are listed, as Front-Cover Texts or Back-Cover Texts, in the notice that says that the Document is released under this License. A Front-Cover Text may be at most 5 words, and a Back-Cover Text may be at most 25 words.

A **"Transparent"** copy of the Document means a machine-readable copy, represented in a format whose specification is available to the general public, that is suitable for revising the document straightforwardly with generic text editors or (for images composed of pixels) generic paint programs or (for drawings) some widely available drawing editor, and that is suitable for input to text formatters or for automatic translation to a variety of formats suitable for input to text formatters. A copy made in an otherwise Transparent file format whose markup, or absence of markup, has been arranged to thwart or discourage subsequent modification by readers is not Transparent. An image format is not Transparent if used for any substantial amount of text. A copy that is not "Transparent" is called **"Opaque"**.

Examples of suitable formats for Transparent copies include plain ASCII without markup, Texinfo input format, LaTeX input format, SGML or XML using a publicly available DTD, and standard-conforming simple HTML, PostScript or PDF designed for human modification. Examples of transparent image formats include PNG, XCF and JPG. Opaque formats include proprietary formats that can be read and edited only by proprietary word processors, SGML or XML for which the DTD and/or processing tools are not generally available, and the machine-generated HTML, PostScript or PDF produced by some word processors for output purposes only.

The **"Title Page"** means, for a printed book, the title page itself, plus such following pages as are needed to hold, legibly, the material this License requires to appear in the title page. For works in formats which do not have any title page as such, "Title Page" means the text near the most prominent appearance of the work's title, preceding the beginning of the body of the text.

A section **"Entitled XYZ"** means a named subunit of the Document whose title either is precisely XYZ or contains XYZ in parentheses following text that translates XYZ in another language. (Here XYZ stands for a specific section name mentioned below, such as **"Acknowledgements"**, **"Dedications"**, **"Endorsements"**, or **"History"**.) To **"Preserve the Title"** of such a section when you modify the Document means that it remains a section **"Entitled XYZ"** according to this definition.

The Document may include Warranty Disclaimers next to the notice which states that this License applies to the Document. These Warranty Disclaimers are considered to be included by reference in this License, but only as regards disclaiming warranties: any other implication that these Warranty Disclaimers may have is void and has no effect on the meaning of this License.

## 2. VERBATIM COPYING

You may copy and distribute the Document in any medium, either commercially or noncommercially, provided that this License, the copyright notices, and the license notice saying this License applies to the Document are reproduced in all copies, and that you add no other conditions whatsoever to those of this License. You may not use technical measures to obstruct or control the reading or further copying of the copies you make or distribute. However, you may accept compensation in exchange for copies. If you distribute a large enough number of copies you must also follow the conditions in section 3.

You may also lend copies, under the same conditions stated above, and you may publicly display copies.

## 3. COPYING IN QUANTITY

If you publish printed copies (or copies in media that commonly have printed covers) of the Document, numbering more than 100, and the Document's license notice requires Cover Texts, you must enclose the copies in covers that carry, clearly and legibly, all these Cover Texts: Front-Cover Texts on the front cover, and Back-Cover Texts on the back cover. Both covers must also clearly and legibly identify you as the publisher of these copies. The front cover must present the full title with all words of the title equally prominent and visible. You may add other material on the covers in addition. Copying with changes limited to the covers, as long as they preserve the title of the Document and satisfy these conditions, can be treated as verbatim copying in other respects.

If the required texts for either cover are too voluminous to fit legibly, you should put the first ones listed (as many as fit reasonably) on the actual cover, and continue the rest onto adjacent pages.

If you publish or distribute Opaque copies of the Document numbering more than 100, you must either include a machine-readable Transparent copy along with each Opaque copy, or state in or with each Opaque copy a computer-network location from which the general network-using public has access to download using public-standard network protocols a complete Transparent copy of the Document, free of added material. If

you use the latter option, you must take reasonably prudent steps, when you begin distribution of Opaque copies in quantity, to ensure that this Transparent copy will remain thus accessible at the stated location until at least one year after the last time you distribute an Opaque copy (directly or through your agents or retailers) of that edition to the public.

It is requested, but not required, that you contact the authors of the Document well before redistributing any large number of copies, to give them a chance to provide you with an updated version of the Document.

#### 4. MODIFICATIONS

You may copy and distribute a Modified Version of the Document under the conditions of sections 2 and 3 above, provided that you release the Modified Version under precisely this License, with the Modified Version filling the role of the Document, thus licensing distribution and modification of the Modified Version to whoever possesses a copy of it. In addition, you must do these things in the Modified Version:

- A. Use in the Title Page (and on the covers, if any) a title distinct from that of the Document, and from those of previous versions (which should, if there were any, be listed in the History section of the Document). You may use the same title as a previous version if the original publisher of that version gives permission.
- B. List on the Title Page, as authors, one or more persons or entities responsible for authorship of the modifications in the Modified Version, together with at least five of the principal authors of the Document (all of its principal authors, if it has fewer than five), unless they release you from this requirement.
- C. State on the Title page the name of the publisher of the Modified Version, as the publisher.
- D. Preserve all the copyright notices of the Document.
- E. Add an appropriate copyright notice for your modifications adjacent to the other copyright notices.
- F. Include, immediately after the copyright notices, a license notice giving the public permission to use the Modified Version under the terms of this License, in the form shown in the Addendum below.
- G. Preserve in that license notice the full lists of Invariant Sections and required Cover Texts given in the Document's license notice.
- H. Include an unaltered copy of this License.
- I. Preserve the section Entitled "History", Preserve its Title, and add to it an item stating at least the title, year, new authors, and publisher of the Modified Version as given on the Title Page. If there is no section Entitled "History" in the Document,

- create one stating the title, year, authors, and publisher of the Document as given on its Title Page, then add an item describing the Modified Version as stated in the previous sentence.
- J. Preserve the network location, if any, given in the Document for public access to a Transparent copy of the Document, and likewise the network locations given in the Document for previous versions it was based on. These may be placed in the "History" section. You may omit a network location for a work that was published at least four years before the Document itself, or if the original publisher of the version it refers to gives permission.
  - K. For any section Entitled "Acknowledgements" or "Dedications", Preserve the Title of the section, and preserve in the section all the substance and tone of each of the contributor acknowledgements and/or dedications given therein.
  - L. Preserve all the Invariant Sections of the Document, unaltered in their text and in their titles. Section numbers or the equivalent are not considered part of the section titles.
  - M. Delete any section Entitled "Endorsements". Such a section may not be included in the Modified Version.
  - N. Do not retitle any existing section to be Entitled "Endorsements" or to conflict in title with any Invariant Section.
  - O. Preserve any Warranty Disclaimers.

If the Modified Version includes new front-matter sections or appendices that qualify as Secondary Sections and contain no material copied from the Document, you may at your option designate some or all of these sections as invariant. To do this, add their titles to the list of Invariant Sections in the Modified Version's license notice. These titles must be distinct from any other section titles.

You may add a section Entitled "Endorsements", provided it contains nothing but endorsements of your Modified Version by various parties—for example, statements of peer review or that the text has been approved by an organization as the authoritative definition of a standard.

You may add a passage of up to five words as a Front-Cover Text, and a passage of up to 25 words as a Back-Cover Text, to the end of the list of Cover Texts in the Modified Version. Only one passage of Front-Cover Text and one of Back-Cover Text may be added by (or through arrangements made by) any one entity. If the Document already includes a cover text for the same cover, previously added by you or by arrangement made by the same entity you are acting on behalf of, you may not add another; but you may replace the old one, on explicit permission from the previous publisher that added the old one.

The author(s) and publisher(s) of the Document do not by this License give permission to use their names for publicity for or to assert or imply endorsement of any Modified Version.

## 5. COMBINING DOCUMENTS

You may combine the Document with other documents released under this License, under the terms defined in section 4 above for modified versions, provided that you include in the combination all of the Invariant Sections of all of the original documents, unmodified, and list them all as Invariant Sections of your combined work in its license notice, and that you preserve all their Warranty Disclaimers.

The combined work need only contain one copy of this License, and multiple identical Invariant Sections may be replaced with a single copy. If there are multiple Invariant Sections with the same name but different contents, make the title of each such section unique by adding at the end of it, in parentheses, the name of the original author or publisher of that section if known, or else a unique number. Make the same adjustment to the section titles in the list of Invariant Sections in the license notice of the combined work.

In the combination, you must combine any sections Entitled "History" in the various original documents, forming one section Entitled "History"; likewise combine any sections Entitled "Acknowledgements", and any sections Entitled "Dedications". You must delete all sections Entitled "Endorsements".

## 6. COLLECTIONS OF DOCUMENTS

You may make a collection consisting of the Document and other documents released under this License, and replace the individual copies of this License in the various documents with a single copy that is included in the collection, provided that you follow the rules of this License for verbatim copying of each of the documents in all other respects.

You may extract a single document from such a collection, and distribute it individually under this License, provided you insert a copy of this License into the extracted document, and follow this License in all other respects regarding verbatim copying of that document.

## 7. AGGREGATION WITH INDEPENDENT WORKS

A compilation of the Document or its derivatives with other separate and independent documents or works, in or on a volume of a storage or distribution medium, is called an "aggregate" if the copyright resulting from the compilation is not used to limit the legal rights of the compilation's users beyond what the individual works permit. When the Document is included in an aggregate, this License does not apply to the other works in the aggregate which are not themselves derivative works of the Document.

If the Cover Text requirement of section 3 is applicable to these copies of the Document, then if the Document is less than one half of the entire aggregate, the Document's Cover Texts may be placed on covers that bracket the Document within the aggregate, or the electronic equivalent of covers if the Document is in electronic form. Otherwise they must appear on printed covers that bracket the whole aggregate.



## 8. TRANSLATION

Translation is considered a kind of modification, so you may distribute translations of the Document under the terms of section 4. Replacing Invariant Sections with translations requires special permission from their copyright holders, but you may include translations of some or all Invariant Sections in addition to the original versions of these Invariant Sections. You may include a translation of this License, and all the license notices in the Document, and any Warranty Disclaimers, provided that you also include the original English version of this License and the original versions of those notices and disclaimers. In case of a disagreement between the translation and the original version of this License or a notice or disclaimer, the original version will prevail.

If a section in the Document is Entitled "Acknowledgements", "Dedications", or "History", the requirement (section 4) to Preserve its Title (section 1) will typically require changing the actual title.

## 9. TERMINATION

You may not copy, modify, sublicense, or distribute the Document except as expressly provided for under this License. Any other attempt to copy, modify, sublicense or distribute the Document is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

## 10. FUTURE REVISIONS OF THIS LICENSE

The Free Software Foundation may publish new, revised versions of the GNU Free Documentation License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. See <http://www.gnu.org/copyleft/>.

Each version of the License is given a distinguishing version number. If the Document specifies that a particular numbered version of this License "or any later version" applies to it, you have the option of following the terms and conditions either of that specified version or of any later version that has been published (not as a draft) by the Free Software Foundation. If the Document does not specify a version number of this License, you may choose any version ever published (not as a draft) by the Free Software Foundation.

## ADDENDUM: How to use this License for your documents

To use this License in a document you have written, include a copy of the License in the document and put the following copyright and license notices just after the title page:

Copyright ©YEAR YOUR NAME. Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.2 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is included in the section entitled "GNU Free Documentation License".

If you have Invariant Sections, Front-Cover Texts and Back-Cover Texts, replace the "with...Texts." line with this:

with the Invariant Sections being LIST THEIR TITLES, with the Front-Cover Texts being LIST, and with the Back-Cover Texts being LIST.

If you have Invariant Sections without Cover Texts, or some other combination of the three, merge those two alternatives to suit the situation.

If your document contains nontrivial examples of program code, we recommend releasing these examples in parallel under your choice of free software license, such as the GNU General Public License, to permit their use in free software.

## I.2 The GNU General Public License

Version 2, June 1991

Copyright © 1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

## GNU GENERAL PUBLIC LICENSE

## TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The “Program”, below, refers to any such program or work, and a “work based on the Program” means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term “modification”.) Each licensee is addressed as “you”.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
  - a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
  - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
  - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print

such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
  - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from

the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to

decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

## NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO

YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### Appendix: How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

```
<one line to give the program's name and a brief idea of what it does.>
Copyright (C) <year> <name of author>
```

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

```
Gnomovision version 69, Copyright (C) <year> <name of author>
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type
'show w'.
This is free software, and you are welcome to redistribute it under certain
conditions; type 'show c' for details.
```



The hypothetical commands `show w` and `show c` should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w` and `show c`; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program  
‘Gnomovision’ (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989  
Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.